



# Getting Started with WinMax9 Desktop Trial (August 1, 2012)

- Click the provided link to begin downloading the Hurco WinMax desktop software
- A message box may appear asking you if you want to RUN or SAVE the file – select RUN

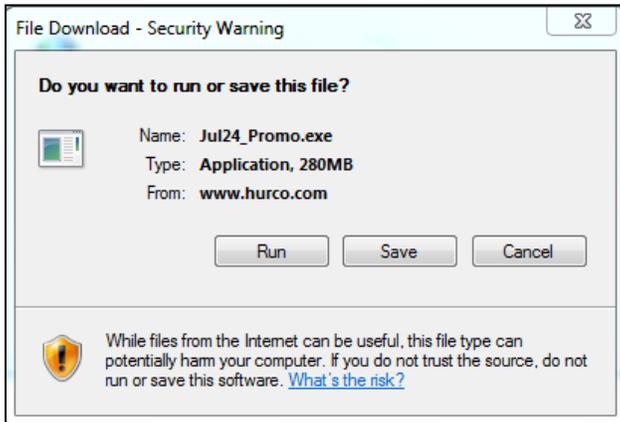

- Your software will begin to download
- Click Install

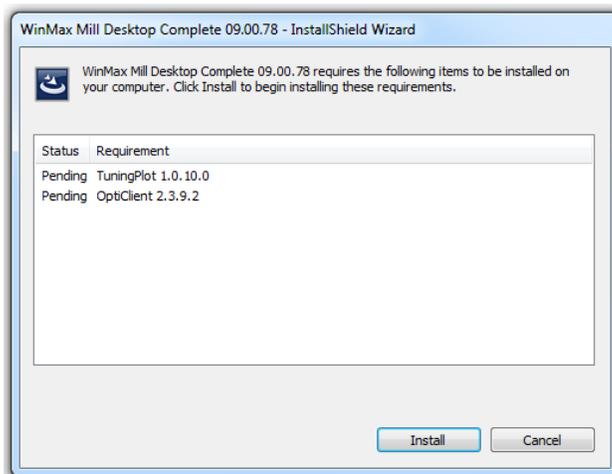


- Click Next



- Accept the terms in the license agreement and click Next



- Click Install

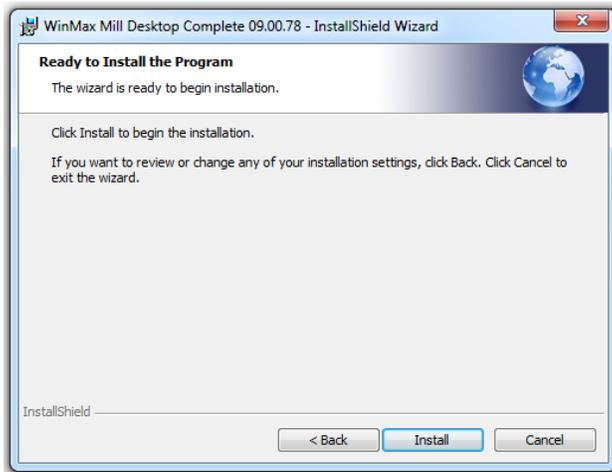


- Once the installation is complete, click Finish



- Select a language and click OK




- Reboot your computer

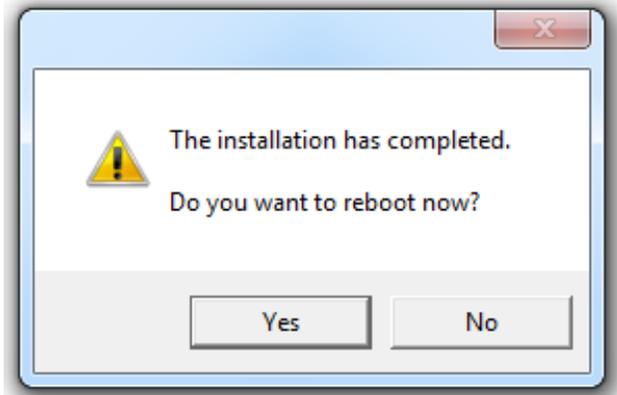


- After reboot click the OptiClient icon on the desktop



- Click Register

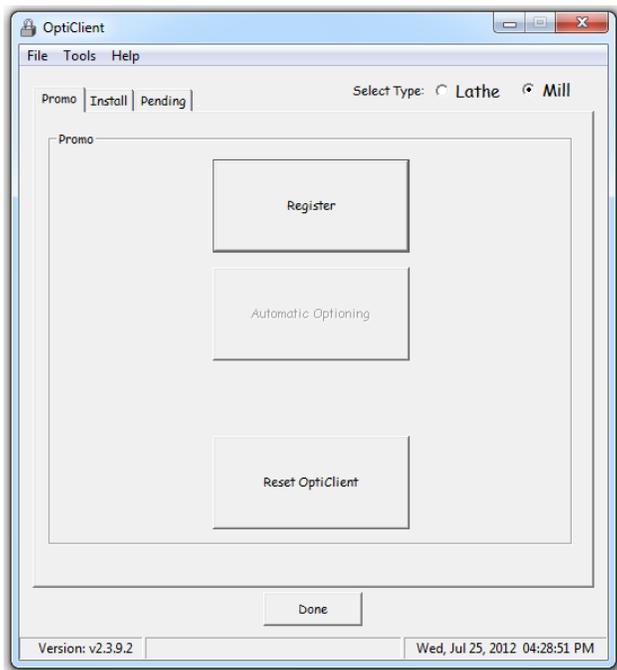

- Enter the requested information in the fields provided, and click OK

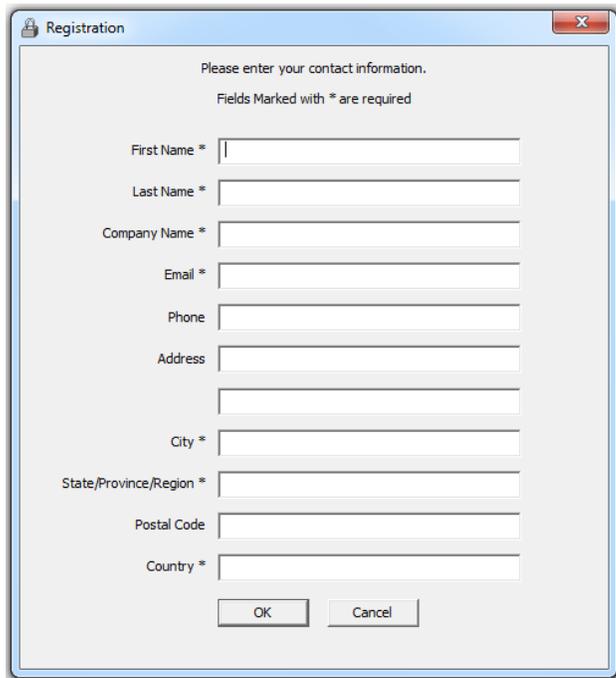

The image shows a 'Registration' dialog box with a title bar containing a lock icon and the text 'Registration'. The main content area contains the following text and fields:

Please enter your contact information.  
Fields Marked with \* are required

First Name \*

Last Name \*

Company Name \*

Email \*

Phone

Address

City \*


State/Province/Region \*

Postal Code

Country \*


At the bottom of the dialog box are two buttons: 'OK' and 'Cancel'.

- You should receive a message that registration was successful – click OK

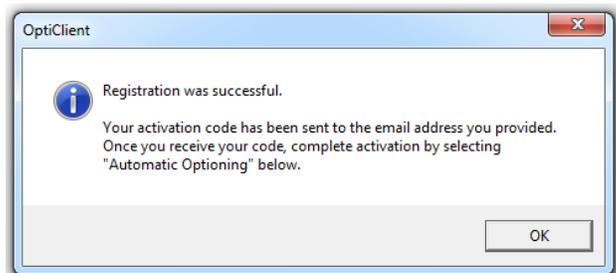


- You will receive an email at the email address provided
- Be sure your computer is connected to the internet for the remaining steps


- Select the appropriate box for Lathe or Mill

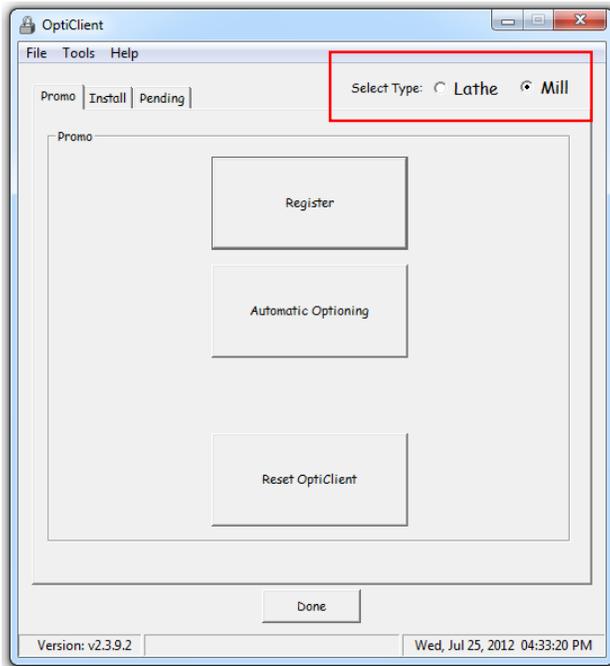


- Click the Automatic Optioning button on the OptiClient window

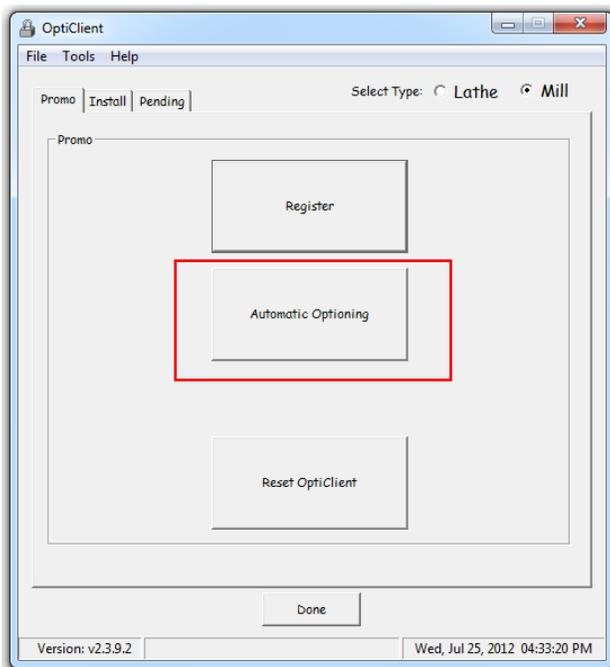

- Enter the Activation Code contained in the email received

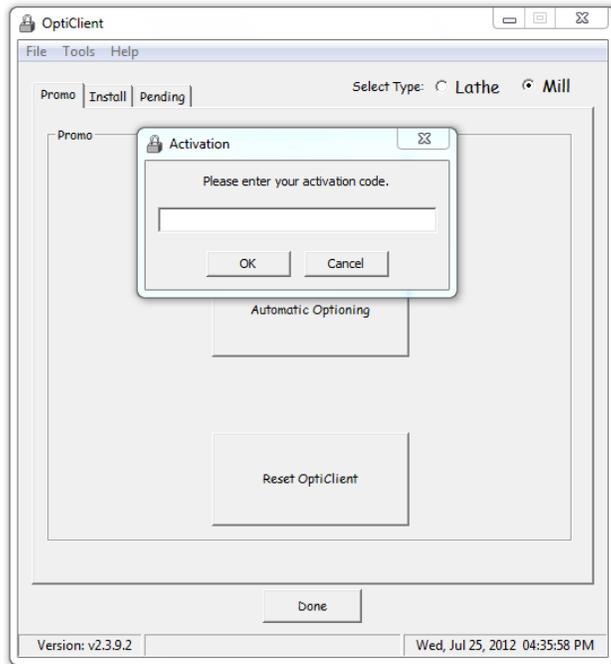

- Click YES to begin Automatic Optioning

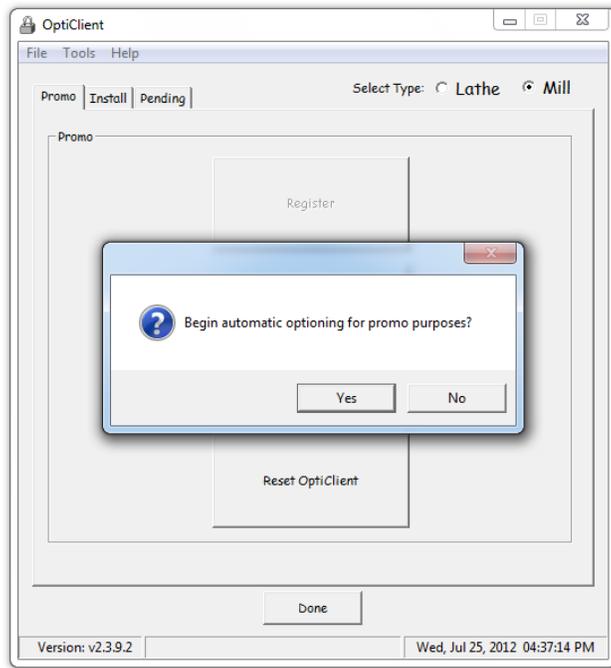

- Select Done to complete the installation process

