

# HURCO®



## WINMAX MILL OPTIONS

**Dual Screen and Max Consoles  
for Hurco Machining Centers**

The information in this document is subject to change without notice and does not represent a commitment on the part of Hurco Companies, Inc. (Hurco). The software described in this document is furnished under the License Agreement to customers. It is against the law to copy the software on any medium except as specifically allowed in the license agreement. The purchaser may make copies of the software for backup purposes. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, for any purpose without the express written permission of the Hurco machine tool owner.

Hurco Manufacturing Company reserves the right to incorporate any modification or improvements in machines and machine specifications which it considers necessary, and does not assume any obligation to make any said changes in machines or equipment previously sold.

Hurco products and services are subject to Hurco's then current prices, terms, and conditions, which are subject to change without notice.

© 2010 Hurco Companies, Inc. All rights reserved.

**Patents:** U.S. Patents B14,477,754; 5,453,933; Canadian Patent 1,102,434;  
Japanese Patents 1,649,006 and 1,375,124; other Patents pending.

Hurco, Max, Ultimax, and WinMax are Registered Trademarks of Hurco Companies, Inc.

AutoCAD, Autodesk, and DXF are registered trademarks of Autodesk, Inc.

MS-DOS, Microsoft, and Windows are registered trademarks of Microsoft Corporation.

Many of the designations used by manufacturers and sellers to distinguish their products are claimed as trademarks. Hurco has listed here all trademarks of which it is aware. For more information about Hurco products and services, contact:

**Hurco Companies, Inc.**  
One Technology Way  
P.O. Box 68180  
Indianapolis, IN 46268-0180  
Tel (317) 293-5309 (products)  
(317) 298-2635 (service)  
Fax (317) 328-2812 (service)

For Hurco subsidiary contact information, go to Hurco's Web site:  
***[www.hurco.com](http://www.hurco.com)***

# TABLE OF CONTENTS

## WinMax Mill Options

Using This Manual	xi
Sample Screens	xi
Using the Touchscreen	xiii
Printing	xiii
Icons	xiii
Using and Printing the Help	xiv
Using the On-screen Help	xiv
Printing the Help	xv
3D Mold	1 - 1
3D Mold Parameters	1 - 2
3D Mold Contour	1 - 9
3D Mold Line	1 - 10
3D Mold Arc	1 - 11
3D Mold Blend Arc	1 - 12
Roughing and Finishing Tools	1 - 13
Roughing and Finishing Passes	1 - 17
Custom Drill	2 - 1
Tool Tab	2 - 1
Entry Tab	2 - 3
Break Out Tab	2 - 4
Bottom Tab	2 - 5
Re-entry Tab	2 - 6
Out Tab	2 - 7
Retract Tab	2 - 8
DXF Option	3 - 1
DXF Overview	3 - 2
DXF Build Data Block	3 - 3
DXF Parameters	3 - 4
Zoom Window	3 - 5
Edit Drawing	3 - 5
DXF Edit Modify - Arc	3 - 8
DXF Edit Modify - Line	3 - 8
DXF Edit Modify - Point	3 - 8
DXF Layers	3 - 9
HD3 Serial Number Lettering	4 - 1
Text tab	4 - 1
Orientation tab	4 - 3
Format tab	4 - 4
Helical Plunge Option	5 - 1
Helical Plunge Milling Parameter Fields	5 - 2
Helical Plunge (Inside/Outside) for Mill Frames, Mill Circles and Ellipses	5 - 3
Helical Plunge with UltiPocket	5 - 3

Helical Plunge with Operator Specified Location . . . . .	5 - 3
Helical Plunge in the Center of a Pocket . . . . .	5 - 3
Helical Plunge with Outward Pocketing . . . . .	5 - 4
Helical Plunge of Mill Frame Inside with No Pecking and Blend Offset . . . . .	5 - 4
Helical Plunging of Mill Frame Inside with Pecking and Straight Plunge Finish Pass and Blend Offset . . . . .	5 - 5
Helical Plunge with Lines and Arcs . . . . .	5 - 7
Helical Plunge with 3-D Part Programming Option . . . . .	5 - 7
Rotary . . . . .	6 - 1
Rotary Overview . . . . .	6 - 2
Rotary Axis . . . . .	6 - 3
Tilt Axis . . . . .	6 - 3
Configuration of Hurco Machining Centers . . . . .	6 - 3
Transform Plane . . . . .	6 - 5
Rotary Part Setup . . . . .	6 - 8
Rotary Centerline . . . . .	6 - 8
Rotary Part Programming . . . . .	6 - 10
Rotary New Block . . . . .	6 - 10
Rotary Position Block . . . . .	6 - 11
Rotary Milling New Block . . . . .	6 - 12
Rotary Patterns . . . . .	6 - 12
Rotary Parameters . . . . .	6 - 13
Rotary A and Rotary A Tilt B Configuration . . . . .	6 - 14
Rotary Position . . . . .	6 - 14
Rotary Lines and Arcs . . . . .	6 - 14
Rotary Circle . . . . .	6 - 15
Rotary Frame . . . . .	6 - 16
Rotary Patterns . . . . .	6 - 16
Rotary Parameters . . . . .	6 - 18
Tilt A Rotary C Configuration . . . . .	6 - 19
Rotary Position . . . . .	6 - 19
Rotary Lines and Arcs . . . . .	6 - 19
Rotary Circle . . . . .	6 - 20
Rotary Frame . . . . .	6 - 21
Rotary Patterns . . . . .	6 - 21
Rotary Parameters . . . . .	6 - 23
Rotary B Configuration . . . . .	6 - 24
Rotary Position . . . . .	6 - 24
Rotary Milling . . . . .	6 - 24
Rotary Patterns . . . . .	6 - 24
Rotary Parameters . . . . .	6 - 26
Tilt B Rotary C Configuration . . . . .	6 - 27
Rotary Position . . . . .	6 - 27
Rotary Lines and Arcs . . . . .	6 - 27
Rotary Circle . . . . .	6 - 28
Rotary Frame . . . . .	6 - 29
Rotary Patterns . . . . .	6 - 29
Rotary Parameters . . . . .	6 - 31
Universal Rotary Configuration . . . . .	6 - 32
Rotary Position Block . . . . .	6 - 32
Rotary Lines and Arcs . . . . .	6 - 33
Rotary Circle . . . . .	6 - 34
Rotary Frame . . . . .	6 - 35
Rotary True Type Font . . . . .	6 - 35

Rotary Patterns . . . . .	6 - 37
Calculating X- and Z-Axis Positions After a Tilt-Axis Move . . . . .	6 - 41
Part Zero Calibrated at Zero Degree Vertical . . . . .	6 - 41
Part Zero Calibrated at Zero Degree Horizontal . . . . .	6 - 42
Example Programs . . . . .	6 - 43
Rotary Programming Examples . . . . .	6 - 43
Tilt-Axis Programming Examples . . . . .	6 - 51
Transform Plane Example Programs . . . . .	6 - 54
Mill Polygon . . . . .	7 - 1
Probing Option . . . . .	8 - 1
Part Probe Deflection . . . . .	8 - 2
Part Probe Working Envelope . . . . .	8 - 2
Tool Probe Setup Parameters . . . . .	8 - 2
Part Probing Parameters . . . . .	8 - 5
Tool Probe Calibration . . . . .	8 - 6
Touch Tool Probe Calibration . . . . .	8 - 7
Touch Tool and Part Probe Calibration . . . . .	8 - 8
Laser Beam Calibration . . . . .	8 - 9
Tool Probe Deflection Offset Calibration . . . . .	8 - 11
Part Probe Calibration . . . . .	8 - 12
Part Probe Deflection Offset Calibration . . . . .	8 - 13
Tool Setup Probing Softkeys . . . . .	8 - 15
Tool Setup Probing Fields . . . . .	8 - 16
Probe Part Setup . . . . .	8 - 17
Conversational Part Probing Cycles . . . . .	8 - 19
Part Setup Screen . . . . .	8 - 19
Part Zero Storage Cycle . . . . .	8 - 20
Manual Mode Part Setup Probing Cycles . . . . .	8 - 20
Manual Mode Part Skew Probing Cycles . . . . .	8 - 21
Automatic Mode . . . . .	8 - 23
Probe Part Setup Data Block . . . . .	8 - 23
Probe Part Setup Fields . . . . .	8 - 23
Automatic Part Zero Cycles . . . . .	8 - 24
Automatic Skew Cycles . . . . .	8 - 25
Probe Part Setup Data Block Execution . . . . .	8 - 26
Part Inspection Cycles . . . . .	8 - 26
Part Inspection Programming . . . . .	8 - 28
Probe Tool Monitoring . . . . .	8 - 28
Manual Tool Probing Cycles . . . . .	8 - 30
Tool Wear Detection Data Block . . . . .	8 - 32
Probing Cycles . . . . .	8 - 33
Part Setup Probing Cycles . . . . .	8 - 33
Part Skew Probing Cycles . . . . .	8 - 34
Edge Cycle . . . . .	8 - 35
Hole or Circle Pocket Cycle . . . . .	8 - 38
Cylinder Cycle . . . . .	8 - 40
Rectangular Pocket Inside Cycle . . . . .	8 - 42
Rectangular Solid Outside Cycle . . . . .	8 - 44
Plane Intersection (Non-Rectangular Corner) Cycle . . . . .	8 - 46
Edge Skew Cycle . . . . .	8 - 48
Hole or Circle Pocket Skew Cycle . . . . .	8 - 49
Cylinder Skew Cycle . . . . .	8 - 50
Rectangular Pocket Skew Cycle . . . . .	8 - 51

Rectangular Solid Skew Cycle . . . . .	8 - 52
Mill Slot . . . . .	9 - 1
Start tab . . . . .	9 - 2
Geometry tab . . . . .	9 - 3
Caps tab . . . . .	9 - 4
Thread Mill . . . . .	10 - 1
Tool Change Optimization . . . . .	11 - 1
Tool Fixture (TPS) Option . . . . .	12 - 1
Tool Fixture Overview . . . . .	12 - 2
Automatic Tool Removal Using TPS . . . . .	12 - 3
Automatic Tool Change Using TPS . . . . .	12 - 4
Bypass TPS in an Automatic Tool Change . . . . .	12 - 5
UltiMotion . . . . .	13 - 1
UltiNet . . . . .	14 - 1
UltiNet FTP Client . . . . .	14 - 2
UltiNet FTP Server . . . . .	14 - 2
FTP Server Settings . . . . .	14 - 3
UltiPockets Option . . . . .	15 - 1
Pocket Boundary . . . . .	15 - 2
Spiral Outward - No Islands . . . . .	15 - 2
Spiral Inward . . . . .	15 - 2
Programming Islands . . . . .	15 - 2
Mill Contours . . . . .	15 - 3
Mill Frame . . . . .	15 - 3
Mill Circle . . . . .	15 - 3
Pattern . . . . .	15 - 3
Helical Plunge with UltiPocket Option . . . . .	15 - 4
Helical Plunge Using Operator Specify Pocket Start . . . . .	15 - 5
Record of Changes . . . . .	1
Index . . . . .	1

# LIST OF FIGURES

Figure 1–1. Increased Radius . . . . .	1 - 3
Figure 1–2. Zero Radius . . . . .	1 - 3
Figure 1–3. Convex Contour Below the Part Surface . . . . .	1 - 4
Figure 1–4. Counterclockwise and Clockwise Motion . . . . .	1 - 4
Figure 1–5. Y Start and Y End Fields (XZ Translated in Y) . . . . .	1 - 5
Figure 1–6. Bidirectional field . . . . .	1 - 6
Figure 1–7. Step Size . . . . .	1 - 7
Figure 1–8. Peck Depth . . . . .	1 - 7
Figure 1–9. Stock Allowance . . . . .	1 - 8
Figure 1–10. Flat End Mill on a Contour . . . . .	1- 13
Figure 1–11. Ball-Nosed End Mill on a Contour . . . . .	1- 14
Figure 1–12. Flat End Mill . . . . .	1- 15
Figure 1–13. Ball-Nosed End Mill . . . . .	1- 16
Figure 1–14. Roughing and Finishing Passes . . . . .	1- 17
Figure 2–1. Custom Drill Tool tab . . . . .	2 - 1
Figure 2–2. Custom Drill Entry tab . . . . .	2 - 3
Figure 2–3. Custom Drill Break Out tab . . . . .	2 - 4
Figure 2–4. Custom Drill Bottom tab . . . . .	2 - 5
Figure 2–5. Custom Drill Re-entry tab . . . . .	2 - 6
Figure 2–6. Custom Drill Out tab . . . . .	2 - 7
Figure 2–7. Custom Drill Retract tab . . . . .	2 - 8
Figure 3–1. Extended Lines and Arcs . . . . .	3 - 6
Figure 3–2. Joined Lines and Arcs . . . . .	3 - 7
Figure 4–1. HD3 Serial Number Lettering Text tab . . . . .	4 - 2
Figure 4–2. X Reference and Y Reference locations . . . . .	4 - 4
Figure 5–1. Helical Plunge with No Pecking and Blend Offset (Isometric View) . . . . .	5 - 4
Figure 5–2. First Peck (Isometric View) . . . . .	5 - 5
Figure 5–3. Second Peck (Isometric View) . . . . .	5 - 6
Figure 5–4. Finish Pass (Isometric View) . . . . .	5 - 6
Figure 5–5. Helical Plunging with Lines/Arcs (Isometric View) . . . . .	5 - 7
Figure 6–1. Axes Movement . . . . .	6 - 2
Figure 6–2. Rotary Centerline . . . . .	6 - 9
Figure 6–3. Rotary Centerline . . . . .	6 - 9
Figure 6–4. Y Mapping . . . . .	6- 36
Figure 6–5. Vertical Tilt-Axis Example . . . . .	6- 41
Figure 6–6. Horizontal Tilt-Axis Example . . . . .	6- 42
Figure 6–7. Rotary Mill Frame Part Drawing (cylinder shown for reference) . . . . .	6- 43
Figure 6–8. Threading Part Drawing (cylinder shown for reference) . . . . .	6- 44
Figure 6–9. Single Hole Part Drawing (cylinder shown for reference) . . . . .	6- 46
Figure 6–10. Rotary Pattern Loop Part Drawing (cylinder shown for reference) . . . . .	6- 47
Figure 6–11. 4-axis Part Created Using Transform Plane . . . . .	6- 48
Figure 6–12. Bolt Holes on Tilted Cylindrical Part . . . . .	6- 51
Figure 6–13. Cylindrical Part Tilted 45° Between Holes . . . . .	6- 52

Figure 6–14. Same Part Zero for Transformed Plane, VMX42 SR Machine . . . . .	6- 54
Figure 6–15. Part Created on VMX42SR Machine, Using Transform Plane . . . . .	6- 56
Figure 7–1. Mill Polygon screen . . . . .	7 - 1
Figure 8–1. Laser Tool Calibration Calculations . . . . .	8 - 9
Figure 8–2. Laser Tool Calibration Cycle . . . . .	8- 10
Figure 8–3. Skewed work piece with Preset Y offset . . . . .	8- 22
Figure 8–4. Edge Cycle probing in +X direction—Top View . . . . .	8- 35
Figure 8–5. Edge Cycle probing in +Y direction—Top View . . . . .	8- 35
Figure 8–6. Edge Cycle probing in +Z direction—Side View . . . . .	8- 36
Figure 8–7. Edge Cycle probing in X direction—Side View . . . . .	8- 36
Figure 8–8. Part Probe movement during a Hole or CirclePocket cycle . . . . .	8- 38
Figure 8–9. Part Probe movement during Cylinder cycle . . . . .	8- 40
Figure 8–10. Part Probe movement during Rectangular Pocket cycle . . . . .	8- 42
Figure 8–11. Part Probe movement during Rectangular Solid cycle . . . . .	8- 44
Figure 8–12. Part Probe movement with Solid or Pocket geometry . . . . .	8- 46
Figure 9–1. Line Slot rotated 90° . . . . .	9 - 1
Figure 9–2. Mill Slot Start tab . . . . .	9 - 2
Figure 9–3. Mill Slot Geometry tab for a Line slot . . . . .	9 - 3
Figure 9–4. Mill Slot Geometry tab for an Arc slot . . . . .	9 - 3
Figure 9–5. Mill Slot Caps tab . . . . .	9 - 4
Figure 9–6. Append Arc Start Cap and Line End Cap . . . . .	9 - 5
Figure 9–7. Include Arc Start Cap and Line End Cap . . . . .	9 - 5
Figure 10–1. Tool movement when Thread Direction is down . . . . .	10 - 1
Figure 10–2. Tool movement when Thread Direction is up . . . . .	10 - 2
Figure 10–3. Mill Thread screen . . . . .	10 - 2
Figure 11–1. Tool Change Optimization On block . . . . .	11 - 2
Figure 11–2. Placement of Tool Change Optimization blocks . . . . .	11 - 3
Figure 11–3. Tool Change Review Screen . . . . .	11 - 3
Figure 12–1. Tool Fixture . . . . .	12 - 2



# LIST OF TABLES

Table 6–1.	Rotary Configurations Available on Hurco Machines . . . . .	6 - 3
Table 6–1.	Rotary Mill Frame Part Program Summary . . . . .	6 - 44
Table 6–2.	Threading Part Program Summary . . . . .	6 - 45
Table 6–3.	Hole Part Program Summary . . . . .	6 - 46
Table 6–4.	Rotary Pattern Loop Part Program Summary . . . . .	6 - 47
Table 6–5.	4-Axis Transform Plane Program Summary . . . . .	6 - 50
Table 6–6.	Bolt Holes on Tilted Cylindrical Part Program Summary . . . . .	6 - 52
Table 6–7.	Cylindrical Part Tilted 45° Between Holes Part Program Summary . . . . .	6 - 53
Table 6–8.	Same Part Zero for Transformed Plane Part Program Summary, VMX42SR Machine . . . . .	6 - 55
Table 8–1.	Part Zero Storage Cycle . . . . .	8 - 20
Table 8–2.	Automatic Part Zero Cycles . . . . .	8 - 24
Table 8–3.	Automatic Skew Cycles . . . . .	8 - 25
Table 8–4.	Part Inspection Fields . . . . .	8 - 27
Table 8–5.	Part Setup Probing Cycles . . . . .	8 - 33
Table 8–6.	Part Skew Probing Cycles . . . . .	8 - 34




# USING THIS MANUAL

This documentation uses several conventions to explain the safety features and emphasize key concepts. These conventions are described in this section.

Additional information is available on the machine's Documentation CD.

## Sample Screens

Sample screens in this documentation were taken from a WinMax Mill single-screen control. All screens are subject to change. The screens on your system may vary slightly. The sample screen here illustrates softkeys and includes a software version.

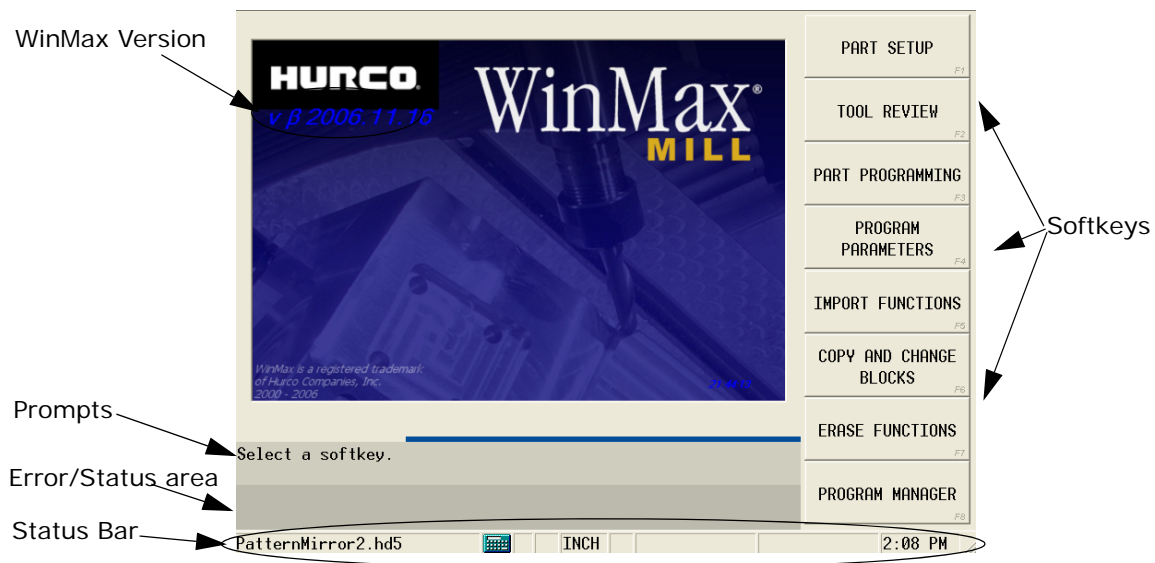

## Softkeys

Softkeys are located on the side of the screen. You can set the softkeys to appear on either the right or left side of the screen. Refer to the *Getting Started with WinMax Mill* for information about making this selection. Softkeys may change upon field entries or other softkey selection. References to softkeys in the documentation appear with the softkey's corresponding F-key. For example, the Part Setup softkey from the Input screen above is referenced as the PART SETUP F1 softkey.

## Screen Areas

The screens are divided into the following areas, in addition to the row of softkeys:

### Data Entry

The data entry area is located on the opposite side of the screen from the softkeys.

Available softkeys may change even when the text and data entry area does not.

Fields in the data entry area display or receive information. Refer to *Using the Touchscreen*, on page [xiii](#) for information on entering information in fields.

## Prompts and Error/Status Area

The bottom portion of the screen is reserved for prompts, program status and error messages.

Prompts provide help on data entry selections based on the field with the blinking cursor.

Errors and status messages occur anytime the status or error occurs. They are not based on the field with the blinking cursor. These messages provide machine information to the operator.

Error messages may also stop and/or prevent machine operation until the cause of the error is corrected.

## Status Bar

The status bar contains

- The name of the open, selected program.
- A calculator icon—select the icon to display a working, on-screen calculator.
- Units of measure (Inch or Millimeters)—select the units of measure in the status bar to toggle between Inch and Metric.
- Programming mode (R for Radius; D for Diameter)—select the programming mode in the status bar to toggle between Radius and Diameter.
- A yellow icon—indicates the feed hold is on when visible.
- A red icon—indicates the Emergency Stop button has been pressed when visible.
- A keyboard icon—select the icon to display a working on-screen keyboard.
- The current time.

When viewed on a single-screen console, all icons appear in the same status bar; when viewed on a dual-screen console, the program name and calculator icon appear on the left screen status bar, and the unit of measure, keyboard icon and time appear on the right screen status bar.

## Console Buttons and Keys

References to console buttons and keys appear in bold text throughout the documentation. For example, the Start Cycle button appears as the **Start Cycle** button and the Manual key appears as the **Manual** console key in text.

Refer to the *Getting Started with Your WinMax Mill* for information about console buttons and keys, in addition to other information about using softkeys and the pop-up text entry window.

## Using the Touchscreen

The console has a touchscreen for entering programming data. To make a selection, tap the screen on a softkey, field, or drop-down list using the stylus attached to the side of the console or another suitable pointing device.

## Printing

To print part or all of this manual from the CD, select **File/Print**. Be sure to review the **Print Range** selections and make the appropriate choice for pages. Select **Properties/Paper/Quality** and adjust the **Tray Selection/Paper Source** if necessary.

Printing to a Post Script printer provides the best results.

## Icons

This manual may contain the following icons:

### Caution/Warning



The operator may be injured and the machine severely damaged if the described procedure is not followed.

### Hints and Tricks



Useful suggestions that show creative uses of the WinMax features.

### Important



Ensures proper operation of the machine and control.

### Troubleshooting



Steps that can be taken to solve potential problems.

### Where can we go from here?



Lists several possible options the operator can take.

### Table of Contents



To assist with onscreen viewing, this icon is located on the cover page. Click the icon to access the Table of Contents (TOC).

You can also access many of the same TOC entries from the Adobe Reader bookmarks located on the left side of the PDF page.

## USING AND PRINTING THE HELP

Hurco provides documentation for using WinMax software on a control or desktop in two formats: on-screen Help and PDF. The information contained in both formats is identical.

On-screen Help contains information about the current screen. If Help is not available for a screen, a Welcome screen appears with access to the Table of Contents, Index, or Search functions.

- To view the on-screen Help directly on a Hurco control, select either the Help console button or the F console key followed by the 1 key (F1).
- To view the on-screen Help on the desktop software, select either the Help icon in the menu bar or the F1 key on your keyboard.

PDF files are available on the hard drive. These files can be copied from the hard drive to a USB memory device and transferred to a PC for viewing and printing.

### Using the On-screen Help

On-screen Help provides information about using WinMax. The Help is context-sensitive to the screen level. Press the console Help button to display the Help topic for the current screen. The following list describes Help functions:

- Buttons in the upper left-hand corner of the Help screen are used to move through Help topics and print screens.
  - Use the **Hide** button to hide the navigation pane.
  - Use the **Back** button to return to the previous Help screen.
  - Use the **Print** button to print the current displayed Help topic, if a printer is attached and configured. See [Printing the Help](#) for more information about printing.
- Use the arrow buttons to move between pages within a Help topic and to move through topics.
- Use the **Contents** tab for a list of information sorted by subject:
  1. Select the "+" to expand the topic and view sub-topics.
  2. Select the topic to display it.
- Use the **Index** tab to show the Help index:
  1. Quickly scroll to an index topic by typing the topic in the box at the top of the index.
  2. Select a topic and the Display button to view the topic.
- Use the **Search** tab to search the Help for a word or phrase:
  1. Type the search word(s) into the text box at the top of the pane.

2. Select the List Topics button. A list of topics that contain the search word(s) is displayed.
  3. Select a topic and the Display button to view that topic.
- Use the **Favorites** tab to save Help topics for quick access:
    1. Select the Add button at the bottom of the pane to add the current topic.
    2. Select a topic from the Favorites list, and select the Display button to view it.
      - Select a topic from the Favorites list, and select the Remove button to remove it from the list.

## Printing the Help

The WinMax On-screen Help is also provided in PDF format for easy printing. The information contained in the PDF files is identical to the on-screen Help. The PDF files may be copied to a floppy disk or USB memory device to be transferred to a PC for printing. Here are the steps to access the PDF files:

1. From the Input screen, select the PROGRAM MANAGER *F8* softkey.
2. Select the DISK OPERATIONS *F7* softkey.
3. In the left-hand pane, navigate through the folders:
  - For WinMax Mill on a machine, the path is D:\Hurco\Winmax Mill\hlp.
  - For WinMax Desktop on a PC, the path is C:\Program Files\Winmax Mill\hlp.

The PDF files will appear in the right-hand pane.



The SHOW ALL FILE TYPES field in User Interface Settings must be set to YES (default is NO) in order to see the PDF files in the directory. Access the SHOW ALL FILE TYPES field in Auxiliary Mode, Utilities/ User Preferences/ User Interface Settings.

4. Highlight the PDF file(s) in the right-hand pane, and select the COPY *F2* softkey.
5. Ensure that your media is loaded (either a floppy disk in the disk drive or a USB memory device in the USB port), and navigate to the proper location in the left-hand pane of the DISK OPERATIONS screen (either the floppy drive A: or the USB port E:). Highlight the desired location.
6. Place the cursor in the right-hand pane and select the PASTE *F3* softkey to paste the PDF file(s) to the desired location.

You may now remove your media and load the PDF file(s) onto a PC for printing.





---

# 3D MOLD

These topics are discussed in this section:

3D Mold Parameters . . . . .	1 - 2
3D Mold Contour . . . . .	1 - 9
3D Mold Line . . . . .	1 - 10
3D Mold Arc . . . . .	1 - 11
3D Mold Blend Arc . . . . .	1 - 12
Roughing and Finishing Tools . . . . .	1 - 13
Roughing and Finishing Passes . . . . .	1 - 17

## 3D Mold Parameters

To create a three-dimensional (3D) part, define a two-dimensional (2D) profile in either the XY or XZ plane. Repeat the 2D profile along a straight line (translate) or repeat it around a centerline (revolve) to produce the final 3D shape. Choose Draw 2D Contour to draw the original 2D contour that will be manipulated using the 3D operations.

To program a 3D Mold data block from the Part Programming screen, select the **Insert Block Before** softkey then select the **Milling** Softkey that appears. On the **Milling** softkeys, select **3D Mold**.

Combine of any of the three types into composite contours to machine complex parts:


- **Y Revolved about X**—Use a 2D contour programmed in the XY plane and revolve it about a centerline on the X axis to produce the finished 3D contour.
- **XZ Revolved about Z**—Use a 2D contour programmed in the XZ plane and revolve it about a centerline on the Z axis to produce the finished 3D contour.
- **XZ Translated in Y**—Use a 2D contour programmed in the XZ plane and translate it in the Y axis.

Access the 3D Mold Contour screens by selecting the Edit 3D Mold Contour softkey. This softkey is not available when the cursor is in the Block field. When you select the Edit 3D Mold Contour softkey, it changes to Edit 3D Mold Parameters so you can return to the parameters screen. The Edit 3D Mold Parameters softkey is not available when the cursor is in either the Block or Segment field.


The 3D Mold Parameter fields are defined as follows:

- **Block**—Identifies the block number for this operation. The system determines the number by the position of this data block in the program.
- **Tool**—Identifies the tool number for this data block and enters that tool's diameter and type on this screen.
- **Finish Tool**—Identifies the finish tool number for this data block and enters that tool's diameter and type on this screen.
- **Type**— Defines the type of 3D operation. There are four drop-down list box and softkey choices when the cursor is on the Type field.
  - **Draw 2D Contour**
  - **Y Revolved about X**—Use a 2D contour programmed in the XY plane and revolve it about a centerline on the X axis to produce the finished 3D contour.
  - **XZ Revolved about Z**—Use a 2D contour programmed in the XZ plane and revolve it about a centerline on the Z axis to produce the finished 3D contour.
  - **XZ Translated in Y**—Use a 2D contour programmed in the XZ plane and translate it in the Y axis.

- **Centerline Y** and **Centerline Z**—Determine the coordinate points of the center of the part on the Y and Z axes.

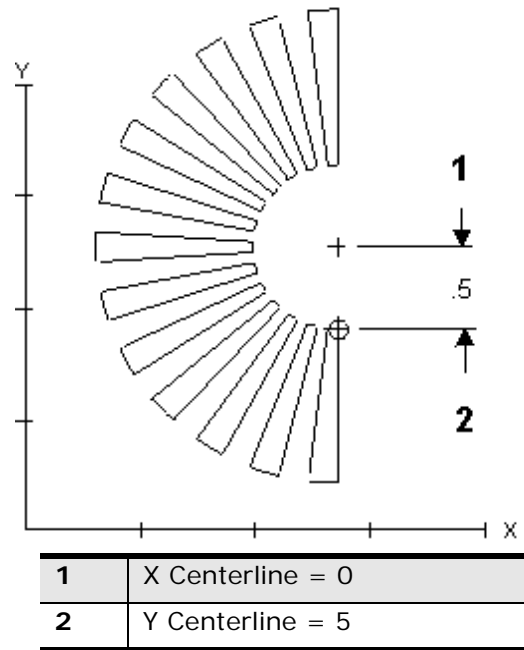

**Figure 1-1. Increased Radius**

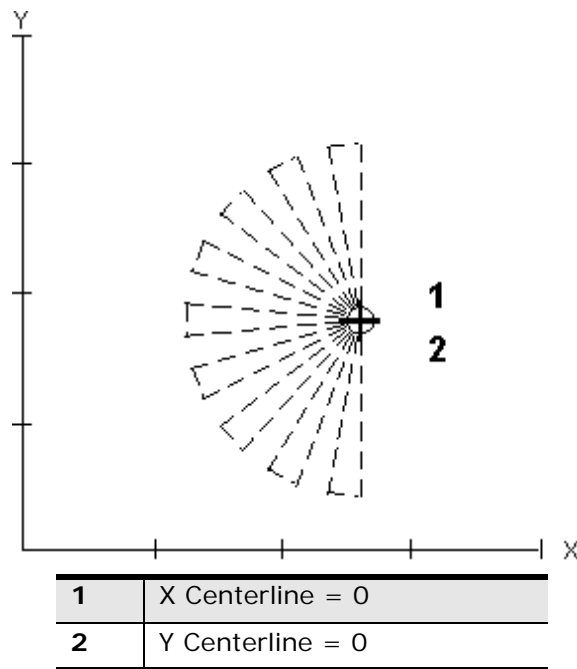


**Figure 1-2. Zero Radius**

The Centerline Z field determines the Z axis position of the X axis centerline. Changing the Z axis centerline moves the X axis centerline above or below the part surface. This alters the depth of the 3D contour. The Z axis centerline is used only for XY Revolved

About X.


To machine the 3D contour below the part surface, enter a negative value in the Centerline Z field. This value is equal to the radius of the part measured from the Y centerline.

Here is a convex contour programmed below the part surface:

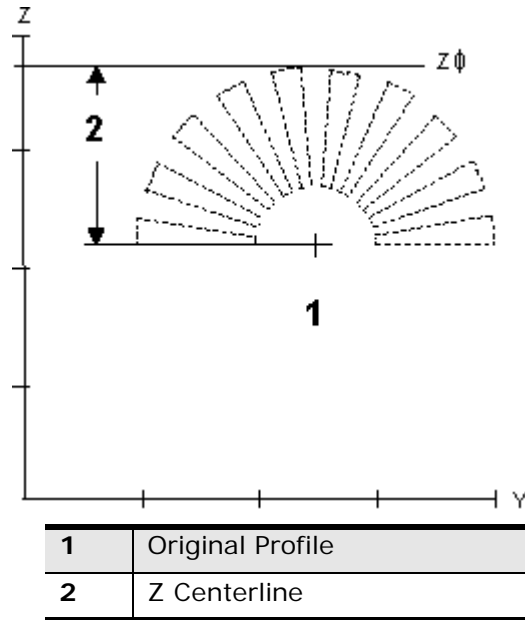


**Figure 1–3. Convex Contour Below the Part Surface**

- **Start Angle** and **End Angle**—Determine the starting and ending values of the angle of revolution for XY Revolved About X and XZ Revolved about Z. When determining Start and End Angles, remember that 0° is where the contour begins and is located at the 3 o'clock position.
  - The difference between the start and end angle determines the degrees that the 2D profile revolves about the axis.
  - Start and End angles can be entered as positive or negative numbers. CCW motion is programmed as a positive number; CW motion is programmed as a negative number:

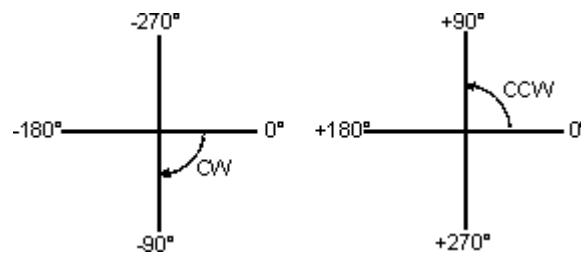

**Figure 1–4. Counterclockwise and Clockwise Motion**


- **Y Start** and **Y End**—Determine the length of the 3D contour along the Y axis for XZ Translated in Y, as shown in the example below:

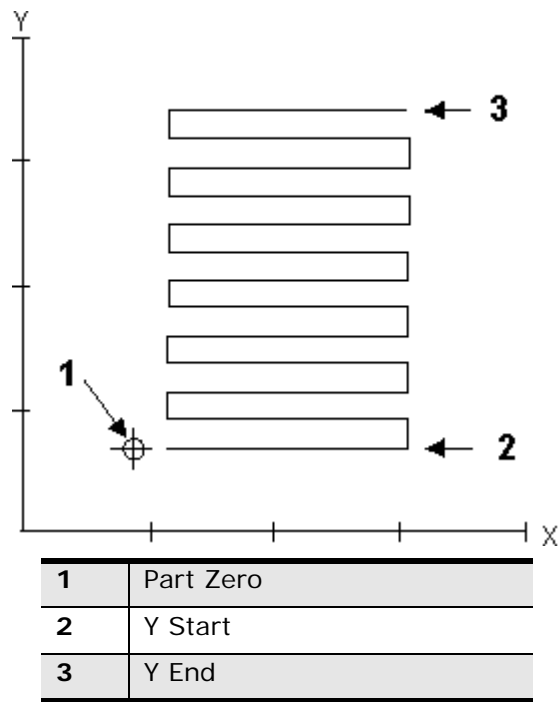

*Figure 1-5. Y Start and Y End Fields (XZ Translated in Y)*


- **Cut Direction**—Controls the tool path while the 3D contour is machined. There are two choices for the Cut Direction field:
  - **With Contour** - machines the 3D contour using the tool path originally programmed.
  - **Normal** - tool path follows the part at right angles to the original two-dimensional profile.

- **Bidirectional**—Determines the direction of the tool path while the part is being machined. There are two choices for the Bidirectional field:
  - **No** - causes the tool to machine in one direction, based on the direction of the contour definition.
  - **Yes** - causes the tool to machine in both directions without retracting the tool until the entire contour is complete.

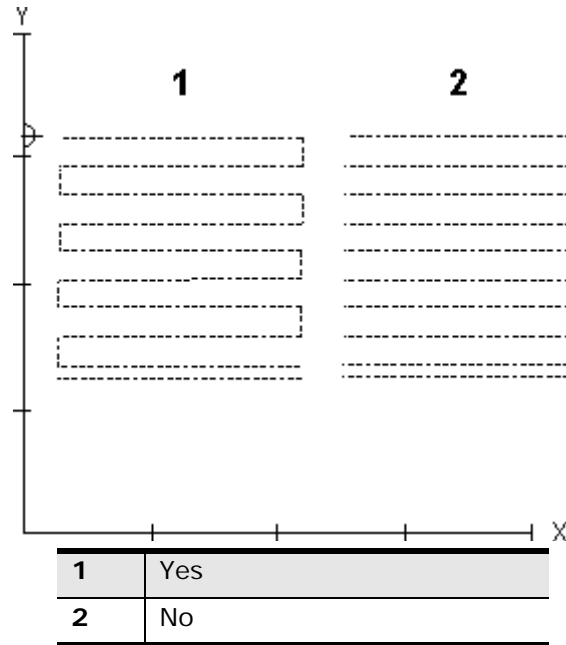


**Figure 1–6. Bidirectional field**

- **Step Size**—Determines the distance between cutter passes. Ultimately, this dimension determines the surface finish of the part. A larger step size machines faster but leaves a rougher surface. A smaller step size machines more slowly but leaves a smoother surface. Step size significantly affects the drawing speed of the graphics screen.

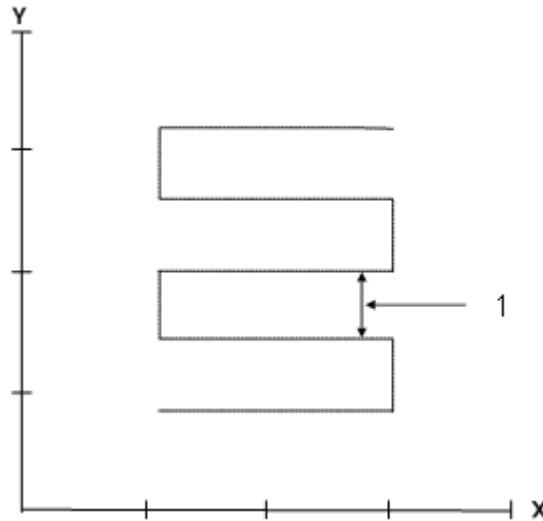


**Figure 1-7. Step Size**

- **Finish Step Size**—Determines the distance between cutter passes for the finish tool.
- **Min Z**—Limits the negative Z motion to the Centerline Z value when set to Yes.
- **Z Start**—Identifies the point above the part where the spindle begins to rotate.
- **Peck Depth**—Identifies the distance the tool will drill down into the part before stopping to clear out or break the chips. If used, this parameter is not usually larger than the diameter of the tool.

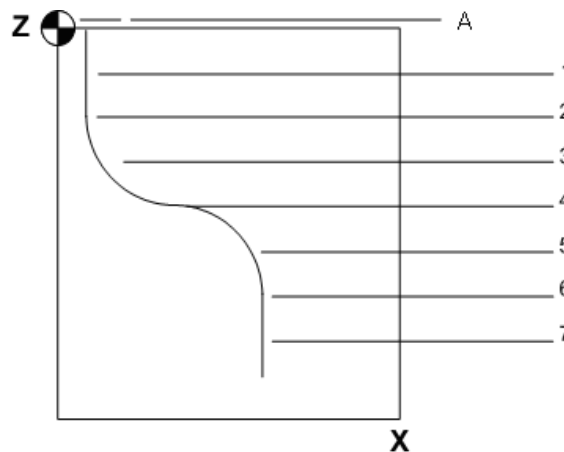

**Figure 1-8. Peck Depth**

- **Plunge Feed**—Identifies the rate at which the tool initially enters the part.
- **Mill Feed**—Identifies the X-Y feedrate. The value initially displayed has been calculated by the control and can be retained or changed to a different value.
- **Speed (RPM)**—Identifies the spindle speed for the tool, calculated in Tool Setup. Entering a value here overrides the Tool Setup value for this data block.
- **Stock Allowance**—Leaves or removes extra material on the surface of the 3D contour. Stock Allowance can be used for roughing, undersizing, or oversizing a surface. A Ball-Nosed End Mill must be used to maintain a uniform stock allowance dimension over the complete 3D contour. A positive stock allowance value programmed using a Flat End Mill leaves sufficient material for a finishing pass.

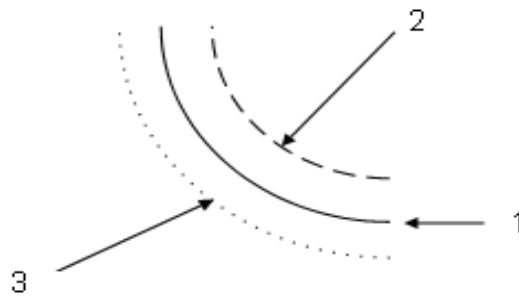

1	Print Dimension
2	+ Stock Allowance
3	- Stock Allowance

**Figure 1–9. Stock Allowance**

- **Tool Diameter**—Contains the tool diameter entered for the tool during Tool Setup.
- **Tool Type**—Contains the tool type entered for the tool during Tool Setup.
- **Finish Diameter**—Contains the tool diameter entered for the finish tool during Tool Setup.
- **Finish Tool Type**—Contains the tool type entered for the finish tool during Tool Setup.



## 3D Mold Contour

Used in conjunction with 3D Mold Parameters to mill a 3D Mold, program the part surfaces as a 2D profile in either the XY or XZ plane.

The Start Segment number is always 0. Use segments to program lines and arcs which create a contour. Repeat the 2D profile along a straight line (translate) or repeat it around a centerline (revolve) to produce the final 3D shape. The Contour End block marks the end of the programmed contour.

Select the Edit 3D Mold Parameters softkey to access the parameters screen. The **Edit 3D Mold Parameters** softkey is not available when the cursor is in either the Block or Segment field. When you select the **Edit 3D Mold Parameters** softkey, it changes to **Edit 3D Mold Contour**. This softkey is not available when the cursor is in the Block field.

The 3D Mold Start Segment fields are defined as follows:

- **Block**—Identifies the block number for the 3D Mold data block. The system determines the number by the position of this data block in the program.
- **Segment**—Identifies the segment number for this operation.
- **X Start** and **Y Start** or **X Start** and **Z Start**— Identify the starting location for the X and Y or X and Z coordinates. The X and Y or X and Z coordinates are carried forward to the next Segment.

Continue programming the contour by using the Page Down key or by selecting the **Next Segment** softkey.

Line, Arc, and Blend Arc softkey choices appear.



WinMax allows you to paste a contour into a 3D Mold Block on the Program Review screen. This allows you to use the same segments for a Mill Contour Block and a 3D Mold Block without entering each segment twice.

- To copy a contour, select the contour that you wish to copy on the Program Review Screen and use the MULTIPLE BLOCK FUNCTIONS softkey to access the COPY softkey.
- To paste a contour, select the 3D Mold Block that you wish to paste the contour into on the Program Review screen and use the MULTIPLE BLOCK FUNCTIONS softkey to access the PASTE softkey.

## 3D Mold Line

Some 3D Mold Line fields are automatically calculated with the Auto-Calc feature.

The 3D Mold Line fields are defined as follows:

- **Block**—Identifies the block number for the 3D Mold data block. The system determines the number by the position of this data block in the program.
- **Segment**—Identifies the segment number for this operation. The system determines the number by the position of this segment in the program.

The following fields change depending on the type of contour selected:

- **X End** and **Y End** or **X End** and **Z End**—Identify the X End and Y End or X End and Z End coordinates. If two End coordinates are entered (X/Y or X/Z), the control automatically calculates the XY (or XZ) Length and the XY (or XZ) Angle fields. Use the **Store Calculated Value** softkey to retain the calculated value.
- **XY Length** or **XZ Length**—Identify the XY Length or XZ Length. If two End coordinates are entered (X End and Y End or X End and Z End), the control automatically calculates the XY Length and the XY Angle fields. Use the **Store Calculated Value** softkey to retain the calculated value.
- **XY Angle** or **XZ Angle**—Identify the XY Angle or XZ Angle or the angle of the line segment (from the start point to the end point), measured counterclockwise from the 3 o'clock position. If two End coordinates are entered (X End and Y End or X End and Z End), the control automatically calculates the XY Length and the XY Angle fields. Use the **Store Calculated Value** softkey to retain the calculated value.
- **X Start** and **Y Start** or **X Start** and **Z Start**—Define the starting points of this segment. The Start fields are carried forward from the previous segment's end points.

Continue programming the contour by using the PAGE DOWN key or by selecting the **Next Segment** softkey.

Line, Arc, and Blend Arc softkey choices appear.

## 3D Mold Arc

Some 3D Mold Arc fields are automatically calculated with the Auto-Calc feature.

The 3D Mold Arc fields are defined as follows:

- **Block**—Identifies the block number for the 3D Mold data block. The system determines the number by the position of this data block in the program.
- **Segment**—Identifies the segment number for this operation. The system determines the number by the position of this segment in the program.
- **Direction**—Determines the direction of the arc from the start point (clockwise or counterclockwise).

The following fields change depending on the type of contour selected:

- **X End** and **Y End** or **X End** and **Z End**—Identify data coordinates (values for X End and Y End or X End and Z End) used in the automatic calculations. Use the **Store Calculated Value** softkey to retain the calculated value.
- **X Center** and **Y Center** or **X Center** and **Z Center**—Identify data coordinates (values for X Center and Y Center or X Center and Z Center) used in the automatic calculations. Use the **Store Calculated Value** softkey to retain the calculated value.
- **Radius**—Identifies the value for the Radius. The radius is used in the automatic calculations. Use the **Store Calculated Value** softkey to retain the calculated value.
- **Sweep Angle**—identifies the angular distance in degrees from the start point of the arc to the end point. The range is  $-360^{\circ}$  to  $360^{\circ}$ . This field is available when the Arc Sweep Angle option is installed.
- **X Start** and **Y Start** or **X Start** and **Z Start**—Define the starting points of this segment. The Start fields are carried forward from the previous segment's end points.

Continue programming the contour by using the PAGE DOWN key or by selecting the **Next Segment** softkey.

Line, Arc, and Blend Arc softkey choices appear.

## 3D Mold Blend Arc

A blend arc is an arc that joins two other segments and is tangent to both. Use a blend arc to join two line segments, to join a line segment and an arc segment, or to join two arc segments. The segments to be joined must have a theoretical point of intersection.

If the only information known about an arc is its radius, it is easier to program it as a blend arc if the segments intersect.

The 3D Mold Blend Arc fields are defined as follows:

- **Block**—Identifies the block number for this operation. The system determines the number by the position of this data block in the program.
- **Segment**—Identifies the segment number for this operation. The system determines the number by the position of this segment in the contour.
- **Radius**—Identifies the radius of the arc.
- **Direction**—Identifies the direction of the arc from the start point (clockwise or counterclockwise).

The following fields change depending on the type of contour selected:


- **X Start** and **Y Start** or **X Start** and **Z Start**—Define the starting points of this segment. The Start fields are carried forward from the previous segment's end points.
- **X End** and **Y End** or **X End** and **Z End**—Identify the End coordinates.
- **X Center** and **Y Center** or **X Center** and **Z Center**—Identify the X Center and Y Center or X Center and Z Center coordinates used to define the circular path of the blend arc.

Continue programming the contour by using the PAGE DOWN key or by selecting the **Next Segment** softkey.

Line, Arc, and Blend Arc softkey choices appear.


## Roughing and Finishing Tools

In many applications, a Flat End Mill can be used for roughing, followed by a Ball-Nosed End Mill, which is required for cutting the finished surface.

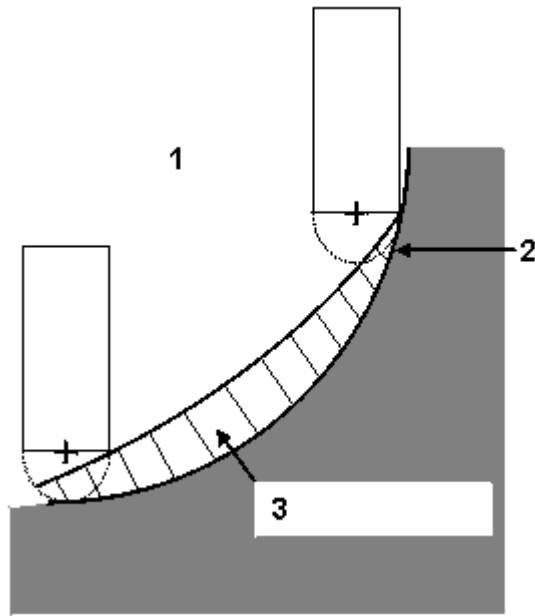

1	First Data Block Using a Flat End Mill
2	Programmed Contour
3	Material to be Removed by Ball-Nosed End Mill


**Figure 1–10. Flat End Mill on a Contour**

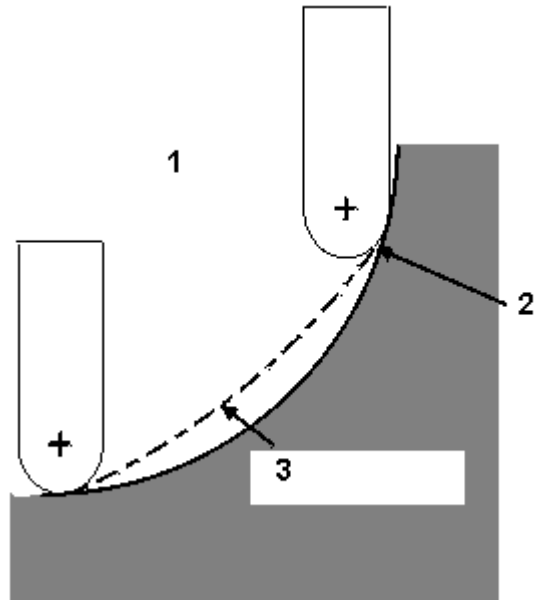

1	Second Data Block Using a Ball-Nosed End Mill
2	Programmed Contour (Same Contour as Data Block 1)
3	Material to be Removed by Ball-Nosed End Mill

**Figure 1-11. Ball-Nosed End Mill on a Contour**


- **Flat End Mill** - the cutter path is computed as if a Ball-Nosed End Mill is used. This computation allows a Flat End Mill to be used for roughing without gouging the part, and in most cases leaves enough material to be removed for the finished surface using a Ball-Nosed End Mill.

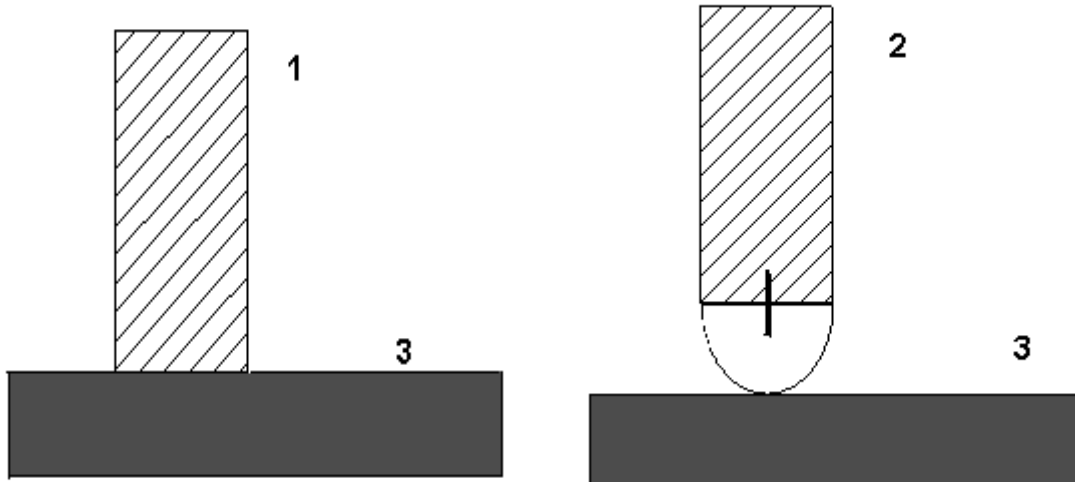

1	Tool Calibrated on Tip
2	Tool Calculated as center of imaginary ball nose
3	Tool Zero

**Figure 1-12. Flat End Mill**

- **Ball-Nosed End Mill** - the system computes the compensated cutter path of the ball center:

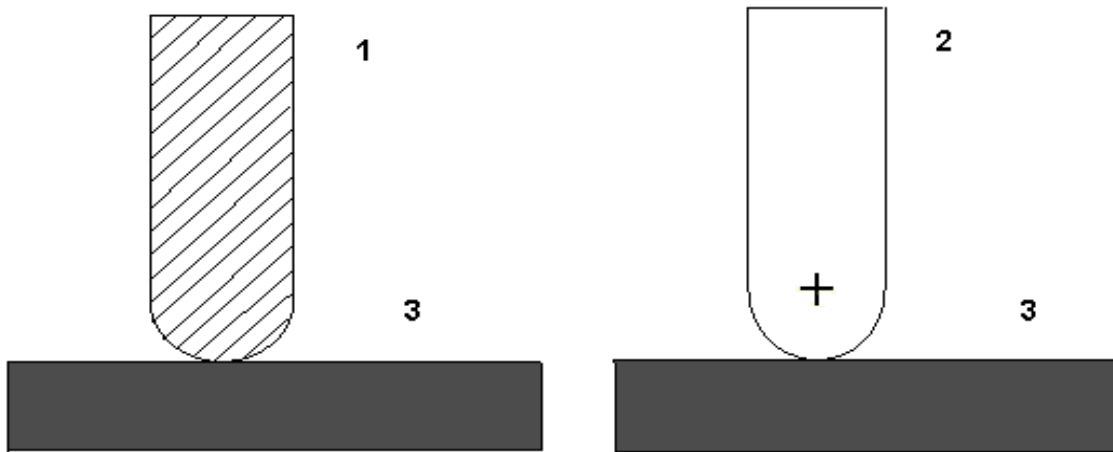

1	Tool Calibrated on Tip
2	Tool Calculated as center of ball nose
3	Tool Zero

**Figure 1-13. Ball-Nosed End Mill**


Special consideration must be taken when using a Finish Tool for a Mill Frame, Mill Circle or Mill Contour.



## Roughing and Finishing Passes

The Flat End Mill tool path is calculated as a Ball-Nosed End Mill for the roughing pass.

The maximum additional material remaining on the overall 3D contour will not exceed the tool's radius.

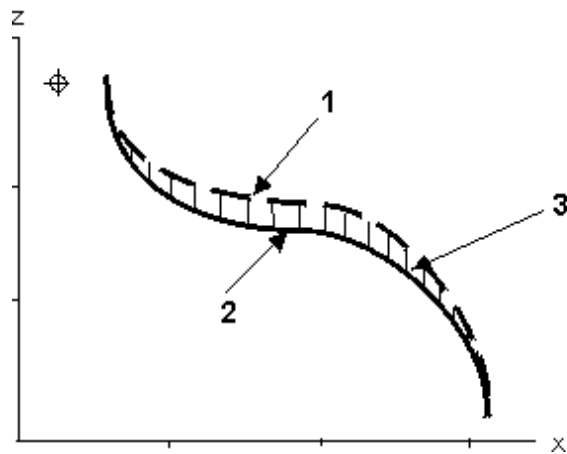

1	Roughing Contour Using Flat End Mill
2	Finishing Contour Using Ball-Nosed End Mill
3	Extra Material

**Figure 1–14. Roughing and Finishing Passes**




## CUSTOM DRILL

The Custom Drill feature can be used to adjust the feedrate and speed for each step in the drill cycle: entry into hole, break out through bottom of material, bottom, re-entry into hole from bottom, out move at top of hole, and the move to retract clearance plane. Custom Drill is typically used for long hole drill cycles but can be used to customize any drill cycle.

Tool Tab . . . . .	2 - 1
Entry Tab . . . . .	2 - 3
Break Out Tab . . . . .	2 - 4
Bottom Tab . . . . .	2 - 5
Re-entry Tab . . . . .	2 - 6
Out Tab. . . . .	2 - 7
Retract Tab . . . . .	2 - 8

## Tool Tab

The Custom Drill screen is organized into tabs where the feed, speed, and other parameters are entered for each step of the drill cycle. The first tab is the Tool tab:

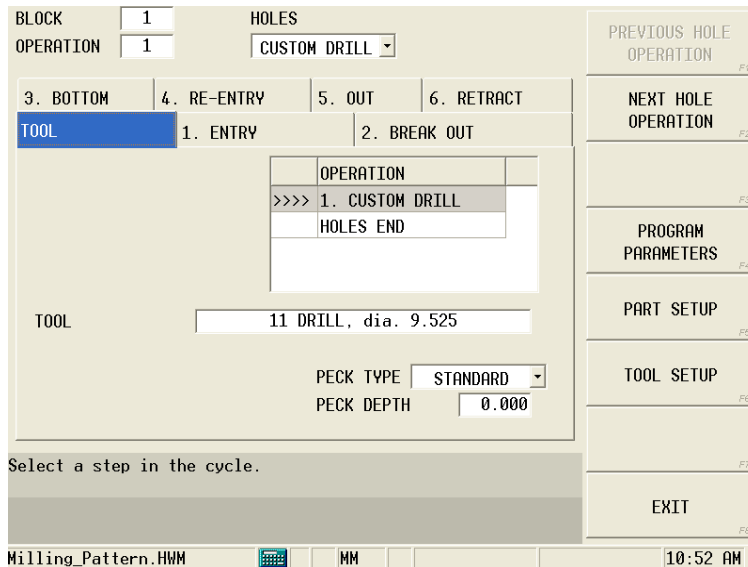

**Figure 2–1. Custom Drill Tool tab**



A list of all hole operations are displayed on the Tool tab to show the relation of the Custom Drill cycle with other operations in the block. Fields are:

- **Tool**—specifies the tool to be used for the operation.

- **Peck Type**—specifies whether the drill pulls out to the Z Start position after reaching Peck Depth (Standard) or if it dwells at the Peck Depth (Chip Breaker). Default is Standard.
- **Peck Depth**—specifies the distance the tool drills down into the part before stopping to clear out or break the chips. If this field is used, it is usually not larger than the tool's diameter. If Peck Depth is zero, Peck Type is ignored.

## Entry Tab

The Entry step establishes the speed and feed for the approach move starting at Z Start and ending at Z Top. The image shows the move from Z Start to Z Top:

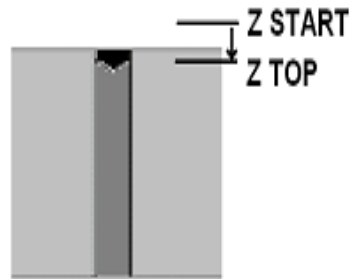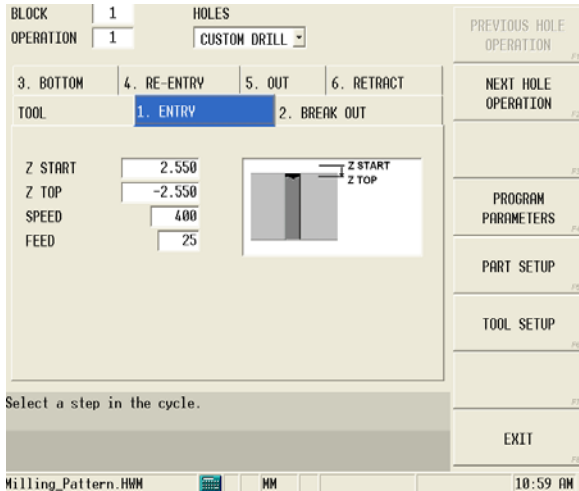

**Figure 2-2. Custom Drill Entry tab**



Fields are:

- **Z Start**—specifies the feed starting point. The move to Z Start is at rapid feedrate from the retract clearance plane.
- **Z Top**—specifies the position of the entry move into the material at the specified speed and feed.
- **Speed**—specifies the spindle speed for the move from Z Start to Z Top.
- **Feed**—specifies the plunge feedrate for the move from Z Start to Z Top.

## Break Out Tab

The Break Out tab allows the user to set a feed and speed for the drill operation that differs from the feed and speed used for the move breaking through the bottom of the material (typically to avoid whipping). This step is optional and can be skipped by setting the Enable field to No. When Enable is No, the feed and speed from the Bottom tab are used for the move from Z Top to Z Bottom.

The image shows the plunge move from Z Top to Z Break Out, if enabled:

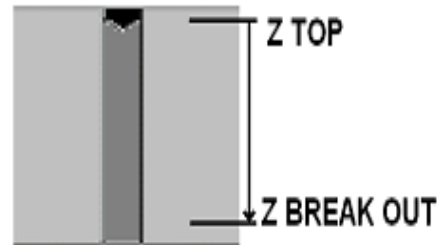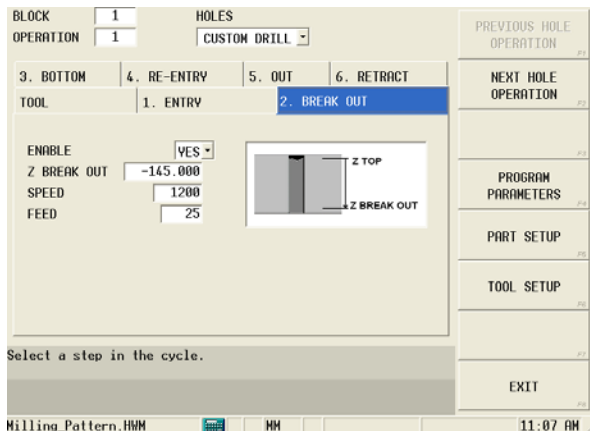

**Figure 2–3. Custom Drill Break Out tab**


Fields are:

- **Enable**—specifies Yes or No to enable or disable this step.
- **Z Break Out**—specifies the Z end position for the break out step at the specified feed and speed.
- **Speed**—specifies the spindle speed for the move from Z Top to Z Break Out.
- **Feed**—specifies the plunge feedrate for the move from Z Top to Z Break Out.

## Bottom Tab

The final move through the hole from Z Break Out to Z Bottom is set in the Bottom tab. If the previous Break Out step is not enabled, then the feed and speed set in this step are used for the entire move from Z Top to Z Bottom.

The image shows the motion for the plunge move from Z Break Out to Z Bottom:

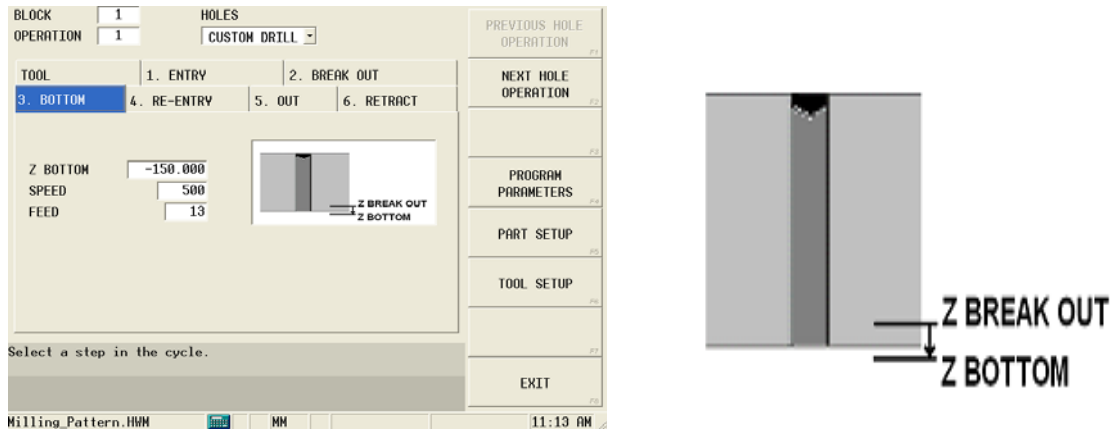

*Figure 2-4. Custom Drill Bottom tab*



Fields are:

- **Z Bottom**—specifies the Z bottom of the finished hole.
- **Speed**—specifies the spindle speed for the move from Z Break Out to Z Bottom.
- **Feed**—specifies the plunge feedrate for the move from Z Break Out to Z Bottom.

## Re-entry Tab

The Re-entry step allows the user to set a speed and feed for the retract move from Z Bottom to a Z position back inside the hole (Z Re-entry). This step is optional and can be skipped by setting the Enable field to No. When Enable is No, the move occurs from Z Bottom to the next enabled step (Out or Retract). If there are no other enabled steps, the spindle moves at rapid out of the hole to the Z start location.

The image shows the move from Z Bottom to Z Re-entry, if enabled:

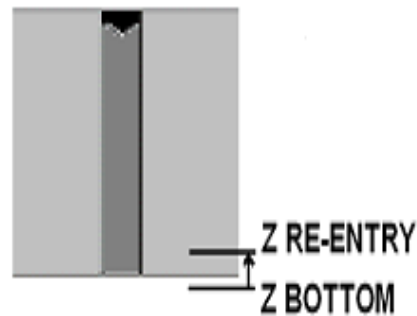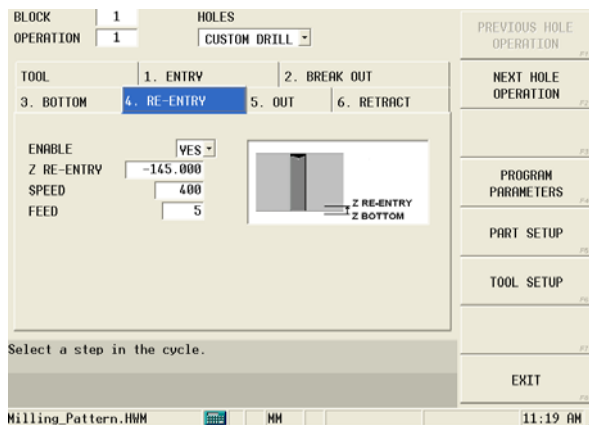

**Figure 2-5. Custom Drill Re-entry tab**

Fields are:



- **Enable**—specifies Yes or No to enable or disable this step.
- **Z Re-entry**—specifies the Z end position of the re-entry move back into the hole at the specified speed and feed.
- **Speed**—specifies spindle speed for the move from Z Bottom to Z Re-entry.
- **Feed**—specifies the retract feedrate for the move from Z Bottom to Z Re-entry.



## Out Tab

The Out step allows the user to set the speed and feedrate for the retract move from Z Re-entry to Z Out. This step is optional and can be skipped by setting the Enable field to No. When Enable is No, the move occurs from the last enabled step (Bottom or Re-entry) to the Retract step, if it is enabled. If the Retract step is not enabled, the spindle moves at rapid from the last enable step (Bottom or Re-entry) out of the hole to the Z start location.

The image shows the move from Z Re-entry to Z Out, if enabled:

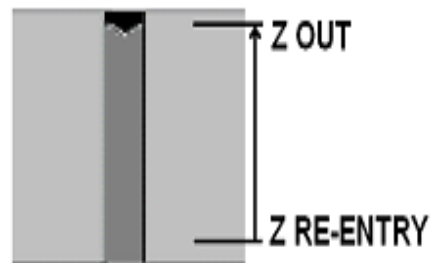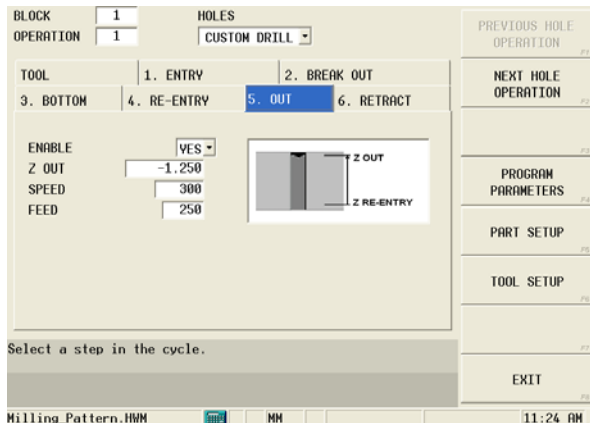

**Figure 2–6. Custom Drill Out tab**

Fields are:



- **Enable**—specifies Yes or No to enable or disable this step.
- **Z Out**—specifies the Z end position of the retract move from Z Re-entry.
- **Speed**—specifies the spindle speed for the move from Z Re-entry to Z Out.
- **Feed**—specifies the retract feedrate for the move from Z Re-entry to Z Out.

## Retract Tab

The Retract step allows the user to set the feed and speed for the move from Z Out to Z Retract. This step is optional and can be skipped by setting the Enable field to No. When Enable is No, the tool moves at rapid feedrate from the last enabled step (Bottom, Re-entry, or Out) to the Z Start position.

From Z Retract, the tool moves at rapid feedrate to the retract clearance plane; therefore, Z Retract should be less than the retract clearance plane.

The image shows the retract move from Z Out to Z Retract:

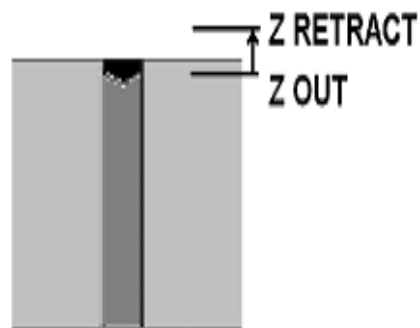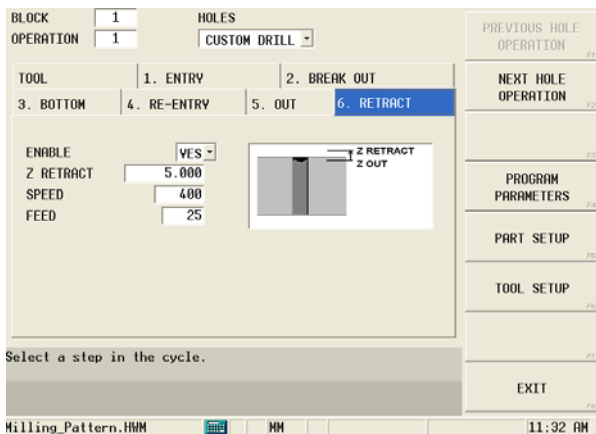

**Figure 2–7. Custom Drill Retract tab**

Fields are:

- **Enable**—specifies Yes or No to enable or disable this step.
- **Z Retract**—specifies the Z position of the retract move at the specified speed and feed. Z Retract can be greater than, less than, or equal to Z Start.
- **Speed**—specifies the spindle speed for the move from Z Out to Z Retract.
- **Feed**—specifies the retract feedrate for the move from Z Out to Z Retract.

# DXF OPTION

These topics are discussed in this section:

DXF Overview . . . . .	3	-	2
DXF Build Data Block . . . . .	3	-	3
DXF Parameters . . . . .	3	-	4
Edit Drawing . . . . .	3	-	5
DXF Layers . . . . .	3	-	9

## DXF Overview

WinMax DXF offers greater flexibility, improved compatibility with AutoCad<sup>®</sup>, and the ability to save DXF changes directly to file (avoiding the need to send DXF files back to the CAD system for editing). The DXF file translation software is compatible with DXF files generated with Autocad version 12 and earlier.

DXF files are loaded directly into WinMax as follows:

1. Press the AUXILIARY console button.
2. Select the DXF icon on the Auxiliary screen.
  - ⇒ The DXF Editor is functional in Conversational programs only. If the DXF Editor is started when the current active program is NC, a prompt asks if you want to start a new conversational part program. Answer Yes to create a new Conversational part program.
3. Find the DXF file on the Load DXF File screen, and select it to highlight.
4. Select the LOAD *F1* softkey.

The DXF program blocks are displayed in the Program Review Screen. On single-screen machines, use F+Draw (console key) to display the DXF drawing.

On dual-screen machines, the DXF drawing is displayed on the graphics screen. After building the data blocks, the part can be viewed in Solid or Toolpath graphics using the **Draw** console key. Switch the screen back to the DXF drawing using **F + Draw** (console keys). You can switch the screen back to the previously drawn graphic (without causing it to be redrawn) with the **Draw** console key. To redraw the graphic, select the **Draw** console key a second time (or access the DRAW OPTIONS F1 softkey).

DXF units of measurement (INCH or MM) match global WinMax units. When a data block is built from a CAD drawing, the data block adopts the unit displayed on the WinMax status bar. In **Build DB**, changing the WinMax unit will result in a different sized element, for example, a segment that is 3 inches or 3 mm in length.

Here are the softkeys on the DXF screen:

- Parameters—see *DXF Parameters*, on page 3 - 4.
- Build DB—see *DXF Build Data Block*, on page 3 - 3.
- Zoom Window—see *Zoom Window*, on page 3 - 5.
- Edit Drawing—see *Edit Drawing*, on page 3 - 5.
- Layers—see *DXF Layers*, on page 3 - 9.
- Save DXF—saves the DXF file.
- Part Programming—goes to the active part program.
- Quit CAD—exits the DXF CAD option.

The **Part Programming** softkey or icon toggles back to Part Programming without closing the DXF file. You may return to DXF at any time by selecting the DXF icon.

## DXF Build Data Block

The **Build DB** softkey accesses the automatic data block building features. The system creates milling, holes, position, or pattern locations data blocks.

**Milling** - the Milling operation softkeys perform these functions in Lines/Arcs, Circles, Frame, 3D Mold, or Ellipse data blocks:

- **Accept**—loads the entity into the data block.
- **Zoom Window**—refer to *Zoom Window, on page 3 - 5*.
- **Edit Drawing**—refer to *Edit Drawing, on page 3 - 5*.
- **Reverse**—reverses the contour direction.
- **AutoChain**—defines contours by autochaining individual segments together.
- **Default Radius**—inserts the value of the default radius set in the Frame screen's Corner Radius field.
- **Exit/Cancel**—cancels the operation and returns to the previous screen.

If you are using AutoCAD 14, set the registers to generate Polylines and Ellipses so they are saved as pline entity types and not splines.

**Holes** - Holes data blocks are built using the Hole Location Method (F1) or the Hole Pattern Method (F2):

- **Use Hole Location Method**—builds Holes Locations blocks from selected points on the drawing.
- **Use Hole Pattern Method**—builds Holes Pattern blocks from selected points on the drawing.

For either softkey, select holes on the drawing with one of three methods:

- Select individual holes on the touchscreen.
- Choose the Window Select softkey and drag across an area of the screen to select a group of holes.
- Use the Intersect softkey to select two intersecting lines. The point of intersection becomes the center of the hole.

Select the Accept softkey to create the data blocks.

These are the softkeys in the Holes menu:

- **Accept**—loads the entity into the data block.
- **Zoom Window**— refer to *Zoom Window, on page 3 - 5*.
- **Edit Drawing**—refer to *Edit Drawing, on page 3 - 5*.
- **Window Select**—selects a group of holes on the drawing.
- **Intersect**—draws a hole at the intersection of two selected lines and represents the center with a highlighted plus (+).
- **Default Order**—orders the holes as they were selected in the AutoCAD drawing.

- **Exit/Cancel**—cancels the operation and returns to the previous screen.

**Position** - creates a Position data block from the DXF drawing. These are the softkeys on the Position menu:

- **Accept**—loads the entity into the data block.
- **Zoom Window**—refer to *Zoom Window, on page 3 - 5*.
- **Edit Drawing**—refer to *Edit Drawing, on page 3 - 5*.
- **Window Select**—selects a group of holes on the drawing.
- **Intersect**—draws a hole at the intersection of two selected lines and represents the center with a highlighted plus (+).
- **Default Order**—orders the holes as they were drawn in the original AutoCAD drawing.
- **Exit/Cancel**—cancels the operation and returns to the previous screen.

**Pattern Locations**—builds a Pattern data block. To use, select the softkey and then select points on the drawing to serve as pattern locations, using one of the following methods:

- Select individual holes on the touchscreen.
- Choose the Window Select softkey and drag across an area of the screen to select a group of holes.
- Use the Intersect softkey to select two intersecting lines. The point of intersection becomes the center of the hole.

Select the Accept softkey to create an empty Pattern Locations data block. Additional data can then be added either manually or from the DXF drawing.

These are the softkeys on the Pattern Locations menu:

- **Accept**—loads the entity into the data block.
- **Zoom Window**— refer to *Zoom Window, on page 3 - 5*.
- **Edit Drawing**—refer to *Edit Drawing, on page 3 - 5*.
- **Window Select**—selects a group of holes on the drawing.
- **Intersect**—specifies a pattern location at the intersection of two selected lines.
- **Default Order**—orders the holes as they were selected in the AutoCAD drawing.
- **Exit/Cancel**—cancels the operation and returns to the previous screen.

## DXF Parameters

These parameters link contour segments, define part zero within the drawing, and set the radius for frame corners.

Use the Move Zero and Select Value softkeys to change the location of part zero. The **Exit**

softkey returns to the DXF softkeys.

The fields on the DXF Parameters dialog box are defined as follows:

- **Endpoint Tolerance**—determines when the endpoints of segments are close enough to be considered equal (or coincident).
- **Part X Offset** and **Part Y Offset**—define part zero within the drawing. All dimensions are calculated from this point. The part zero symbol is a circle with crosshairs. To change this location manually, move the cursor to the field for Part X or Y Offset and enter the X or Y Offset values. To change this location graphically and automatically, use the **Move Zero** softkey.
- **Frame Radius**—sets a default corner radius to be used in Build DB. If the corners of a frame do not have the same radius, the user is prompted to either select a corner radius on the drawing or use the default value entered in this field for the radius.
- **Hole Diameter**—determines the default diameter for a hole.

Use the touchscreen to turn the remaining DXF Parameter fields on (✓) or off ( ):

- **Display Geometry**—shows selected lines on the graphic display in a color other than black, illustrating which elements have been selected. Colors can be changed with the Choose Colors softkey on the Parameters screen.
- **Autochain Contours**—allows autochaining to be turned off so that a contour may be created by individually selected segments into a chained contour. By default, segments are automatically chained to create contours.
- **Select Holes by Diameter**—selects holes with the diameter specified in the Hole Diameter field (defined above) when the WINDOW SELECT softkey is used. This selection allows you to order the hole selection by size, which optimizes tool changes.

## Zoom Window

Use the **Zoom Window** softkey to enlarge an area of the drawing or zoom out to see a full view. Use the pointer to touch an area on the screen and drag across the screen to enlarge an area of the drawing. When an area is enlarged, use the following softkeys:


- **Zoom Out**—pulls back from the drawing incrementally to the previous magnification level without re-centering the part in the drawing.
- **Fit to View**—gives a full scale of the drawing with the part in the drawing auto-centered.
- **Pan**—relocates the center of the drawing on the Graphic display.
- **Exit**—returns to the previous menu.

## Edit Drawing

Use the Edit drawing feature to extend, join, modify, or split segments that need to be edited in order to create the proper geometry for the part program.

- **Extend**—locates the intersection of two lines and extends one or both of the lines to the intersection point.

To extend lines, select the EDIT DRAWING softkey and then the **Extend** softkey. Select the two lines that need to be extended. Both lines are highlighted when selected and extended to their points of intersection as shown in the examples below:

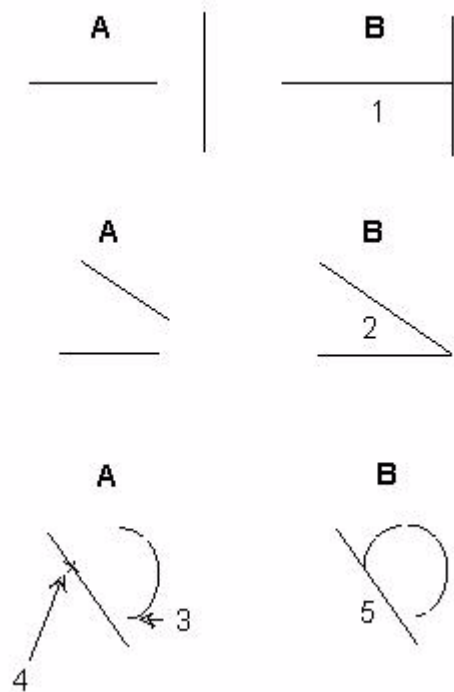



<b>A</b>	Original drawing
<b>B</b>	Edited drawing
<b>1</b>	Extended line
<b>2</b>	Both lines extended
<b>3</b>	Start of arc
<b>4</b>	Selected intersection point
<b>5</b>	Extended arc

**Figure 3–1. Extended Lines and Arcs**



- **Join**—moves a selected line endpoint to the endpoint of a line or arc segment. Always select as the first endpoint the point that will be joined to the second endpoint. The endpoint at the opposite end of the first selected segment remains stationary and becomes a pivoting point. Both segments are highlighted when selected, and the screen is redrawn to reflect the joining of the two segments.
- **Modify**—is used to view or modify the actual geometry data of segments. Choose the SELECT POINT softkey to view the segment data.
  - The DXF Edit Modify - Arc dialog box appears if you select an arc. Refer to *DXF Edit Modify - Arc*, on page 3 - 8.
  - The DXF Edit Modify - Line dialog box appears if you select a line. Refer to *DXF Edit Modify - Line*, on page 3 - 8.
  - The DXF Edit Modify - Point dialog box appears if you select a point. Refer to *DXF Edit Modify - Point*, on page 3 - 8.
  - The segment appears gray on the Graphic display.

Choose the **Accept** softkey to retain the changes in the control's memory.

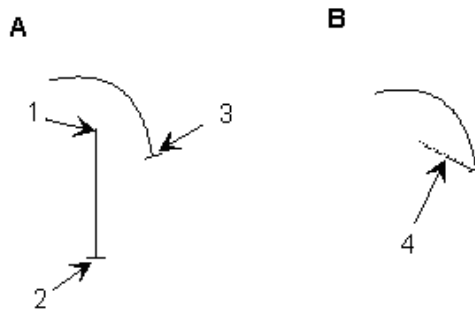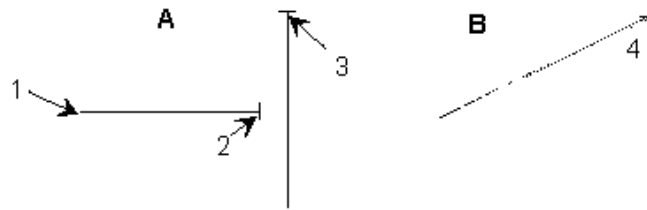

<b>A</b>	Original drawing
<b>B</b>	Edited drawing
<b>1</b>	Stationary endpoint
<b>2</b>	Selected segment endpoint
<b>3</b>	Joining endpoint
<b>4</b>	Newly joined segment

**Figure 3–2. Joined Lines and Arcs**

- **Split**—use to divide segments for selection, de-selection, and chaining. Segments may be split at midpoint or any point of intersection with other segments.  
To split a segment, first select the segment and then select the point where the segment will be divided. When a segment is selected for splitting, the midpoint and all intersection points with the other segments are indicated with crosshair markers. Follow the directions in the Prompt display.
- **Delete**—deletes a programmed endpoint.
- **Trim**—trims a selected segment.
- **Explode PCurve**—shows an exploded view of a selected PolyCurve. If you are using AutoCAD 14, set the registers to generate Polylines and Ellipses so they are saved as pline entity types and not splines.
- **Exit/Cancel**—return to the Main DXF menu.

## DXF Edit Modify - Arc

The DXF Edit Modify - Arc dialog window contains these fields:

- **Start Angle**—defines the starting point of the angle.
- **Sweep Angle**—defines the total number of degrees in the arc to be cut. This number can be greater than 350.
- **Direction**—identifies the direction of the arc from the start point.
- **Radius**—identifies the radius of the arc.
- **Center X** and **Center Y**—identify the X and Y coordinates for the center point of the arc.

## DXF Edit Modify - Line

The DXF Edit Modify - Line dialog window contains these fields:

- **Endpoint1 X** and **Endpoint1 Y**—define the first endpoints for the X and Y coordinates.
- **Endpoint2 X** and **Endpoint2 Y**—define the second endpoints for the X and Y coordinates.
- **Length**—identifies the line length.
- **XY Angle**—identifies the angle of the XY coordinate.

## DXF Edit Modify - Point

The DXF Edit Modify - Point dialog window contains these fields:

- **X Value**—identifies the X location for the selected point.
- **Y Value**—identifies the Y location for the selected point.

## DXF Layers

Many DXF drawings use layers - an electronic method of representing transparent acetate overlays used in hand-drawn drafting work.

- **Select Layer**—toggles the highlighted layer on and off.
- **All On**—turns on all of the layers.
- **All Off**—turns off all of the layers.
- **Exit**—return to the Main DXF menu.



# HD3 SERIAL NUMBER LETTERING

HD3 Serial Number Lettering mills a sequence of unique serial numbers that increment each time the block is run. The characters are HD3-style (non-true type) and can be alphabetic A-Z, numeric 0-9, and special characters @#!\$^&\*()-[ ]\_ = + ' : ; % ? / < > , . \. Alpha characters are all upper case. The last character in the serial number must be numeric and is incremented by a specified amount.

- Users can manually provide serial number data, which includes a starting sequence, such as 0001 or ABC001, and an increment which advances the serial number for each subsequent run.
- Data can originate from a file in which the serial numbers are listed. Each time the block is run, the next serial number is extracted from the file. The format of this file must be one serial number per line, each line must end in a carriage return, line feed sequence, or Return key.

To create an HD3 Serial Number Lettering block from the New Block Screen:

1. Select the Milling softkey.
2. Select the More softkey twice.
3. Select the HD3 Serial Number Lettering softkey on New Block screen 3.

The HD3 Serial Number Lettering screen uses three tabs: Text, Orientation, and Format.

Text tab . . . . .	4	-	1
Orientation tab . . . . .	4	-	3
Format tab . . . . .	4	-	4

## Text tab

The text of the serial number is set up in the Text tab:

The screenshot displays the 'HD3 SERIAL NUMBER LETTERING' interface. The 'TEXT' tab is selected, showing the following fields and values:

TEXT	ORIENTATION	FORMAT
X REFERENCE	0.000	Z START
Y REFERENCE	0.000	Z BOTTOM
CHARACTER HEIGHT	0.000	DATA ORIGIN
CHARACTER WIDTH	0.000	STARTING SEQUENCE
		INCREMENT

The 'ROUGHING' tab is also visible, showing the following fields and values:

ROUGHING	SFQ
TOOL	0
MILL FEED	0
SPEED (RPM)	0
PECK DEPTH	0.000
PLUNGE FEED	0

The status bar at the bottom shows 'NONAME1.HMM', 'MM', and '8:36 AM'.

Figure 4-1. HD3 Serial Number Lettering Text tab

Fields are:

- **X Reference**—indicates the X coordinate of the point where text begins.
- **Y Reference**—indicates the Y coordinate of the point where text begins.
- **Character Height**—indicates the height of the text.
- **Character Width**—indicates the character width. The width includes the character left-justified, plus some spacing between it and the next character to be milled. Spacing between the characters is equal to the tool's diameter.
  - ⇒ Because cutter compensation is not used in this routine and letter contouring follows the center of the tool, character spacing can be adjusted by adjusting the tool diameter in Tool Setup.
- **Z Start**—indicates the point where the Z-axis plunge feedrate begins.
- **Z Bottom**—indicates the location where the Z-axis plunge feedrate ends and mill feed begins.
- **Data Origin**—specifies the source of the serial number data, either User-provided or From File. Default is User-Provided.
  - **User-provided**—the serial numbers are constructed with information provided by the user. When selected, the Starting Sequence and Increment fields appear.
  - **From File**—the serial numbers are populated from a source file. When selected, the File field and Locate... button appear.
- **Starting Sequence**—specifies the characters for the first serial number. The sequence can contain any combination of alpha or numeric characters, but the last character in the sequence must be a digit (number). This field appears only when User-provided Data Origin is selected. Default is 1.
- **Increment**—specifies the amount to increment for each new serial number. This field appears only when User-provided Data Origin is selected. Default is 1.


- **File**—specifies the source file for serial numbers that are generated from a file. This field appears only when From File Data Origin is selected.

The file must be located on the hard drive or an accessible network drive, or can be on a floppy disk or USB memory device that has been loaded onto the control. To select the file:

1. Select the Locate... button to browse for the file.
2. Navigate to the location of the file in the dialog box that opens.
3. Select the file.
4. Select the Open button on the dialog box. The file and path appear in the File field.

## Orientation tab

The Orientation fields specify the orientation of the X and Y reference points.

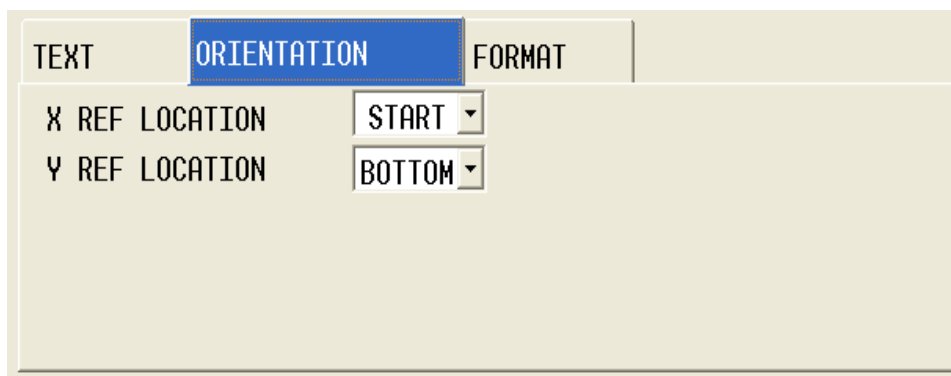

TEXT	ORIENTATION	FORMAT
X REF LOCATION	START	
Y REF LOCATION	BOTTOM	

Fields are:

- **X Ref Location**—specifies Start, End, or Center of the character for the X reference point. Default is Start.
  - Start—the serial number is left-justified; the first character begins at the X reference point.
  - Center—the entire serial number is centered left and right of the X reference point.
  - End—the serial number is right-justified; the last character ends at the X reference point.
- **Y Ref Location**—specifies Bottom, Top, or Center of the character for the Y reference point. Default is Bottom.
  - Bottom—the bottom of the serial number is aligned with the Y reference point.
  - Top—the top of the serial number is aligned with the Y reference point.
  - Center—the serial number is centered above and below the Y reference point.

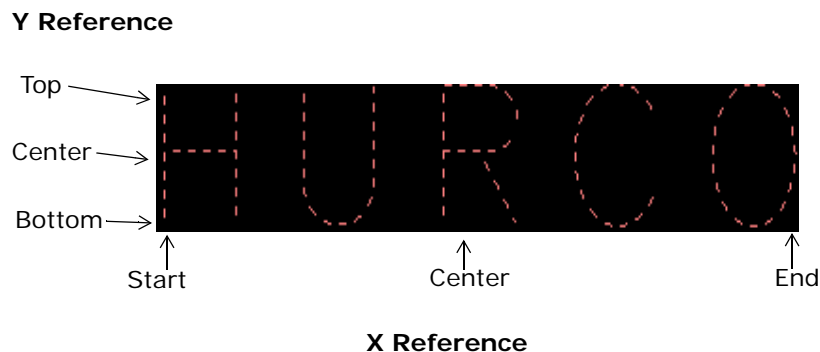


Figure 4-2. X Reference and Y Reference locations

## Format tab

The Format fields indicate whether the serial number should have a minimum length and what that length should be.

TEXT	ORIENTATION	FORMAT
ASSURE MINIMUM LENGTH		YES ▾
MINIMUM LENGTH		1
LEADING SYMBOL		0

Fields are:

- **Assure Minimum Length**—specifies Yes or No. When Yes is selected, the Minimum Length and Leading Symbol fields appear so that a placeholder can be used to achieve consistent serial number length. Default is Yes.
- **Minimum Length**—specifies the length (in number of characters) when Assure Minimum Length field is set to Yes. This field only appears when Assure Minimum Length is Yes.
- **Leading Symbol**—specifies the character that is added to the beginning of the serial number as a placeholder to achieve the minimum length. This can be an alpha or a numeric character. This character will be repeated in the serial number as many times as necessary to achieve the specified minimum length with the given starting sequence. See example below. This field only appears when Assure Minimum Length is Yes.



## Leading Symbol Example:

Starting Sequence	001
Increment	1
Assure Minimum Length	Yes
Minimum Length	5
Leading Symbol	A

---

First Serial Number will be	AA001	NOTE: A second "A" is added to starting sequence of 001 to assure the minimum length of 5.
-----------------------------	-------	--

Second Serial Number will be	AA002
------------------------------	-------

999th Serial Number will be	AA999
-----------------------------	-------

1000th Serial Number will be	A1000	NOTE: The second "A" is no longer needed to assure minimum length. If serial number "AA1000" is required, the Starting Sequence would be AA001 and Assure Minimum Length would be set to No.
------------------------------	-------	---



Format tab only assures a **minimum** number of characters. The serial number will continue to increment and expand with continuous running of the block.



# HELICAL PLUNGE OPTION

The Helical Plunge programming option provides helical plunge as an alternative machining strategy. Helical plunge and straight plunges can be used separately for roughing and finishing phases, or they can be used together for the same operation. For example, you can rough with a helical plunge and finish with a straight plunge.

In the Helical Plunge option, the tool rotates around the cut and moves down the Z-axis. The cutting tool is continuously cutting deeper and enters and exits the machined part only once.

To use Helical Plunge, set the Mill or Finish Plunge Type in Milling Parameters to Helix.

Helical Plunge Milling Parameter Fields . . . . .	5	-	2
Helical Plunge (Inside/Outside) for Mill Frames, Mill Circles and Ellipses . . . . .	5	-	3
Helical Plunge with UltiPocket. . . . .	5	-	3
Helical Plunge with Operator Specified Location . . . . .	5	-	3
Helical Plunge in the Center of a Pocket. . . . .	5	-	3
Helical Plunge with Outward Pocketing . . . . .	5	-	4
Helical Plunge of Mill Frame Inside with No Pecking and Blend Offset . . . . .	5	-	4
Helical Plunging of Mill Frame Inside with Pecking and Straight Plunge Finish Pass and Blend Offset. . . . .	5	-	5
Helical Plunge with Lines and Arcs . . . . .	5	-	7
Helical Plunge with 3-D Part Programming Option. . . . .	5	-	7



- Helical Plunge uses the **feedrate** programmed by the operator on the mill circle, mill frame, ellipse, or mill contour start screens.
- **Pattern blocks** can be used with helical plunging. A scaled-up or scaled-down pattern will not affect the diameter of the helix plunge. When using a mirror image pattern, the helical plunge will be in the negative Z direction.
- Helical Plunge for **rotary mill frames**, mill circles, and mill contours is similar to helical plunging for non-rotary mill frames, mill circles, and mill contours.

## Helical Plunge Milling Parameter Fields

On the Milling Parameters screen, choose the Mill Plunge Type as Helix. If the Helical Plunge option is enabled, the fields specifying the plunging parameters appear. If the fields do not appear, the Helical Plunge option has not been installed on the control. Call Hurco or a Hurco distributor to purchase the option.



Helical Plunge Milling Parameter fields are available only in Conversational Programming.

- **Mill Plunge Type**—specifies the plunging strategy to use for the milling pass. Choose Straight or Helix. The default setting is Straight.
- **Mill Plunge Ramp Slope**—defines the slope of the helical ramp for the milling tool. The range is 1° to 90°. Choosing 90° will result in a Straight Plunge. The default value is 10°.
- **Mill Plunge Helix Radius**—used for specifying the Helical Plunge radius as a percentage of the tool diameter. The range is from 0% to 100%. Choosing 0% results in a Straight Plunge. If a value of 50% or less is chosen, it will prevent a post (a thin cylinder of material formed after helical plunging) from being formed by the Helical Plunge. The default setting is 25%.
- **Finish Plunge Type**—specifies the plunging strategy to use for the finish phase. Choose Straight or Helix. The default setting is Straight.
- **Finish Plunge Ramp Slope**—defines the slope of the Helical Ramp for the finishing tool. Range is 1° to 90°. Choosing 90° will result in a Straight Plunge. The default setting is 25°.
- **Finish Plunge Helix Radius**—defines the value of the Helical Plunge radius as a percentage of the diameter of the finishing tool. The range is 0% to 100%. If a value of 50% or less is chosen, it will prevent a post from being formed by the Helical Plunge. The default setting is 25%.
- **Operator Specify Pocket Start**—if YES, the pocket start location fields will appear on pocket boundary screens, when spiral inward pocketing is selected. The default setting is No. The value of Inward Pocket Plunge Near Center is ignored. Refer to *Helical Plunge with UltiPocket*, on page 5 - 3 for more information.
- **Inward Pocket Plunge Near Center**—if YES, UltiPocket will attempt to perform a plunge near the center of the pocket. Using this parameter may help prevent interferences with pocket islands and boundaries. The default setting is No. For this field to be enabled, the Operator Specify Pocket Start value must be No. Refer to *Helical Plunge with UltiPocket*, on page 5 - 3 for more information.

## Helical Plunge (Inside/Outside) for Mill Frames, Mill Circles and Ellipses

Helical Plunge is similar for milling the inside or outside of mill frames, circles, and ellipses (with or without blend-in moves). The center location of the helical plunge is the same as a straight plunge. The direction of the helical plunge (clockwise, CW, or counter clockwise, CCW) will be determined by the tool spin direction (CW or CCW) and the milling direction (climb or conventional). If Blend Offset is used, the helical plunge will be centered about the plunge point of the Blend Offset.

The helical plunge direction that provides a smooth transition to the tool path will be chosen. Helical plunge is not allowed when Milling Type On is selected.

## Helical Plunge with UltiPocket

The Helical Plunge option is used with the UltiPocket option to define the plunging location when inward pocketing. The operator can specify the pocket plunge location using the Operator Specify Pocket Start function, or start the pocket plunge near the center by using the Inward Pocket Plunge Near Center function. See the UltiPocket Option chapter for more information on using the Helical Plunge option with UltiPocket.

When both the Operator Specify Pocket Start and the Inward Pocket Plunge Near Center are set to No, the plunge locations are used that would have been used without the Helical Plunge option.



An error message appears if the plunge point specified would violate the programmed part surface.

## Helical Plunge with Operator Specified Location

When the operator specifies the plunge point, all of the helix plunge moves will occur at that location, even for the pocket boundary.

## Helical Plunge in the Center of a Pocket

When the Inward Pocket Plunge Near Center field value is Yes (Operator Specify Pocket Start value must be No), a plunge point near the center of the pocket will be chosen. Islands near the center will impact upon the plunge point's location.



When machining a part with a lot of webbing (many small pockets separated by walls), it may be desirable to disable helical plunging.

## Helical Plunge with Outward Pocketing


Helical plunging occurs near the center of the pocket when used with Outward Pocketing, and only one plunge location is needed. The Operator Specify Pocket Start and the Inward Pocket Plunge Near Center fields have no effect on Helical Plunge with Outward Pocketing.

## Helical Plunge of Mill Frame Inside with No Pecking and Blend Offset

The tool will helical plunge to the Z Bottom level and then perform the normal blend-in move. The direction of the helical plunge arc will smoothly transition to the blend-in arc. For instance, if the blend-in arc is CCW, the direction of the helical plunge will be CW. The following isometric views are created by setting the Draw Plunge Moves graphics parameter field to Yes.

⇒ This graphical representation is only for informational purposes and cannot be viewed with WinMax.

The graphics show the finish pass only if a finish tool is specified in the frame block, and do not show individual peck levels.

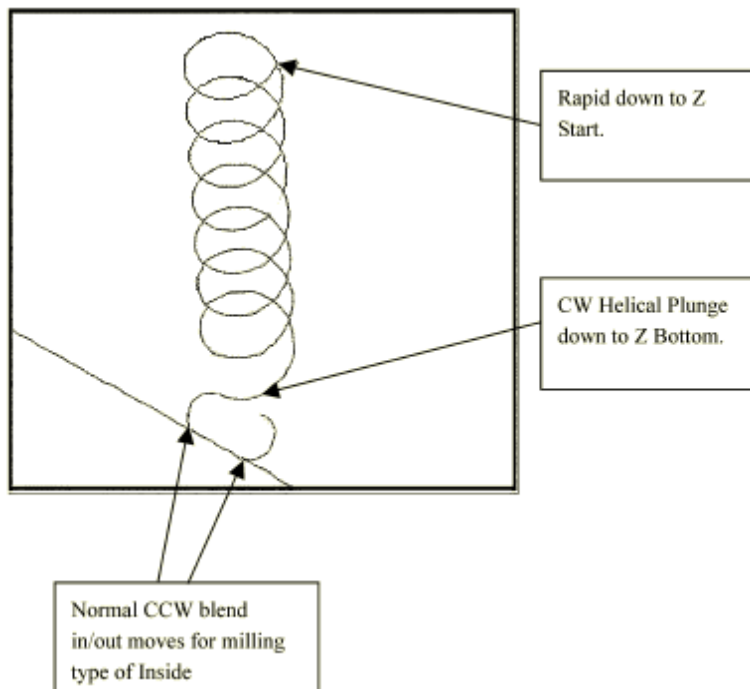


**Figure 5–1. Helical Plunge with No Pecking and Blend Offset (Isometric View)**

## Helical Plunging of Mill Frame Inside with Pecking and Straight Plunge Finish Pass and Blend Offset

The following example is a Mill Frame Block Type with Inside Milling Type. The finish tool specified and the peck depth is set to 0.6 inches.


First Peck - The tool helical plunges down to the -first peck depth, then mills another full circle to ensure that all material down to the first peck is removed. After the full circle is completed, a 180o blend in arc is performed. The direction of the helical plunge will always be in the opposite direction of the blend-in arc.

⇒ These graphical representations are only for informational purposes and cannot be viewed with WinMax.

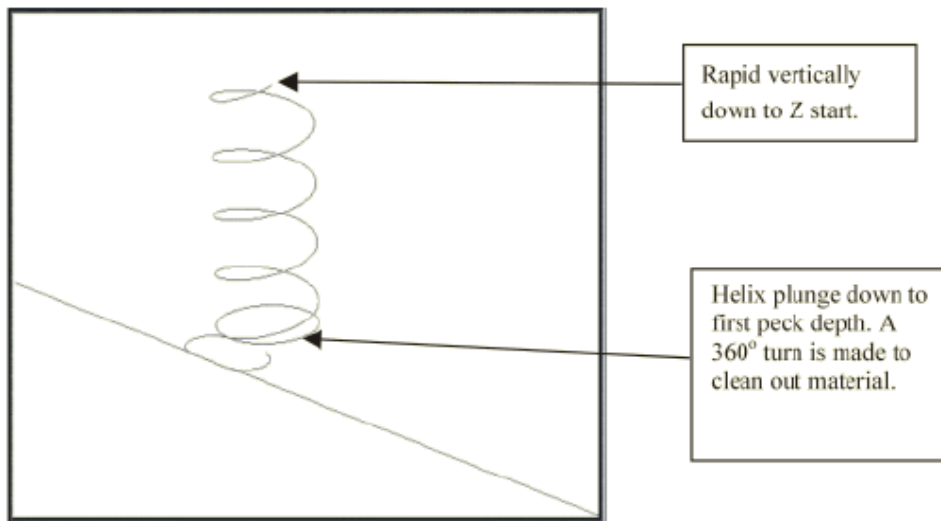

**Figure 5–2. First Peck (Isometric View)**

Second Peck and All Pecks to Finish Peck Depth - The tool will rapid down to the previous peck depth plus the peck clearance plane. The tool then helical plunges down to the next peck depth or the Z Bottom plus the Finish Z. If the tool is at a peck depth, a 360o arc will be machined. The 360o arc will not be machined if it is the last peck depth. Instead, a blend-in arc will be machined. The blend-in arc for the last peck depth will be similar to the one machined for the first peck.

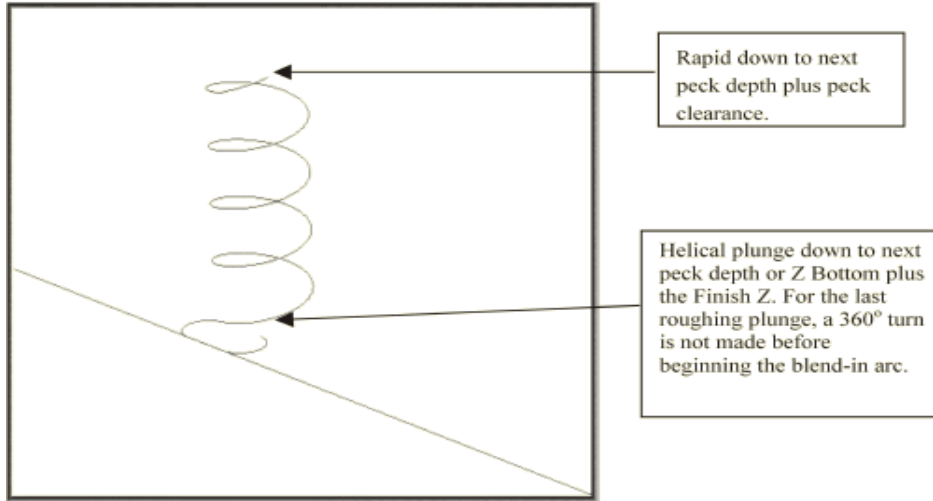


**Figure 5-3. Second Peck (Isometric View)**

Finish Pass - The tool will rapid down to the Z Start and plunge feed down to the Z Bottom. A blend-in move is performed before milling the frame contour.



When helical plunge is used for roughing passes, a large amount of material is removed around the point of entry. Therefore, using helical plunging for the finish passes is probably not necessary.

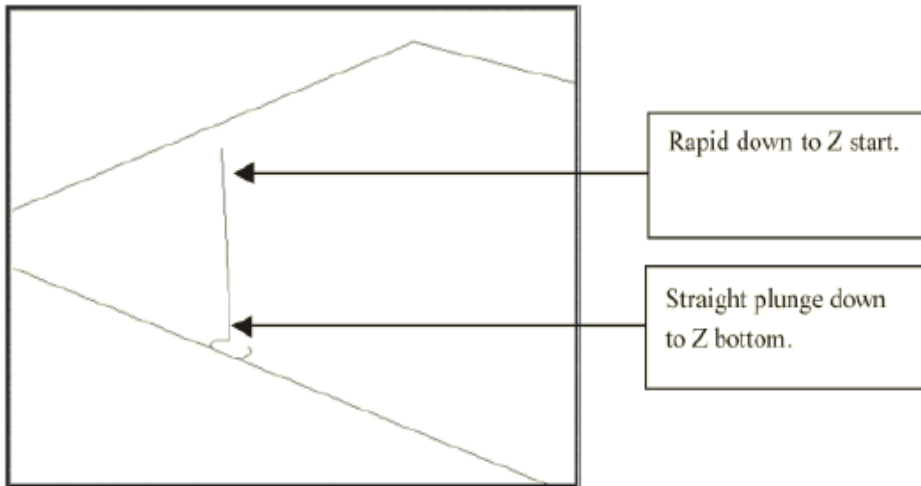

**Figure 5-4. Finish Pass (Isometric View)**




If the finish tool is larger than the roughing tool, helical plunges should also be performed for the finish pass. If a post was created by the roughing tool (the Helix plunge radius was greater than 50 percent) the finish tool may be cutting into the post.



## Helical Plunge with Lines and Arcs

Helical plunge with lines and arcs occurs at the start of the contour.

The following example shows helical plunging with right cutter compensation of a contour.

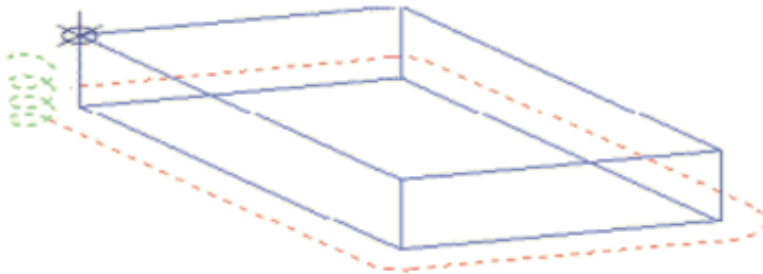

**Figure 5–5. Helical Plunging with Lines/Arcs (Isometric View)**

⇒ An error message will be displayed if the helical plunge would cut into a part surface. If this error message appears, move the starting location of the contour to an area that will not cause interference.

## Helical Plunge with 3-D Part Programming Option

Helical plunging is supported in the 3-D Part Programming option. A helical plunge can be performed when the Mill Plunge Type field is set to Helix.

Only one helical plunge occurs when using a bi-directional tool path. When performing helical plunge using unidirectional tool path, a helical plunge occurs for each cutter pass.



When programming complex 3-D parts, the operator should review helical plunge placements in graphical form before milling to ensure helical plunges from one block do not interfere with neighboring blocks.

If Mill Plunge Type field is set to Helix, but the helical plunge does not appear on the graphics screen, check the Z Start field on the Mill 3-D block screen. The plunges may not appear if Z Start value is too low.



# ROTARY

These topics are discussed in this section:

Rotary Overview . . . . .	6 - 2
Rotary Part Setup . . . . .	6 - 8
Rotary Part Programming . . . . .	6 - 10
Rotary A and Rotary A Tilt B Configuration . . . . .	6 - 14
Tilt A Rotary C Configuration . . . . .	6 - 19
Rotary B Configuration . . . . .	6 - 24
Tilt B Rotary C Configuration . . . . .	6 - 27
Universal Rotary Configuration . . . . .	6 - 32
Calculating X- and Z-Axis Positions After a Tilt-Axis Move . . . . .	6 - 41
Example Programs . . . . .	6 - 43

## Rotary Overview


Rotary-axis and tilt-axis operations and hardware (e.g., rotary table, tilt table) are typically used to cut around a cylindrical part while it is turning. When your machine is equipped with rotary-axis and/or tilt-axis hardware, you can mill more diverse parts than you can using 3-axis machining. Hurco's Conversational rotary part programming allows you to easily drill and contour cylindrical, curved, odd-shaped or asymmetrical parts using rotary-axis and/or tilt-axis hardware.

⇒ A rotary axis can move in a 360° rotation in positive or negative directions. See *Rotary Axis, on page 6 - 3*.

A tilt axis moves less than a 360° rotation. The machine configuration determines the limits of tilt-axis rotation. See *Tilt Axis, on page 6 - 3*.

In non-rotary linear milling operations, the machine table and spindle move in the X, Y, and Z axes. In rotary-axis and/or tilt-axis milling operations, the A, B, and/or C axes replace the corresponding linear axes.

- ⇒
- A axis rotates/tilts around the X axis.
  - B axis rotates/tilts around the Y axis.
  - C axis rotates/tilts around the Z axis.

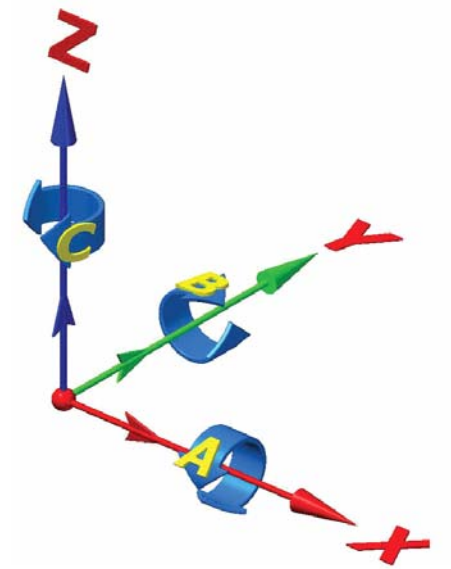

**Figure 6–1. Axes Movement**

The configuration of rotary and/or tilt hardware installed in your machining center will determine which axes are available for rotary-axis and/or tilt-axis milling operations.

## Rotary Axis

Rotary-axis operations in a Conversational rotary part program are similar to standard milling operations, except that the rotary milling feature (e.g., rotary circle, rotary frame) is wrapped around a cylinder. Rotary-axis operations can be performed on a 4-axis or 5-axis machine where the part is fixtured to the centerline of the rotary-axis.

⇒ A rotary-axis table can move in a 360° rotation in both positive and negative directions.

## Tilt Axis

A pivoting rotary table allows you to tilt the table to a specific angle during machining. Any rotary program or standard milling operation can be executed at the tilt position, but the tilt-axis will remain stationary while the data block is being machined. If you want to machine a part while moving the tilt axis, you must use NC programming. Refer to the *WinMax Mill NC Programming* manual for more information.

⇒ A tilt-axis moves less than a 360° rotation. The machine configuration determines the limits of tilt-axis rotation. These are the limits for tilt-axis hardware in Hurco machining centers:

- A-axis: -30° to +110°
- B-axis: -35° to +110°, the positive and negative range of the table may be reversed, depending on table orientation in the machine.

See *Calculating X- and Z-Axis Positions After a Tilt-Axis Move*, on page 6 - 41 for additional information.

## Configuration of Hurco Machining Centers

Hurco machining centers provide a variety of machine configurations. Rotary and/or tilt tables can be installed in Hurco machining centers, either at the factory or on-site. Some Hurco machine models come with rotary hardware as standard equipment. The table below shows configurations available for Hurco machining centers.

Configuration	Machine Type
Rotary A	4-axis rotary machining
Rotary A/Tilt B	4-axis rotary and 5-axis rotary or tilt machining
Tilt A/Rotary C	4-axis rotary and 5-axis rotary or tilt machining on trunion table machines
Rotary B	4-axis rotary machining on horizontal (HTX) machines
Tilt B/Rotary C	4-axis rotary and 5-axis rotary or tilt machining on SR machines
Universal Rotary	All axis configurations and machines

**Table 6-1. Rotary Configurations Available on Hurco Machines**

## Setting the Axis Configuration

You must set the axis configuration in the Conversational part program before you program rotary or tilt operations. Follow these steps to set the axis configuration:

1. Press the **Auxiliary** console button to access the Auxiliary screen.
2. Select the **Utilities** icon from the Auxiliary screen.
3. Select the **USER PREFERENCES F2** softkey.
4. Select the **CONVERSATIONAL SETTINGS F2** softkey.
5. Select the axis configuration from the **Default Conversational Program Type** drop-down list or softkeys on the Conversational Settings screen (configurations listed below are not available for all Hurco models):
  - **Rotary A**—Rotary axis
  - **Rotary A Tilt B**—Rotary and/or tilt axis
  - **Tilt A Rotary C**—Rotary and /or tilt axis
  - **Rotary B**—Rotary axis
  - **Tilt B Rotary C**—SR only
  - **Universal Rotary**—all configurations



Select the axis configuration for all of the axes on your machine, even if you don't think they will be used in the program. Rotary- and/or tilt-axis data blocks can be added to an existing program as long as the rotary-axis and/or tilt-axis configuration was selected when the program was first created.

Once an axis configuration is set for a program, it cannot be changed. However, you can use an existing Conversational program to create a new program that contains rotary-axis and/or tilt-axis programming data blocks. Follow these steps to create the new program:

1. Create a new Conversational program with the rotary-axis or tilt-axis configuration for your machine.
2. Select the **IMPORT FUNCTIONS F6** softkey from the Input screen to pull in all data blocks and setups from an existing Conversational part program. Refer to *Getting Started with WinMax Mill* for more information.
3. Add rotary-axis or tilt-axis operations in the new program.
4. Save the new program under a new name. You now have a rotary-axis and/or tilt-axis version and a standard version of the same Conversational part program.

## Transform Plane

Hurco's Transform Plane feature can be used with 4-axis or 5-axis machining centers to machine non-rotary milling or drilling features on multiple sides (i.e., planes) of a workpiece. Part zero is reestablished for each transformed plane in a Transform Plane Reference Points data block; the tool automatically moves so that it is always perpendicular to the transformed plane.

⇒ Transform Plane can only be used in a rotary part program.

Transform Plane can be used in a WinMax Mill 4-axis or 5-axis part program or as part of a VMX42SR part program. Using Transform Plane has the following benefits:

- Reduces setup time and potential positioning errors because the part doesn't have to be refixtured each time the plane is transformed.
- Eliminates programming errors because the machine reestablishes part zero for each transformed plane.
- Allows a non-rotary milling or drilling feature to be machined on one or more sides of an irregularly-shaped workpiece.

### Rotary Transform Plane Block

Transform Plane is used in a Conversational rotary program to position part zero for a non-rotary data block to any orientation of any plane of your rotary- or tilt-axis machine. For example, use Transform Plane when you want to repeat a non-rotary feature (e.g., mill contour, holes) on multiple sides of a part.

⇒ Rotary Pattern Loop and Rotary Pattern Locations data blocks can not be used within a Transform Plane operation.

Non-rotary patterns cannot be in effect (i.e., must be closed with a Pattern End data block) prior to a Transform Plane operation.

These are the Rotary Transform Plane fields:

- **Location**—The location number of the transformed plane.
- **X**—the X offset value.
- **Y**—the Y offset value.
- **Z**—the Z offset value.

Follow these steps to use Transform Plane in a rotary part program:

1. Create the non-rotary milling or drilling feature on the X-Y plane (i.e., create the milling or drilling feature as a 3-axis part) in a Conversational rotary part program.
2. Insert a Rotary Position data block to define the orientation of the transformed plane (i.e., position of the part) for the non-rotary data block.

⇒ The Rotary Position data block must be placed immediately prior to the Transform Plane Reference Points data block (see step 4) in the part program.

Select the Rotary Position *F1* softkey to access the Rotary Position data block from a rotary data block.

3. On the Rotary Position data block, select Yes for the Transform Part Zero field to activate Transform Plane for non-rotary data blocks in the rotary part program; the Disable Start Location and Use Offset Z fields appear.

- **Disable Start Location**—determines whether or not the machine will reestablish Z Start in the transformed plane. The default value is Yes.
  - When set to Yes, the machine keeps track of Z Start, relative to the location of Z in the transformed plane.
  - When set to No, the Operator must reestablish part zero for each side of the part that will be machined.

⇒ The Transform Plane feature will not function when the Disable Start Location field is set to No.

- **Use Offset Z**—determines whether or not the value in the Offset Z field on the Part Setup screen will be used by the machine in a transformed plane. The default value is No. Refer to *Rotary Part Setup, on page 6 - 8* for information about the Offset Z field.
  - When set to Yes, the value in the Offset Z field on the Part Setup screen will be used to establish the part zero coordinate system in Transform Plane operations.
  - When set to No, the value in the Offset Z field on the Part Setup screen will be added or subtracted from the Z calibration point during Transform Plane operations.

4. Define the X-Y-Z position of part zero for the transformed plane in the Transform Plane Reference Points data block.

⇒ Although the Transform Plane Reference Points data block resembles a Pattern Locations data block, it behaves differently. The X, Y, and Z fields on a Transform Plane Reference Points data block establishes part zero for the non-rotary feature on the current transformed plane.

- Follow these steps to access the Transform Plane Reference Points data block from a rotary data block:
  - a. Select the Rotary Patterns *F6* softkey.
  - b. Select the Transform Plane *F3* softkey.



If the non-rotary milling or drilling feature will be repeated at multiple locations on a transformed plane but at the same orientation, you can use one Transform Plane Reference Points data block to define all the X-Y-Z locations.

5. Add a Transform Plane End data block to end the Transform Plane operation. There are no fields in the Transform Plane End data block. Follow these steps to access the Transform Plane End data block from a rotary data block:

- a. Select the Rotary Patterns *F6* softkey.
- b. Select the Transform Plane End *F4* softkey.





After the Transform Plane End data block has executed, the orientation of the part will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Transform Plane operation, another Rotary Position data block will be required if the part must be reorientated to a different position.

### **Rotary Transform Plane End Block**

The Transform Plane End block ends the Transform Plane operation.

After the Transform Plane End data block has executed, the orientation of the part will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Transform Plane operation, another Rotary Position data block will be required if the part must be reorientated to a different position.

See *Transform Plane Example Programs*, on page 6 - 54 for more information.

## Rotary Part Setup

In addition to standard Part Setup fields, Part Setup for rotary programming includes part zero for the rotary axis and the rotary centerline fields.



Manually type the values directly into the Part Setup fields, or use the jog unit to set the values. Follow these steps to use the jog unit to enter the Part Setup values:


1. Use the jog unit to move the appropriate axis until it is in the position that you want to define as part zero.
2. Select the **Store Machine Position** softkey or the **Store Position** button on the jog unit.

For explanation of the Part Setup fields, see *Part Setup, on page 4 - 3*.

## Rotary Centerline


Hurco recommends automatically calculating the rotary centerline. Use the following steps:

1. Enter Part Zero X and Part Zero Y field values, either manually or by using the jog unit to store the machine position.
2. Place the cursor in the Part Zero X, Part Zero Y, or Offset Z field to make the Calculate Rotary Offsets softkey available.
3. Select the Calculate Rotary Offsets softkey. The machine automatically calculates the values for the rotary centerline fields.

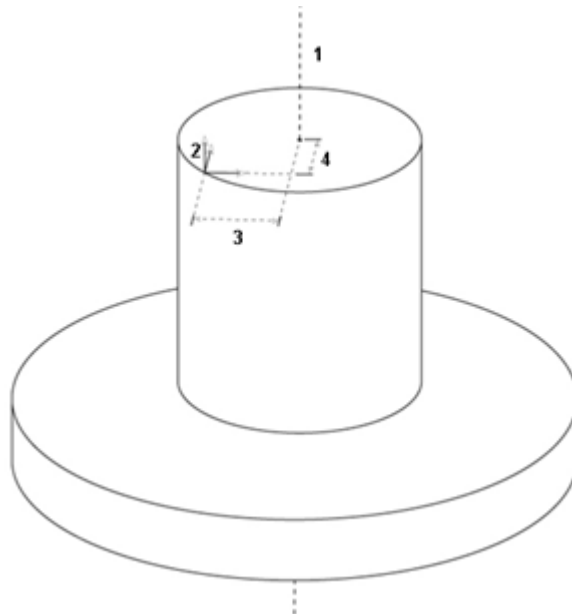

No.	Description
1	Center of cylindrical part and center of rotary table
2	PART ZERO
3	A CENTERLINE Y
4	A CENTERLINE Z

**Figure 6–2. Rotary Centerline**

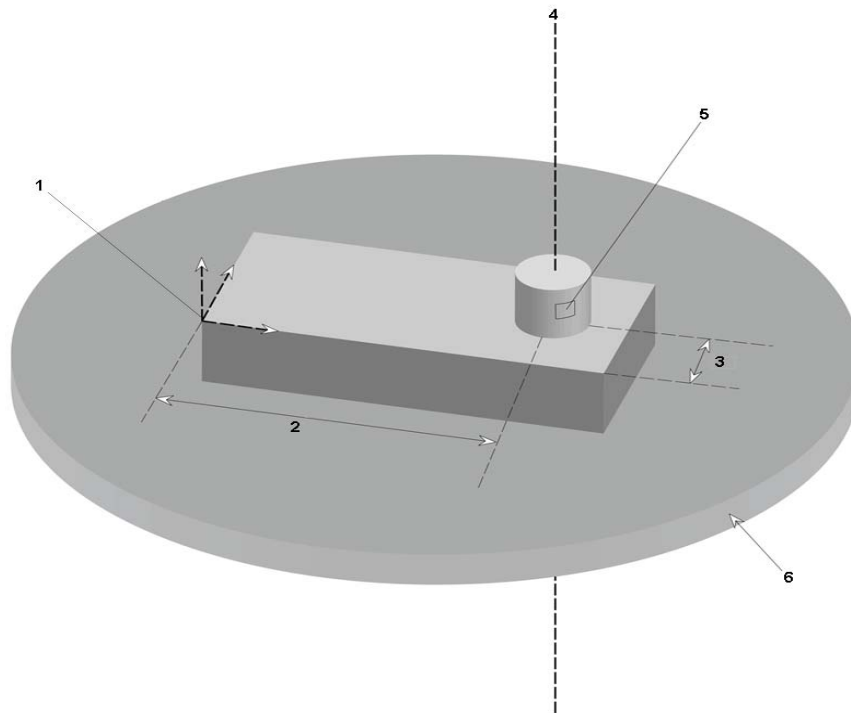

No.	Description
1	PART ZERO
2	X CENTER
3	Y CENTER
4	ROTARY CENTERLINE
5	Rotary Frame on cylindrical part
6	Rotary Table

**Figure 6–3. Rotary Centerline**

⇒ When the part is fixtured to the center of the rotary-axis table, the rotary centerline is the Y-Z center point of the part.

## Rotary Part Programming

Part program type is dependent upon machine configuration:

- Rotary A—4-axis rotary machining
- Rotary A Tilt B—4-axis rotary and 5-axis rotary or tilt machining
- Tilt A Rotary C—4-axis rotary and 5-axis rotary or tilt machining on trunion table machines
- Rotary B—4-axis rotary machining on horizontal machines
- Tilt B Rotary C—4-axis rotary and 5-axis rotary or tilt machining on SR machines
- Universal—all axis configurations and machines

See *Configuration of Hurco Machining Centers*, on page 6 - 3 for information about setting the program type.

The following sections contain details about the program blocks for each configuration:

Rotary A and Rotary A Tilt B Configuration . . . . .	6 - 14
Tilt A Rotary C Configuration . . . . .	6 - 19
Rotary B Configuration . . . . .	6 - 24
Tilt B Rotary C Configuration . . . . .	6 - 27
Universal Rotary Configuration . . . . .	6 - 32

### Rotary New Block

Rotary New Block is the same for all configurations. When you select the Rotary softkey a new data block will appear with the following softkeys:

- **Rotary Position**—moves all axes, including the rotary axis. See *Rotary Position Block*, on page 6 - 11.
- **Rotary Milling**—access the Rotary Lines and Arcs, Circle, Frame, and True-Type Font data blocks. See *Rotary Milling New Block*, on page 6 - 12.
- **Rotary Patterns**—access the Rotary Pattern Loop, Rotary Pattern Locations, Rectangular, Mirror, and Transform Plane data blocks to repeat a rotary feature on a cylinder. See *Rotary Patterns*, on page 6 - 12.
- **Rotary Parameters**—define the parameters of the cylinder. See *Rotary Parameters*, on page 6 - 13.

⇒ Tool changes are completed before each rotary data block is executed. The tool change will be automatic or the machine will prompt for manual insertion of the tool specified in the data block.

⇒ Refer to *Example Programs*, on page 6 - 43 for sample part programs.

## Rotary Position Block

A Rotary Position data block is used to move the machine's axes to a specific location at Rapid feedrate. A new Rotary Position data block is required each time the rotary-axis must be repositioned in the part program.

The tool will move to the Retract Plane, Safety Plane, or Home Z position before the table rotates into position each time a Rotary Position data block with rotary-axis positioning is executed in a Conversational part program.



A Rotary Position data block should be included as the first data block in a Conversational rotary part program to define the initial orientation of the rotary axis.

Rotary Position Block fields are dependent upon machine axis configuration. Fields for all configurations except Universal are listed below. See *Rotary Position Block, on page 6 - 32* for Universal Rotary Position block fields.

- **Stop**—when set to Yes, pauses program execution after the Rotary Position data block is executed. To restart the program, press the Start Cycle console button.
- **X Position**—X-axis coordinate relative to Part Zero X.
- **Y Position**—Y-axis coordinate relative to Part Zero Y.
- **A Angle, B Angle, or C Angle**—rotary-axis coordinate (angle) relative to Part Zero A, Part Zero B, or Part Zero C, depending on the configuration of your machine.
- **Rotary Safety Move**—when set to Yes, moves the X and Y axes to the locations defined in X and Y Safety Position fields (described below) before rotary-axis orientation.



Set the Rotary Safety Move field to Yes if there is a potential for collision between the rotary axis and the spindle.

- **X, Y Safety Position**—when the Rotary Safety Move field (described above) is set to Yes, defines the location to which X and Y axes will move before the rotary-axis orients.
- **Transform Part Zero**—when set to Yes, used to activate Transform Plane for a non-rotary data block machined on multiple sides of a part. Refer to *Rotary Transform Plane, on page 6 - 39* for information about using Transform Plane in a Conversational rotary part program.
  - **Disable Start Location**—determines whether or not the machine will reestablish Z Start in the transformed plane. The default value is Yes.
    - When set to Yes, the machine keeps track of Z Start, relative to the location of Z in the transformed plane.
    - When set to No, the Operator must reestablish part zero for each side of the part that will be machined.



The Transform Plane feature will not function when the Disable Start Location field is set to No.

- **Use Offset Z**—determines whether or not the value in the Offset Z field

on the Part Setup screen will be used by the machine in a transformed plane. The default value is No. Refer to *Rotary Part Setup, on page 6 - 8* for information about the Offset Z field.

- When set to Yes, the value in the Offset Z field on the Part Setup screen will be used to establish the part zero coordinate system in Transform Plane operations.
- When set to No, the value in the Offset Z field on the Part Setup screen will be added or subtracted from the Z calibration point during Transform Plane operations.
- **Z Move Type**—select the level to which Z-axis retracts at the beginning of the Rotary Position data block.
  - **Z Home**—Z-axis will move at Rapid feedrate to the position defined in Z Machine field.
  - **Z Safety**—Z-axis will move at Rapid feedrate to the position defined in the Part Limit Z (+) field on the Part Setup screen.
- **Tool**—number of the tool that will cut the part, entered on the Tool Setup screen.

## Rotary Milling New Block

Rotary Milling New Block is the same for all configurations. These softkeys appear on the Rotary Milling New Block screen:

- **Rotary Lines And Arcs**—access the Rotary Mill Contour data block to create lines and arcs on a cylinder.
- **Rotary Circle**—access the Rotary Mill Circle data block to create a circle on a cylinder.
- **Rotary Frame**—access the Rotary Mill Frame data block to create a frame on a cylinder.
- **Rotary True Type Font** (available with Universal Rotary configuration only)—access the Rotary True Type font data block to create text on a cylinder.

## Rotary Patterns

Rotary patterns allow you to repeat a mill feature (e.g., rotary circle, rotary frame, holes) on the part. These are the softkeys on the Rotary Patterns data block:

- **Rotary Loop**—repeats a pattern along the X-A plane on a cylindrical part.
- **Rotary Locations**—repeats a mill feature anywhere on a cylindrical part.
- **Rotary Rectangular** (available only with Universal Rotary configuration)—repeats a rectangle on a cylindrical part.
- **Rotary Mirror** (available only with Universal Rotary configuration)—repeats a pattern as a mirror image.
- **Transform Plane**—activates Transform Plane feature.
- **Transform Plane End**—ends a Transform Plane operation.

- **Pattern End**—ends a rotary pattern loop or rotary locations operation.

## Rotary Parameters

The Rotary Parameters data block is used to set the radius of the cylindrical part and to define the Y Off of Centerline parameter.

These are the fields on the Rotary Parameters data block:

- **Cylinder Radius** (all configurations except Tilt B Rotary C)—radius of the cylindrical part. If the radius is a negative number, the tool will cut the rotary mill feature (e.g., rotary circle, rotary frame) from the top to bottom.
  - ⇒ If the radius of the cylindrical part is not defined in the Rotary Parameters data block and Cutter Compensation is used in rotary lines and arcs, the machine will define the part's radius as the distance from Z Start to the rotary centerline.
- **Y Off Of Centerline** (Rotary A and Rotary A Tilt B configurations only)—determines where the tool will locate the Y coordinate. The default selection is No.
  - If set to No, the tool will position the Y coordinate (specified in the A Centerline Y field on the Part Setup screen) directly over the centerline of the rotary axis when cutting a rotary mill feature (e.g., rotary circle, rotary frame).
  - If set to Yes, the tool will stay at the current Y coordinate (specified in the A Centerline Y field on the Part Setup screen) when cutting a rotary mill feature (e.g., rotary circle, rotary frame).
- **Rotary Centerline X** (Tilt B Rotary C configuration only)—the distance from part zero to the vertical axis around which the part will rotate.
- **Rotary Centerline Y** (Tilt B Rotary C configuration only)—the distance from part zero to the horizontal axis around which the part will rotate.

## Rotary A and Rotary A Tilt B Configuration

### Rotary Position

The Rotary Position data block is available with multiple rotary configurations; see *Rotary Position Block*, on page 6 - 11 for an explanation of the softkeys on this screen.

### Rotary Lines and Arcs

Rotary line and arc segments are used to create a rotary mill contour. A rotary mill contour is similar to a standard mill contour, except the rotary contour is wrapped around a cylinder.

#### Start Segment

These are the fields on the Rotary Mill Contour Start Segment data block:

- **X Start**—X-axis coordinate for first segment's starting point.
- **A Angle**—rotary-axis coordinate (angle) for the first segment's starting point.
- **Z Start**—point where the Z-axis plunge feedrate begins.
- **Z Bottom**—the bottom of the finished segment and the location where the Z-axis plunge feedrate ends.

#### Line Segment

These are the fields on the Rotary Mill Contour Line segment data block:

- **X End**—X-axis coordinate for ending point of the line.
- **A End**—rotary-axis coordinate (angle) for the ending point of the line.
- **Z End**—Z-axis coordinate for the ending point of the line. The Z End value is the depth of the cut at the line end point and is carried forward from the previous segment. Retain the Z End value or type in a new value.
- **X Start**—X-axis coordinate start point programmed in the previous segment. The value of X Start can be changed only in the segment in which it was created.
- **A Start**—rotary-axis start point coordinate programmed in the previous segment. The value of A Start can be changed only in the segment in which it was created.
- **Z Start**—point where the Z-axis plunge feedrate begins.

#### Arc Segment

These are the fields on the Rotary Mill Contour Arc segment data block:

- **Direction**—the direction of the arc from the start point, Clockwise or Counter Clockwise.
- **X End**—X-axis coordinate of the arc's end point.



- **A End**—rotary-axis coordinate (angle) of the arc's end point.
- **Z END**—point where the Z-axis plunge into the cylinder ends.
- **X Center**—X-axis coordinate of the arc's center point.
- **A Center**—rotary-axis coordinate (angle) of the arc's center point.
- **Radius**—the radius of the arc, if known.
- **Sweep Angle**—identifies the angular distance in degrees from the start point of the arc to the end point. The range is -360° to 360°. This field is available when the Arc Sweep Angle option is installed.
- **X Start**—X-axis coordinate start point programmed in the previous segment. The value of X Start can be changed only in the segment in which it was created.
- **A Start**—rotary-axis coordinate start point programmed in the previous segment. The value of A Start can be changed only in the segment in which it was created.
- **Z Start**—Z-axis coordinate start point programming in the previous segment. The value of Z Start can be changed only in the segment in which it was created.

## Blend Arc Segment

These are the fields on the Rotary Mill Contour Blend Arc segment data block:

- **Radius**—the radius of the arc, if known.
- **X End**—X-axis coordinate of the arc's end point.
- **A End**—rotary-axis coordinate (angle) of the arc's end point.
- **X Center**—X-axis coordinate of the arc's center point.
- **A Center**—rotary-axis coordinate (angle) of the arc's center point.
- **Direction**—the direction of the arc from the start point, Clockwise or Counterclockwise.
- **X Start**—X-axis coordinate start point programmed in the previous segment. The value of X Start can be changed only in the segment in which it was created.
- **A Start**—rotary-axis coordinate start point programmed in the previous segment. The value of A Start can be changed only in the segment in which it was created.

## Mill Contour End Block

A Contour End data block is required to end rotary Mill Contour operations. There are no fields in the Contour End data block.

## Rotary Circle

A rotary mill circle is similar to a standard mill circle, except the rotary mill circle is wrapped around a cylinder. These are the fields on the Rotary Mill Circle data block:

These are the Rotary Circle fields for Rotary A and Rotary A Tilt B:

- **X Center**—X-axis coordinate for the center point of the circle.
- **A Center**—rotary-axis coordinate (angle) for the center point of the circle.
- **Radius**—radius of the milled circle.
- **Z Start**—location where the Z-axis plunge feedrate begins.
- **Z Bottom**—location where the Z-axis plunge feedrate ends.

## Rotary Frame

A rotary mill frame is similar to a mill frame, except the rotary mill frame is wrapped around a cylinder.

These are the Rotary Mill Frame fields for Rotary A and Rotary A Tilt B:

- **X Corner**—X-axis coordinate of any one of the four corners of the frame. This corner becomes the *reference corner*.
- **A Corner**—rotary-axis coordinate (angle) of the reference corner of the frame.
- **X Length**—X-axis coordinate measured from the reference corner.
  - X Length is positive if the reference corner is at the left side of the rectangle.
  - X Length is negative if the reference corner is at the right side of the rectangle.
- **A Length**—rotary-axis coordinate (angle) from the reference corner.
  - A Length is positive if the location of the frame is clockwise from the reference corner.
  - A Length is negative if the location of the frame is counter clockwise from the reference corner.
- **Z Start**—start point for the Z-axis plunge feedrate.
- **Z Bottom**—end point for the Z-axis plunge feedrate.
- **Corner Radius**—radius of the reference corner. This value will be the same for all corners of the rotary frame.

## Rotary Patterns

The Rotary Patterns data block is available with multiple rotary configurations; see *Rotary Patterns, on page 6 - 12* for an explanation of the softkeys on this screen. The specific pattern screens for Rotary A and Rotary A Tilt B are explained below.

### Rotary Loop

A rotary loop defines the number and locations a mill feature will be repeated on a cylinder. The initial mill feature is located at part zero and all subsequent copies are at a specific distance along the X-A axis of the cylinder.

These are the Rotary Pattern Loop fields for Rotary A and Rotary A Tilt B:



A rotary Pattern End data block is required to end the sequence repeated in the Rotary Pattern Loop data block.

- **Number**—total number of times the mill feature will be cut on the cylinder.
- **X Distance**—the distance on the X-axis between each repetition of the mill feature. The right-hand rule determines if X Distance is positive or negative.
- **A Distance**—the distance (angle) on the rotary-axis between each repetition of the mill feature.
- **B Distance** (Rotary A Tilt B configuration only)—the distance (angle) on the tilt axis between each repetition of the mill feature.



Rotary pattern and standard pattern data blocks can be nested (i.e., entirely contained within another pattern). The order of execution for nested rotary pattern and standard pattern data blocks is from the inside to the outside.

This is an example of nested data blocks in a program (the indentations are used illustrate the order of execution; your Conversational part program will not have these indentations).

In the following example, this is the order of execution:

1. Holes and rotary Mill Frame operations contained within the Pattern Loop Rotate data block.
2. Standard Mill Circle operation contained within the Rotary Pattern Loop data block.

```
Rotary Pattern Loop
  Standard Mill Circle (or any other rotary or non-rotary data blocks)
  Pattern Loop Rotate
    Holes operation
    Rotary Mill Frame (or other rotary or non-rotary data blocks)
  Pattern End (ends the Pattern Loop Rotate)
Pattern End (ends the Rotary Pattern Loop)
```

Only one Rotary Position data block is required for nested Rotary Pattern Loop data blocks.

## Rotary Locations

The Rotary Pattern Locations data block is used to create a list of locations of a mill feature repeated on a cylinder. Up to 999 copies can be located anywhere on the part.

Each set of locations listed on the Rotary Patterns Location data block is a specific location on the cylinder, relative to part zero. If you want the mill feature to be cut at part zero, you must define the coordinates of part zero in one of the sets of locations.

These are the Rotary Pattern Locations fields for Rotary A and Rotary A Tilt B:

- **X**—X-axis coordinate where the mill feature will be located on the part.
- **Y**—Y-axis coordinate where the mill feature will be located on the part.
- **Z**—offset for the Z axis. Z is used when a vise or other fixture holds multiple parts at different levels.

- **A**—rotary-axis coordinate (angle) where the mill feature will be located on the part.
- **B**—tilt-axis coordinate (angle) where the mill feature will be located on the part.

⇒ A rotary Pattern End data block is required to end the sequence in the Rotary Pattern Locations data block.

⇒ After the rotary Pattern End data block has executed, the orientation of the machine axes will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Rotary Pattern operation, another Rotary Position data block will be required if the axes must be reoriented to a different position.

## Rotary Transform Plane

The Rotary Transform Plane data block is available with multiple rotary configurations; see *Rotary Transform Plane Block, on page 6 - 5* for an explanation of the fields on this screen.

## Pattern End

A Pattern End data block is required to end rotary Pattern Loop and rotary Pattern Locations operations. There are no fields in the Pattern End data block.

⇒ After the rotary Pattern End data block has executed, the orientation of the machine axes will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Rotary Pattern operation, another Rotary Position data block will be required if the axes must be reoriented to a different position.

- A Rotary Pattern Loop data block only modifies the rotary operations contained within the pattern.
- The subsequent Rotary Position data block defines the orientation of the machine axes after the pattern is executed, and can provide a reference point if Recovery Restart is used.
- If the Rotary Pattern End data block is the last data block of the part program, a subsequent Rotary Position data block is not necessary.
- If a non-rotary operation data block (e.g., holes operation) is used in a rotary loop, a Rotary Position data block is required before the non-rotary operation data block to position the axes before the operation is executed in the loop.

## Rotary Parameters

The Rotary Parameters data block is available with multiple rotary configurations; see

*Rotary Parameters, on page 6 - 13* for an explanation of the fields on this screen.

## Tilt A Rotary C Configuration

### Rotary Position

The Rotary Position data block is available with multiple rotary configurations; see *Rotary Position Block, on page 6 - 11* for an explanation of the fields on this screen.

### Rotary Lines and Arcs

Rotary line and arc segments are used to create a rotary mill contour. A rotary mill contour is similar to a standard mill contour, except the rotary contour is wrapped around a cylinder.

#### Start Segment

These are the fields on the Rotary AC Mill Contour Start segment data block:

- **C Angle**—rotary-axis coordinate (angle) for the first segment's starting point.
- **Y Start**—Y-axis coordinate for first segment's starting point.
- **Z Start**—point where the Z-axis plunge feedrate begins.
- **Z Bottom**—the bottom of the finished segment and the location where the Z-axis plunge feedrate ends.

#### Line Segment

These are the fields on the Rotary AC Mill Contour Line segment data block:

- **C End**—C-axis coordinate for ending point of the line.
- **Y End**—rotary-axis coordinate (angle) for the ending point of the line.
- **Z End**—Z-axis coordinate for the ending point of the line. The Z End value is the depth of the cut at the line end point and is carried forward from the previous segment. Retain the Z End value or type in a new value.
- **C Start**—C-axis coordinate start point programmed in the previous segment. The value of C Start can be changed only in the segment in which it was created.
- **Y Start**—rotary-axis start point coordinate programmed in the previous segment. The value of Y Start can be changed only in the segment in which it was created.
- **Z Start**—point where the Z-axis plunge feedrate begins.

#### Arc Segment

These are the fields on the Rotary AC Mill Contour Arc segment data block:

- **Direction**—the direction of the arc from the start point, Clockwise or Counter Clockwise.

- **C End**—rotary-axis coordinate (angle) of the arc's end point.
- **Y End**—Y-axis coordinate of the arc's end point.
- **Z End**—point where the Z-axis plunge into the cylinder ends.
- **C Center**—rotary-axis coordinate (angle) of the arc's center point.
- **Y Center**—Y-axis coordinate of the arc's center point.
- **Radius**—the radius of the arc, if known.
- **Sweep Angle**—identifies the angular distance in degrees from the start point of the arc to the end point. The range is  $-360^{\circ}$  to  $360^{\circ}$ . This field is available when the Arc Sweep Angle option is installed.
- **C Start**—rotary-axis coordinate start point programmed in the previous segment. The value of C Start can be changed only in the segment in which it was created.
- **Y Start**—Y-axis coordinate start point programmed in the previous segment. The value of Y Start can be changed only in the segment in which it was created.
- **Z Start**—Z-axis coordinate start point programming in the previous segment. The value of Z Start can be changed only in the segment in which it was created.

## Blend Arc

These are the fields on the Rotary AC Mill Contour Blend Arc segment data block:

- **Radius**—the radius of the arc, if known.
- **C End**—rotary-axis coordinate (angle) of the arc's end point.
- **Y End**—Y-axis coordinate of the arc's end point.
- **C Center**—rotary-axis coordinate (angle) of the arc's center point.
- **Y Center**—Y-axis coordinate of the arc's center point.
- **Direction**—the direction of the arc from the start point, Clockwise or Counterclockwise.
- **C Start**—rotary-axis coordinate start point programmed in the previous segment. The value of C Start can be changed only in the segment in which it was created.
- **Y Start**—Y-axis coordinate start point programmed in the previous segment. The value of Y Start can be changed only in the segment in which it was created.

## Mill Contour End Block

A Contour End data block is required to end rotary Mill Contour operations. There are no fields in the Contour End data block.

## **Rotary Circle**

A rotary mill circle is similar to a standard mill circle, except the rotary mill circle is wrapped around a cylinder. These are the fields on the Rotary Mill Circle data block:

These are the fields on the Rotary AC Mill Circle data block:

- **C Center**—rotary-axis coordinate (angle) for the center point of the circle.
- **Y Center**—Y-axis coordinate for the center point of the circle.
- **Radius**—radius of the milled circle.
- **Z Start**—location where the Z-axis plunge feedrate begins.
- **Z Bottom**—location where the Z-axis plunge feedrate ends.

## Rotary Frame

A rotary mill frame is similar to a mill frame, except the rotary mill frame is wrapped around a cylinder.

These are the fields on the Rotary AC Mill Frame data block:

- **C Corner**—rotary-axis coordinate (angle) of the reference corner of the frame.
- **Y Corner**—Y-axis coordinate of any one of the four corners of the frame. This corner becomes the *reference corner*.
- **C Length**—rotary-axis coordinate (angle) from the reference corner.
  - C Length is positive if the location of the frame is clockwise from the reference corner.
  - C Length is negative if the location of the frame is counter clockwise from the reference corner.
- **Y Length**—Y-axis coordinate measured from the reference corner.
  - Y Length is positive if the reference corner is at the left side of the rectangle.
  - Y Length is negative if the reference corner is at the right side of the rectangle.
- **Z Start**—start point for the Z-axis plunge feedrate.
- **Z Bottom**—end point for the Z-axis plunge feedrate.
- **Corner Radius**—radius of the reference corner. This value will be the same for all corners of the rotary frame.

## Rotary Patterns

The Rotary Patterns data block is available with multiple rotary configurations; see *Rotary Patterns, on page 6 - 12* for an explanation of the softkeys on this screen. The specific pattern data blocks for Tilt A Rotary C are explained below.

### Rotary Loop

A rotary loop defines the number and locations a mill feature will be repeated on a cylinder. The initial mill feature is located at part zero and all subsequent copies are at a specific distance along the X-A axis of the cylinder.

These are the fields on the Rotary Pattern Loop data block for Tilt A Rotary C:



A rotary Pattern End data block is required to end the sequence repeated in the Rotary Pattern Loop data block.

- **Number**—total number of times the mill feature will be cut on the cylinder.
- **Z Distance**—the distance on the Z-axis between each repetition of the mill feature. The right-hand rule determines if Distance is positive or negative.
- **A Distance**—the distance (angle) on the rotary-axis between each repetition of the mill feature.
- **C Distance**—the distance (angle) on the tilt axis between each repetition of the mill feature.



Rotary pattern and standard pattern data blocks can be nested (i.e., entirely contained within another pattern). The order of execution for nested rotary pattern and standard pattern data blocks is from the inside to the outside.

This is an example of nested data blocks in a program (the indentations are used illustrate the order of execution; your Conversational part program will not have these indentations).

In the following example, this is the order of execution:

1. Holes and rotary Mill Frame operations contained within the Pattern Loop Rotate data block.
2. Standard Mill Circle operation contained within the Rotary Pattern Loop data block.

```
Rotary Pattern Loop
  Standard Mill Circle (or any other rotary or non-rotary data blocks)
  Pattern Loop Rotate
    Holes operation
    Rotary Mill Frame (or other rotary or non-rotary data blocks)
  Pattern End (ends the Pattern Loop Rotate)
Pattern End (ends the Rotary Pattern Loop)
```

Only one Rotary Position data block is required for nested Rotary Pattern Loop data blocks.

## Rotary Locations

The Rotary Pattern Locations data block is used to create a list of locations of a mill feature repeated on a cylinder. Up to 999 copies can be located anywhere on the part.

Each set of locations listed on the Rotary Patterns Location data block is a specific location on the cylinder, relative to part zero. If you want the mill feature to be cut at part zero, you must define the coordinates of part zero in one of the sets of locations.

These are the fields on the Rotary Pattern Locations data block for Tilt A Rotary C:

- **X**—X-axis coordinate where the mill feature will be located on the part.
- **Y**—Y-axis coordinate where the mill feature will be located on the part.
- **Z**—offset for the Z axis. Z is used when a vise or other fixture holds multiple parts at different levels.



- **A**—rotary-axis coordinate (angle) where the mill feature will be located on the part.
- **C**—rotary-axis coordinate (angle) where the mill feature will be located on the part.

⇒ A rotary Pattern End data block is required to end the sequence in the Rotary Pattern Locations data block.

⇒ After the rotary Pattern End data block has executed, the orientation of the machine axes will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Rotary Pattern operation, another Rotary Position data block will be required if the axes must be reoriented to a different position.

## Rotary Transform Plane

The Rotary Transform Plane data block is available with multiple rotary configurations; see *Rotary Transform Plane Block, on page 6 - 5* for an explanation of the fields on this screen.

## Pattern End

A Pattern End data block is required to end rotary Pattern Loop and rotary Pattern Locations operations. There are no fields in the Pattern End data block.

⇒ After the rotary Pattern End data block has executed, the orientation of the machine axes will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Rotary Pattern operation, another Rotary Position data block will be required if the axes must be reoriented to a different position.

- A Rotary Pattern Loop data block only modifies the rotary operations contained within the pattern.
- The subsequent Rotary Position data block defines the orientation of the machine axes after the pattern is executed, and can provide a reference point if Recovery Restart is used.
- If the Rotary Pattern End data block is the last data block of the part program, a subsequent Rotary Position data block is not necessary.
- If a non-rotary operation data block (e.g., holes operation) is used in a rotary loop, a Rotary Position data block is required before the non-rotary operation data block to position the axes before the operation is executed in the loop.

## Rotary Parameters

The Rotary Parameters data block is available with multiple rotary configurations; see *Rotary Parameters, on page 6 - 13* for an explanation of the fields on this screen.

## Rotary B Configuration

Rotary B configuration is used with horizontal (HTX) machines.

### Rotary Position

The Rotary Position data block is available with multiple rotary configurations; see *Rotary Position Block, on page 6 - 11* for an explanation of the fields on this screen.

### Rotary Milling

For rotary milling programs on an HTX machine, Universal Rotary configuration must be used; see *Universal Rotary Configuration, on page 6 - 32*.

### Rotary Patterns

The Rotary Patterns data block is available with multiple rotary configurations; see *Rotary Patterns, on page 6 - 12* for an explanation of the softkeys on this screen. The specific pattern data blocks for Rotary B configuration are explained below.

#### Rotary Loop

A rotary loop defines the number and locations a mill feature will be repeated on a cylinder. The initial mill feature is located at part zero and all subsequent copies are at a specific distance along the X-A axis of the cylinder.

These are the fields on the Rotary Pattern Loop data block for Rotary B:

⇒ A rotary Pattern End data block is required to end the sequence repeated in the Rotary Pattern Loop data block.

- **Number**—total number of times the mill feature will be cut on the cylinder.
- **Z Distance**—the distance on the Z-axis between each repetition of the mill feature. The right-hand rule determines if Distance is positive or negative.
- **B Distance** —the distance (angle) on the rotary axis between each repetition of the mill feature.



Rotary pattern and standard pattern data blocks can be nested (i.e., entirely contained within another pattern). The order of execution for nested rotary pattern and standard pattern data blocks is from the inside to the outside.

This is an example of nested data blocks in a program (the indentations are used illustrate the order of execution; your Conversational part program will not have these indentations).

In the following example, this is the order of execution:

1. Holes and rotary Mill Frame operations contained within the Pattern Loop Rotate data block.
2. Standard Mill Circle operation contained within the Rotary Pattern Loop data block.

Rotary Pattern Loop

Standard Mill Circle (or any other rotary or non-rotary data blocks)

Pattern Loop Rotate

Holes operation

Rotary Mill Frame (or other rotary or non-rotary data blocks)

Pattern End (ends the Pattern Loop Rotate)

Pattern End (ends the Rotary Pattern Loop)

Only one Rotary Position data block is required for nested Rotary Pattern Loop data blocks.

## Rotary Locations

The Rotary Pattern Locations data block is used to create a list of locations of a mill feature repeated on a cylinder. Up to 999 copies can be located anywhere on the part.

Each set of locations listed on the Rotary Patterns Location data block is a specific location on the cylinder, relative to part zero. If you want the mill feature to be cut at part zero, you must define the coordinates of part zero in one of the sets of locations.

These are the fields on the Rotary Pattern Locations data block for Rotary B:

- **X**—X-axis coordinate where the mill feature will be located on the part.
- **Y**—Y-axis coordinate where the mill feature will be located on the part.
- **Z**—offset for the Z axis. Z is used when a vise or other fixture holds multiple parts at different levels.
- **B**—rotary-axis coordinate (angle) where the mill feature will be located on the part.



A rotary Pattern End data block is required to end the sequence in the Rotary Pattern Locations data block.

⇒ After the rotary Pattern End data block has executed, the orientation of the machine axes will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Rotary Pattern operation, another Rotary Position data block will be required if the axes must be reoriented to a different position.

## Rotary Transform Plane

The Rotary Transform Plane data block is available with multiple rotary configurations; see *Rotary Transform Plane Block, on page 6 - 5* for an explanation of the fields on this screen.

## Pattern End

A Pattern End data block is required to end rotary Pattern Loop and rotary Pattern Locations operations. There are no fields in the Pattern End data block.

⇒ After the rotary Pattern End data block has executed, the orientation of the machine axes will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Rotary Pattern operation, another Rotary Position data block will be required if the axes must be reoriented to a different position.

- A Rotary Pattern Loop data block only modifies the rotary operations contained within the pattern.
- The subsequent Rotary Position data block defines the orientation of the machine axes after the pattern is executed, and can provide a reference point if Recovery Restart is used.
- If the Rotary Pattern End data block is the last data block of the part program, a subsequent Rotary Position data block is not necessary.
- If a non-rotary operation data block (e.g., holes operation) is used in a rotary loop, a Rotary Position data block is required before the non-rotary operation data block to position the axes before the operation is executed in the loop.

## Rotary Parameters

The Rotary Parameters data block is available with multiple rotary configurations; see *Rotary Parameters, on page 6 - 13* for an explanation of the fields on this screen.

# Tilt B Rotary C Configuration

## Rotary Position

The Rotary Position data block is available with multiple rotary configurations; see *Rotary Position Block*, on page 6 - 11 for an explanation of the fields on this screen.

## Rotary Lines and Arcs

Rotary line and arc segments are used to create a rotary mill contour. A rotary mill contour is similar to a standard mill contour, except the rotary contour is wrapped around a cylinder.

### Start Segment

These are the fields on the Rotary BC Mill Contour Start segment data block:

- **Z Start**—Z-axis coordinate for first segment's starting point.
- **C Angle**—rotary-axis coordinate (angle) for the first segment's starting point.
- **Radius Start**—point where the Z-axis plunge feedrate begins.
- **Radius Bottom**—the bottom of the finished segment and the location where the Z-axis plunge feedrate ends.

### Line Segment

These are the fields on the Rotary BC Mill Contour Line segment data block:

- **Z End**—Z-axis coordinate for the ending point of the line. The Z End value is the depth of the cut at the line end point and is carried forward from the previous segment. Retain the Z End value or type in a new value.
- **C End**—C-axis coordinate for ending point of the line.
- **Radius End**—rotary-axis coordinate (angle) for the ending point of the line.
- **Z Start**—point where the Z-axis plunge feedrate begins.
- **C Start**—C-axis coordinate start point programmed in the previous segment. The value of C Start can be changed only in the segment in which it was created.
- **Radius Start**—rotary-axis start point coordinate programmed in the previous segment. The value of Radius Start can be changed only in the segment in which it was created.

### Arc Segment

These are the fields on the Rotary BC Mill Contour Arc segment data block:

- **Direction**—the direction of the arc from the start point, Clockwise or Counter Clockwise.
- **Z End**—point where the Z-axis plunge into the cylinder ends.
- **C End**—rotary-axis coordinate (angle) of the arc's end point.

- **Radius End**—Y-axis coordinate of the arc's end point.
- **Z Center**—Z-axis coordinate of the arc's center point.
- **C Center**—rotary-axis coordinate (angle) of the arc's center point.
- **Arc Radius**—the radius of the arc, if known.
- **Sweep Angle**—identifies the angular distance in degrees from the start point of the arc to the end point. The range is  $-360^{\circ}$  to  $360^{\circ}$ . This field is available when the Arc Sweep Angle option is installed.
- **Z Start**—Z-axis coordinate start point programming in the previous segment. The value of Z Start can be changed only in the segment in which it was created.
- **C Start**—rotary-axis coordinate start point programmed in the previous segment. The value of C Start can be changed only in the segment in which it was created.
- **Radius Start**—Y-axis coordinate start point programmed in the previous segment. The value of Radius Start can be changed only in the segment in which it was created.

## Blend Arc Segment

These are the fields on the Rotary BC Mill Contour Blend Arc segment data block:

- **Arc Radius**—the radius of the arc, if known.
- **Z End**—Z-axis coordinate of the arc's end point.
- **C End**—rotary-axis coordinate (angle) of the arc's end point.
- **Z Center**—Z-axis coordinate of the arc's center point.
- **C Center**—rotary-axis coordinate (angle) of the arc's center point.
- **Direction**—the direction of the arc from the start point, Clockwise or Counterclockwise.
- **Z Start**—Z-axis coordinate start point programmed in the previous segment. The value of Z Start can be changed only in the segment in which it was created.
- **C Start**—rotary-axis coordinate start point programmed in the previous segment. The value of C Start can be changed only in the segment in which it was created.

## Mill Contour End Block

A Contour End data block is required to end rotary Mill Contour operations. There are no fields in the Contour End data block.

## Rotary Circle

A rotary mill circle is similar to a standard mill circle, except the rotary mill circle is wrapped around a cylinder. These are the fields on the Rotary Mill Circle data block:

These are the fields on the Rotary BC Circle data block:

- **Z Center**—Z-axis coordinate for the center point of the circle.

- **C Center**—rotary-axis coordinate (angle) for the center point of the circle.
- **Radius**—radius of the milled circle.
- **Radius Start**—location where the Z-axis plunge feedrate begins.
- **Radius Bottom**—location where the Z-axis plunge feedrate ends.

## Rotary Frame

A rotary mill frame is similar to a mill frame, except the rotary mill frame is wrapped around a cylinder.

These are the fields on the Rotary BC Mill Frame data block:

- **Z Corner**—Z-axis coordinate of any one of the four corners of the frame. This corner becomes the *reference corner*.
- **C Corner**—rotary-axis coordinate (angle) of the reference corner of the frame.
- **Z Length**—Z-axis coordinate measured from the reference corner.
  - Z Length is positive if the reference corner is at the left side of the rectangle.
  - Z Length is negative if the reference corner is at the right side of the rectangle.
- **C Length**—rotary-axis coordinate (angle) from the reference corner.
  - C Length is positive if the location of the frame is clockwise from the reference corner.
  - C Length is negative if the location of the frame is counter clockwise from the reference corner.
- **Radius Start**—start point for the Z-axis plunge feedrate.
- **Radius Bottom**—end point for the Z-axis plunge feedrate.
- **Corner Radius**—radius of the reference corner. This value will be the same for all corners of the rotary frame.

## Rotary Patterns

The Rotary Patterns data block is available with multiple rotary configurations; see *Rotary Patterns, on page 6 - 12* for an explanation of the softkeys on this screen. The specific pattern data blocks for Tilt B Rotary C configuration are explained below.

### Rotary Loop

A rotary loop defines the number and locations a mill feature will be repeated on a cylinder. The initial mill feature is located at part zero and all subsequent copies are at a specific distance along the X-A axis of the cylinder.

These are the fields on the Rotary Pattern Loop data block for Tilt B Rotary C:



A rotary Pattern End data block is required to end the sequence repeated in the Rotary Pattern Loop data block.

- **Number**—total number of times the mill feature will be cut on the cylinder.
- **Z Distance**—the distance on the Z-axis between each repetition of the mill feature. The right-hand rule determines if Distance is positive or negative.
- **C Distance** —the distance (angle) on the C-axis between each repetition of the mill feature.



Rotary pattern and standard pattern data blocks can be nested (i.e., entirely contained within another pattern). The order of execution for nested rotary pattern and standard pattern data blocks is from the inside to the outside.

This is an example of nested data blocks in a program (the indentations are used illustrate the order of execution; your Conversational part program will not have these indentations).

In the following example, this is the order of execution:

1. Holes and rotary Mill Frame operations contained within the Pattern Loop Rotate data block.
2. Standard Mill Circle operation contained within the Rotary Pattern Loop data block.

```
Rotary Pattern Loop
  Standard Mill Circle (or any other rotary or non-rotary data blocks)
  Pattern Loop Rotate
    Holes operation
    Rotary Mill Frame (or other rotary or non-rotary data blocks)
  Pattern End (ends the Pattern Loop Rotate)
Pattern End (ends the Rotary Pattern Loop)
```

Only one Rotary Position data block is required for nested Rotary Pattern Loop data blocks.

## Rotary Locations

The Rotary Pattern Locations data block is used to create a list of locations of a mill feature repeated on a cylinder. Up to 999 copies can be located anywhere on the part.

Each set of locations listed on the Rotary Patterns Location data block is a specific location on the cylinder, relative to part zero. If you want the mill feature to be cut at part zero, you must define the coordinates of part zero in one of the sets of locations.

These are the fields on the Rotary Pattern Locations data block for Tilt B Rotary C:

- **X**—X-axis coordinate where the mill feature will be located on the part.
- **Y**—Y-axis coordinate where the mill feature will be located on the part.
- **Z**—offset for the Z axis. Z is used when a vise or other fixture holds multiple parts at different levels.
- **B**—rotary-axis coordinate (angle) where the mill feature will be located on the part.
- **C**—rotary-axis coordinate (angle) where the mill feature will be located on the part.



- ⇒ A rotary Pattern End data block is required to end the sequence in the Rotary Pattern Locations data block.
- ⇒ After the rotary Pattern End data block has executed, the orientation of the machine axes will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Rotary Pattern operation, another Rotary Position data block will be required if the axes must be reoriented to a different position.

## **Rotary Transform Plane**

The Rotary Transform Plane data block is available with multiple rotary configurations; see *Rotary Transform Plane Block, on page 6 - 5* for an explanation of the fields on this screen.

## **Pattern End**

A Pattern End data block is required to end rotary Pattern Loop and rotary Pattern Locations operations. There are no fields in the Pattern End data block.

- ⇒ After the rotary Pattern End data block has executed, the orientation of the machine axes will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Rotary Pattern operation, another Rotary Position data block will be required if the axes must be reoriented to a different position.

- A Rotary Pattern Loop data block only modifies the rotary operations contained within the pattern.
- The subsequent Rotary Position data block defines the orientation of the machine axes after the pattern is executed, and can provide a reference point if Recovery Restart is used.
- If the Rotary Pattern End data block is the last data block of the part program, a subsequent Rotary Position data block is not necessary.
- If a non-rotary operation data block (e.g., holes operation) is used in a rotary loop, a Rotary Position data block is required before the non-rotary operation data block to position the axes before the operation is executed in the loop.

## **Rotary Parameters**

The Rotary Parameters data block is available with multiple rotary configurations; see *Rotary Parameters, on page 6 - 13* for an explanation of the field on this screen.

## Universal Rotary Configuration

### Rotary Position Block

A Rotary Position data block is used to move the machine's axes to a specific location at Rapid feedrate. A new Rotary Position data block is required each time the rotary-axis must be repositioned in the part program.

The tool will move to the Retract Plane, Safety Plane, or Home Z position before the table rotates into position each time a Rotary Position data block with rotary-axis positioning is executed in a Conversational part program.

⇒ A Rotary Position data block should be included as the first data block in a Conversational rotary part program to define the initial orientation of the rotary axis.

These are the fields on the Rotary Position data block:

- **Stop**—when set to Yes, pauses program execution after the Rotary Position data block is executed. To restart the program, press the Start Cycle console button.

#### First Move (Z Retract)

- **Retract Type**—select the Z level to which Z-axis retracts at the beginning of the Rotary Position data block.
  - **Z Home**—Z-axis will move at Rapid feedrate to the position defined in Z Machine field.
  - **Z Position**—Z-axis will move at Rapid feedrate to the position entered in the Z Position field.
- **Z Position**—the position to which Z-axis retracts when Z Position is selected for the Retract Type.

#### Second Move

- **Enable**—specify YES to enable axis movement
- **X Position**—defines the location to which the X axis will move before the rotary-axis orients.
- **Y Position**—defines the location to which the Y axis will move before the rotary-axis orients.

#### Third Move (End Position)

- **X Position**—X-axis coordinate relative to Part Zero X. Enabled when the Enable field is set to YES.
- **Y Position**—Y-axis coordinate relative to Part Zero X. Enabled when the Enable field is set to YES.
- **IV Angle**—rotary-axis coordinate (angle) relative to Part Zero A or Part Zero C, depending on the configuration of your machine. Enabled when the Enable field is set to YES.

- **V Angle**—rotary-axis coordinate (angle) relative to Part Zero A or Part Zero C, depending on the configuration of your machine. Enabled when the Enable field is set to YES.

## Rotary Lines and Arcs

Rotary line and arc segments are used to create a rotary mill contour. A rotary mill contour is similar to a standard mill contour, except the rotary contour is wrapped around a cylinder.

### Start Segment

These are the fields on the Universal Rotary Mill Contour Start segment data block:

- **Axis Start**—axis coordinate for first segment's starting point.
- **Angle Start**—rotary-axis coordinate (angle) for the first segment's starting point.
- **Radius Start**—point where the Z-axis plunge feedrate begins.
- **Radius Bottom**—the bottom of the finished segment and the location where the Z-axis plunge feedrate ends.

### Line Segment

These are the fields on the Universal Rotary Mill Contour line segment data block:

- **Axis End**—axis coordinate for the ending point of the line. The Axis End value is the depth of the cut at the line end point and is carried forward from the previous segment. Retain the Axis End value or type in a new value.
- **Angle End**—axis coordinate for ending point of the line.
- **Radius End**—rotary-axis coordinate (angle) for the ending point of the line.
- **Axis Start**—axis coordinate start point programmed in the previous segment. The value of Axis Start can be changed only in the segment in which it was created.
- **Angle Start**—point where the Z-axis plunge feedrate begins.
- **Radius Start**—rotary-axis start point coordinate programmed in the previous segment. The value of Radius Start can be changed only in the segment in which it was created.

### Arc Segment

These are the fields on the Universal Rotary Mill Contour Arc segment data block:

- **Direction**—the direction of the arc from the start point, Clockwise or Counter Clockwise.
- **Axis End**—rotary-axis coordinate (angle) of the arc's end point.
- **Angle End**—Y-axis coordinate of the arc's end point.
- **Radius End**—point where the Z-axis plunge into the cylinder ends.
- **Axis Center**—Z-axis coordinate of the arc's center point.
- **Angle Center**—rotary-axis coordinate (angle) of the arc's center point.

- **Radius**—the radius of the arc, if known.
- **Sweep Angle**—identifies the angular distance in degrees from the start point of the arc to the end point. The range is  $-360^{\circ}$  to  $360^{\circ}$ . This field is available when the Arc Sweep Angle option is installed.
- **Axis Start**—axis coordinate start point programmed in the previous segment. The value of Axis Start can be changed only in the segment in which it was created.
- **Angle Start**—rotary-axis coordinate start point programmed in the previous segment. The value of Angle Start can be changed only in the segment in which it was created.
- **Radius Start**—Z-axis coordinate start point programming in the previous segment. The value of Z Start can be changed only in the segment in which it was created.

## Blend Arc Segment

These are the fields on the Universal Rotary Mill Contour Blend Arc segment data block:

- **Direction**—the direction of the arc from the start point, Clockwise or Counter Clockwise.
- **Axis End**—rotary-axis coordinate (angle) of the arc's end point.
- **Angle End**—Y-axis coordinate of the arc's end point.
- **Axis Center**—Z-axis coordinate of the arc's center point.
- **Angle Center**—rotary-axis coordinate (angle) of the arc's center point.
- **Radius**—the radius of the arc, if known.
- **Axis Start**—axis coordinate start point programmed in the previous segment. The value of Axis Start can be changed only in the segment in which it was created.
- **Angle Start**—rotary-axis coordinate start point programmed in the previous segment. The value of Angle Start can be changed only in the segment in which it was created.

## Rotary Circle

A rotary mill circle is similar to a standard mill circle, except the rotary mill circle is wrapped around a cylinder. These are the fields on the Rotary Mill Circle data block:

These are the fields on the Universal Rotary Mill Circle data block:

- **Axis Center**—Z-axis coordinate for the center point of the circle.
- **Angle Center**—rotary-axis coordinate (angle) for the center point of the circle.
- **Radius**—radius of the milled circle.
- **Radius Start**—location where the Z-axis plunge feedrate begins.
- **Radius Bottom**—location where the Z-axis plunge feedrate ends.

## Rotary Frame

A rotary mill frame is similar to a mill frame, except the rotary mill frame is wrapped around a cylinder.

These are the fields on the Universal Rotary Mill Frame data block:


- **Axis Start**—axis coordinate of any one of the four corners of the frame. This corner becomes the *reference corner*.
- **Angle Start**—rotary-axis coordinate (angle) of the reference corner of the frame.
- **Axis Length**—axis coordinate measured from the reference corner.
  - Axis Length is positive if the reference corner is at the left side of the rectangle.
  - Axis Length is negative if the reference corner is at the right side of the rectangle.
- **Angle Length**—rotary-axis coordinate (angle) from the reference corner.
  - Angle Length is positive if the location of the frame is clockwise from the reference corner.
  - Angle Length is negative if the location of the frame is counter clockwise from the reference corner.
- **Radius Start**—start point for the Z-axis plunge feedrate.
- **Radius Bottom**—end point for the Z-axis plunge feedrate.
- **Corner Radius**—radius of the reference corner. This value will be the same for all corners of the rotary frame.

## Rotary True Type Font

Rotary True Type Font is available with Universal Rotary configuration only. These are the True Type Lettering fields:

- **Axis Ref Location**—the location of the reference point in the text:
  - Start of text
  - End of text
  - center of text
- **Axis Reference**—the reference coordinate of the Sizing Box.
- **Angle Ref Location**—the location of the reference point in the text:
  - Bottom of text
  - Top of text
  - Center of text
- **Angle Reference**—the reference coordinate of the Sizing Box.
- **Text Width**— the width of the text.
- **Text Height**—the height of the text.

- **Text**—the text to be milled.
- **Radius Start**—the Z coordinate at which plunge feedrate begins.
- **Radius Bottom**—Z bottom coordinate
- **Orientation**—the angle to which the text should be rotated.
- **Mapping Mode**—specifies the height dimension of the lettering:
  - **Body Only**—defines the height of the body of the lettering. Ascenders and descenders are calculated automatically.
  - **Descended**—defines the height of the body and descenders of the lettering. Ascenders are calculated automatically.
  - **Ascended**—defines the height of the body and ascenders of the lettering. Descenders are calculated automatically.
  - **Full Font**—defines the height of the body, ascenders, and descenders of the lettering. No part of the lettering is calculated automatically.

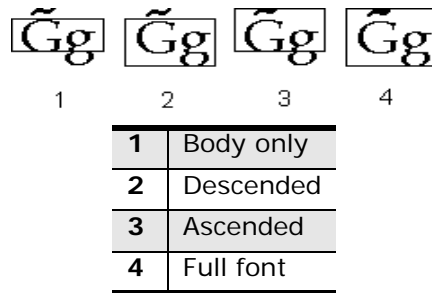

**Figure 6-4. Y Mapping**

- **Font**—the lettering font. The font selection dialog box is opened with the Select New Font softkey, when the cursor is in the Text field.

## Available Fonts for Mill True-Type Lettering

Arial (default)	Marlett
Arial Black	Microsoft Sans Serif
Comic Sans MS	Palatino Linotype
Courier New	Sylfaen
Euro Sign	Tahoma
Frame5 Font	Times New Roman
Franklin Gothic Medium	Trebuchet MS
Georgia	Verdana
Impact	Webdings
Lucida Console	Wingdings
Lucida Sans Unicode	ZWAdobeF

- **Outside Cylinder**—specifies if text is milled on the inside or outside of a cylinder:
  - Yes—text is milled on the outside of a cylinder.
  - No—text is milled on the inside of a cylinder.

## Rotary Patterns

The Rotary Patterns data block is available with multiple rotary configurations; see *Rotary Patterns, on page 6 - 12* for an explanation of the softkeys on this screen. The specific pattern data blocks for Universal Rotary are explained below.

### Rotary Loop

A rotary loop defines the number and locations a mill feature will be repeated on a cylinder. The initial mill feature is located at part zero and all subsequent copies are at a specific distance along the X-A axis of the cylinder.

These are the fields on the Universal Rotary Pattern Loop data block:

⇒ A rotary Pattern End data block is required to end the sequence repeated in the Rotary Pattern Loop data block.

- **Number**—total number of times the mill feature will be cut on the cylinder.
- **Axis Distance**—the distance on the X-axis between each repetition of the mill feature. The right-hand rule determines if Distance is positive or negative.
- **Angle Distance**—the distance (angle) on the rotary-axis between each repetition of the mill feature.



Rotary pattern and standard pattern data blocks can be nested (i.e., entirely contained within another pattern). The order of execution for nested rotary pattern and standard pattern data blocks is from the inside to the outside.

This is an example of nested data blocks in a program (the indentations are used illustrate the order of execution; your Conversational part program will not have these indentations).

In the following example, this is the order of execution:

1. Holes and rotary Mill Frame operations contained within the Pattern Loop Rotate data block.
2. Standard Mill Circle operation contained within the Rotary Pattern Loop data block.

Rotary Pattern Loop

Standard Mill Circle (or any other rotary or non-rotary data blocks)

Pattern Loop Rotate

Holes operation

Rotary Mill Frame (or other rotary or non-rotary data blocks)

Pattern End (ends the Pattern Loop Rotate)

Pattern End (ends the Rotary Pattern Loop)

Only one Rotary Position data block is required for nested Rotary Pattern Loop data blocks.

## Rotary Locations

The Rotary Pattern Locations data block is used to create a list of locations of a mill feature repeated on a cylinder. Up to 999 copies can be located anywhere on the part.

Each set of locations listed on the Rotary Patterns Location data block is a specific location on the cylinder, relative to part zero. If you want the mill feature to be cut at part zero, you must define the coordinates of part zero in one of the sets of locations.

These are the fields on the Universal Rotary Pattern Locations data block:

- **Axis**—**X-axis** coordinate where the mill feature will be located on the part.
- **Angle**—**Y-axis** coordinate where the mill feature will be located on the part.



A rotary Pattern End data block is required to end the sequence in the Rotary Pattern Locations data block.



After the rotary Pattern End data block has executed, the orientation of the machine axes will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Rotary Pattern operation, another Rotary Position data block will be required if the axes must be reoriented to a different position.



## Rotary Rectangular

Rotary Rectangular Pattern Block is available only with the Universal Rotary configuration. Fields are:

- **Axis Number**—the number of times the programmed routine will be repeated along a line parallel to the rotary axis.
- **Angle Number**—the number of times the programmed routine will be repeated along the rotary axis.
- **Axis Distance**—the distance between the patterns parallel to the rotary axis.
- **Angle Distance**—the distance between the patterns along the rotary axis.

## Rotary Mirror

Rotary Mirror Pattern Block is available only with the Universal Rotary configuration. Fields are:

- **Keep Original**—indicate if you want to machine the original pattern in addition to the mirrored pattern.
  - Yes—machine original pattern
  - No—machine only mirrored pattern
- **Cylinder Angle**—the coordinate of a point on the mirror line.
- **Cylinder Axis**—the coordinate of a point on the mirror line.
- **Angle**—the orientation of the mirror line which passes through the point defined above (measured in XY from 3 o'clock).

## Rotary Transform Plane

Transform Plane is used in a Conversational rotary program to position part zero for a non-rotary data block to any orientation of any plane of your rotary- or tilt-axis machine. For example, use Transform Plane when you want to repeat a non-rotary feature (e.g., mill contour, holes) on multiple sides of a part.

## Rotary Transform Plane End

The Transform Plane End block ends the Transform Plane operation.

After the Transform Plane End data block has executed, the orientation of the part will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Transform Plane operation, another Rotary Position data block will be required if the part must be reorientated to a different position.

## Pattern End

A Pattern End data block is required to end rotary Pattern Loop and rotary Pattern Locations operations. There are no fields in the Pattern End data block.

⇒ After the rotary Pattern End data block has executed, the orientation of the machine axes will remain at the position defined in the most recent Rotary Position data block.

If the part program continues beyond the Rotary Pattern operation, another Rotary Position data block will be required if the axes must be reoriented to a different position.

- A Rotary Pattern Loop data block only modifies the rotary operations contained within the pattern.
- The subsequent Rotary Position data block defines the orientation of the machine axes after the pattern is executed, and can provide a reference point if Recovery Restart is used.
- If the Rotary Pattern End data block is the last data block of the part program, a subsequent Rotary Position data block is not necessary.
- If a non-rotary operation data block (e.g., holes operation) is used in a rotary loop, a Rotary Position data block is required before the non-rotary operation data block to position the axes before the operation is executed in the loop.

## Rotary Parameters

The Rotary Orientation field defines the axis configuration: Rotary A/AB, Rotary B, Rotary AC, Rotary BC, and User Defined. User Defined orientation requires the Axis of Rotation (Cylinder Axis vector) and Zero Angle vector. The Zero Angle vector describes the zero-degree Cylindrical Point vector direction with respect to the current coordinate system. These vectors must be perpendicular otherwise the control will throw an error. Other Rotary Orientation selections (Rotary A/AB, Rotary B, Rotary AC, Rotary BC) are available to automatically configure the Axis of Rotation and Zero Angle vectors to describe rotary features for Hurco's current program type configurations.


## Calculating X- and Z-Axis Positions After a Tilt-Axis Move

The initial location of a point on a cylindrical workpiece will be at different X and Z coordinates after the tilt-axis is moved into position. Some tilt-axis tables have part zero calibrated at 0° vertical, and some have part zero calibrated at 0° horizontal. Use the formulas below that correspond to the part zero calibration of your machine.

### Part Zero Calibrated at Zero Degree Vertical

Follow these steps to determine the relative location of X and Z when the tilt-axis is positioned at 0° in the vertical plane (as shown in the figure below):

1. Use the formula  $L = Z_1 - Z_3$  to calculate L, the distance between the point's initial location and the location of the same point after the workpiece is positioned to a known angle on the tilt-axis.
2. Use the formula  $X_2 = L \sin B$  to determine the location of  $X_2$ , the location of the X coordinate on the workpiece after the tilt-axis has been moved.
3. Use the formula  $Z_2 = L - (L \cos B)$  to determine  $Z_2$ , the location of the Z coordinate on the workpiece after the tilt-axis has been moved.

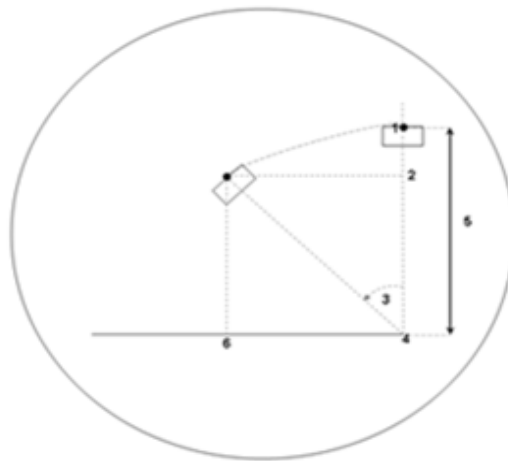


1	$Z_1$
2	$Z_2$
3	$B$ (tilt-axis) = 0°
4	$Z_3$
5	L
6	$X_2$

**Figure 6-5. Vertical Tilt-Axis Example**

## Part Zero Calibrated at Zero Degree Horizontal

Follow these steps to determine the relative location of X and Z when the tilt-axis is positioned at 0° in the horizontal plane (as shown in the figure below).

1. Use the formula  $L = X_1 - X_3$  to calculate L, the distance between the point's initial location and the location of the same point after the workpiece is positioned to a known angle on the tilt-axis.
2. Use the formula  $X_2 = L - (L \cos B)$  to determine the location of  $X_2$ , the location of the X coordinate on the workpiece after the tilt-axis has been moved.
3. Use the formula  $Z_2 = L \sin B$  to determine the location of  $Z_2$ , the location of the Z coordinate on the workpiece after the tilt-axis has been moved.

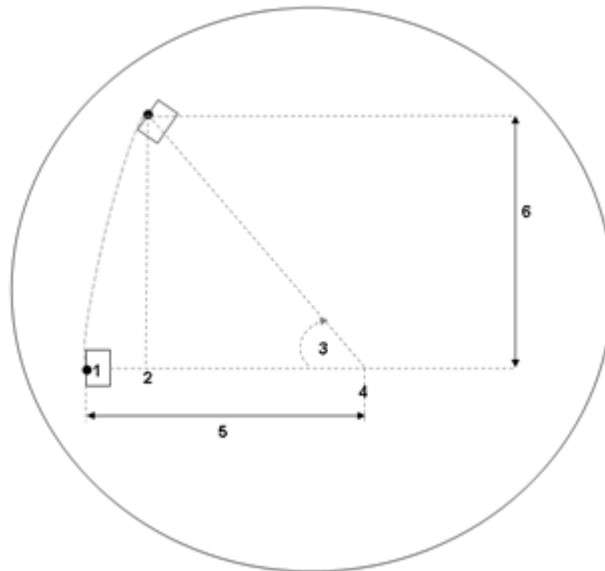


1	$X_1$
2	$X_2$
3	$B$ (tilt-axis) = 0°
4	$X_3$
5	L
6	$Z_2$

**Figure 6-6. Horizontal Tilt-Axis Example**

# Example Programs

## Rotary Programming Examples

The figure below shows a Rotary Mill Frame created on a cylinder.

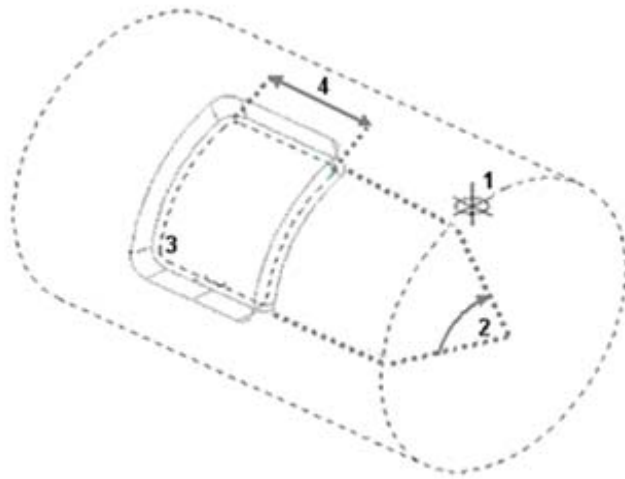

No.	Description
1	PART ZERO
2	A LENGTH (arrow indicates positive axis movement)
3	Reference Corner (X Corner/A Corner)
4	X LENGTH


**Figure 6-7. Rotary Mill Frame Part Drawing (cylinder shown for reference)**

This is a summary of the program used to create the part shown in the figure above:

DB	Data Block/Field Name	Value	Notes
1	ROTARY PARAMETERS		Defines the cylinder.
	CYLINDER RADIUS	2.0000	
2	ROTARY POSITION		Moves the machine axes.
	X	0.0000	X-axis position for the rotary operation.
	Y	31.0352	Y-axis position for the rotary operation.
	A	0.000	Rotary-axis angle for the rotary operation.
3	ROTARY MILL FRAME		
	X CORNER	-1.0000	X-axis coordinate for Reference Corner.
	A CORNER	-90.000	Rotary-axis angle for Reference Corner.
	X LENGTH	2.000	X coordinate length from Reference Corner.
	A LENGTH	75.00	Rotary-axis length from Reference Corner.
	CORNER RADIUS	0.2500	Radius of each of the corners.

**Table 6-1. Rotary Mill Frame Part Program Summary**

The figure below shows a helix created from a cylinder using Rotary Mill Contour. The threads shown in the drawing below are on the outside of the cylinder.

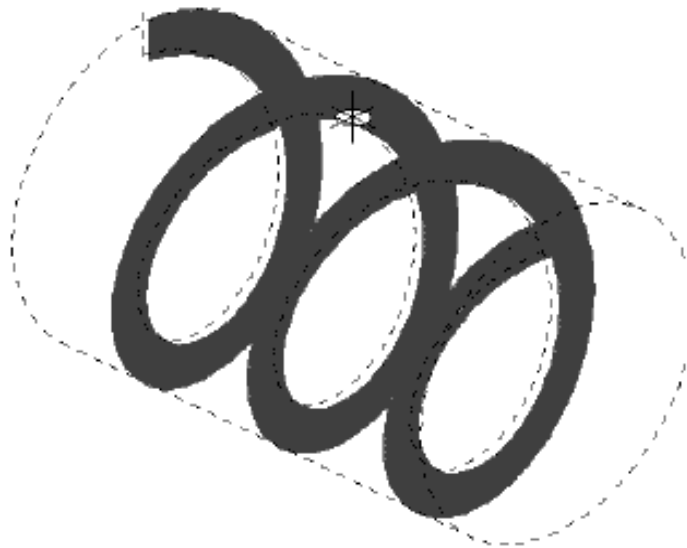


**Figure 6-8. Threading Part Drawing (cylinder shown for reference)**

This is a summary of the program used to create the part shown in the figure above:

DB	Data Block/Field Name	Value	Notes
1	ROTARY PARAMETERS		Defines the cylinder.
	CYLINDER RADIUS	2.0000	
2	ROTARY POSITION		Moves the machine axes.
	X	0.000	X-axis position for the rotary operation.
	Y	0.0000	Y-axis position for the rotary operation.
	A	0.000	Rotary-axis angle for the rotary operation.
3	ROTARY MILL CONTOUR		Creates the rotary mill contour.
	Segment 0 Start		
	X START	0.000	Initial X-axis location of the tool on the part.
	A START	0.000	Initial rotary-axis location of tool on the part.
	3.1	Segment 1 Line	
	X END	-6.000	Final X-axis location at the end of the helix.
	A END	1080.000	Rotary-axis location after the helix is cut. A END is number of degrees of rotation for rotary axis: (3 rotations x 360° = 1080°).

**Table 6-2. Threading Part Program Summary**

The figure below shows a single hole drilled into a cylinder.

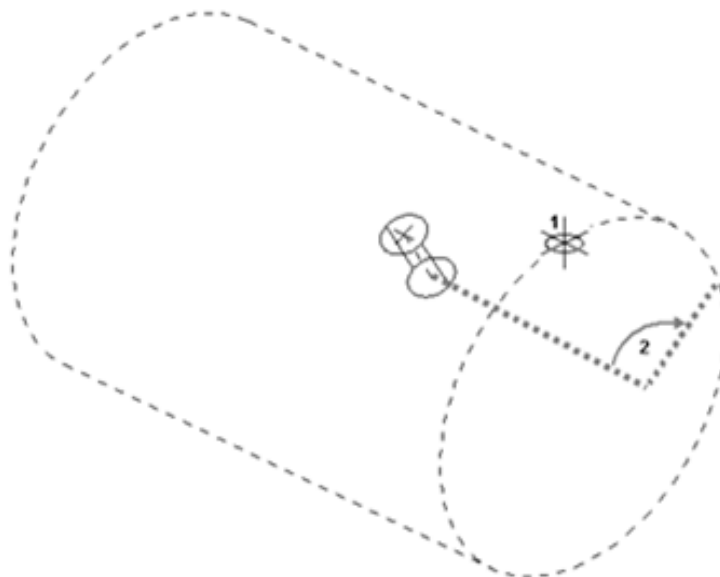

No.	Description
1	PART ZERO
2	A (arrow indicates positive axis movement)


**Figure 6–9. Single Hole Part Drawing (cylinder shown for reference)**

This is a summary of the program used to create the part shown in the figure above:

DB	Data Block/Field Name	Value	Notes
1	ROTARY PARAMETERS		Defines the cylinder.
	CYLINDER RADIUS	2.0000	
2	ROTARY POSITION		Moves the machine axes.
	X	-1.5000	X-axis position for the hole location on the cylinder. X is -1.5000 because the part must move in the negative direction from part zero.
	Y	0.0000	Y-axis position for the hole location on the cylinder.
	A	30.000	Rotary-axis angle for the hole location on the cylinder.
3	HOLES		
3.1	DRILL		Specifies the hole operations (same as for 3-axis milling, drilling, tap etc. operations).

**Table 6–3. Hole Part Program Summary**

The figure below shows a pattern of holes on a cylinder created with a Rotary Pattern Loop.

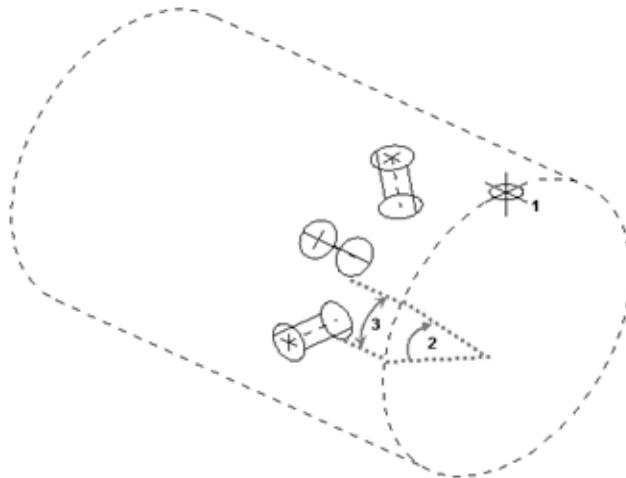



No.	Description
1	PART ZERO
2	A DISTANCE (arrow indicates positive axis movement)
3	X DISTANCE


**Figure 6–10. Rotary Pattern Loop Part Drawing (cylinder shown for reference)**

This is a summary of the program used to create the part shown in the figure above:

DB	Data Block/Field Name	Value	Notes
1	ROTARY PARAMETERS		Defines the cylinder.
	CYLINDER RADIUS	2.0000	
2	ROTARY PATTERN LOOP		
	X DISTANCE	0.0000	Distance on the X-axis between each hole.
	A DISTANCE	40.000	Angle on the rotary-axis between each hole.
3	ROTARY POSITION		Defines the position of machine axes.
	X	-1.5000	X-axis position during pattern execution.
	Y	0.0000	Y-axis position during pattern execution.
	A	-10.000	Rotary-axis position (angle) during pattern execution.
4	HOLES		
4.1	DRILL		Specifies hole operation. This is same data block used for 3-axis drilling, tap, etc.
4.2	LOCATIONS		Location of the initial hole on the cylinder.
	X	-1.5000	X-axis position of initial hole on the part.
	A	0.0000	Rotary-axis position of initial hole on part.
5	PATTERN END		Ends rotary pattern loop. The machine's axes will return to the position they were at before this program was executed.

**Table 6–4. Rotary Pattern Loop Part Program Summary**

The figure below shows a rectangular workpiece created on a WinMax Mill 4-axis machine using the Transform Plane feature. Standard mill contour and Rotary Position data blocks were used to remove the material from the cylinder to make the rectangular part.

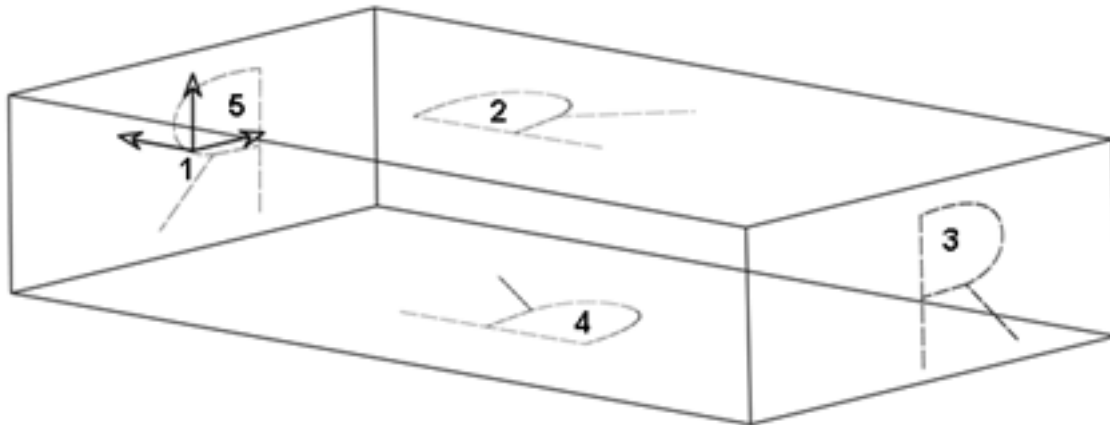

No.	Description
1	PART ZERO
2	Initial non-rotary contour in X-Y plane to create first side of part
3	Non-rotary contour repeated in first transformed plane to create second side of part
4	Non-rotary contour repeated in second transformed plane to create third side of part
5	Non-rotary contour repeated in third transformed plane to create fourth side of part

**Figure 6–11. 4-axis Part Created Using Transform Plane**

This is a summary of the program used to create the part shown in the figure above:

DB	Data Block/Field Name	Value	Notes
1	ROTARY PARAMETERS		Defines the cylinder.
	CYLINDER RADIUS	85.195	
2	ROTARY POSITION		Moves the machine axes.
	X	0.000	X-axis position of rotary table.
	Y	0.000	Y-axis position of rotary table.
	A	0.000	Rotary-axis remains at machine zero.
3	MILL CONTOUR		Non-rotary mill contour subprogram to create the letter R on the X-Y plane of part.


DB	Data Block/Field Name	Value	Notes
4	ROTARY POSITION		Moves the machine axes
	X	0.000	X-axis position of rotary table for second side of part.
	Y	0.000	Y-axis position of rotary table for second side of part.
	A	270.000	Rotary-axis moves 270° from machine zero for second side of the part.
	TRANSFORM PART ZERO	YES	Activates Transform Plane.
5	TRANSFORM PLANE REFERENCE POINTS		Positions part zero for the transformed plane for second side of the part.
	X	0.000	
	Y	-38.100	
	Z	0.000	
6	MILL CONTOUR		Non-rotary mill frame with part zero at location defined in data block#5.
7	TRANSFORM PLANE END		Ends the Transform Plane.
8	ROTARY POSITION		Moves the machine axes.
	X	0.000	X-axis position of rotary table for third side of part.
	Y	0.000	Y-axis position of rotary table for third side of part.
	A	180.000	Rotary-axis moves 180° from machine zero for third side of part.
9	TRANSFORM PART ZERO	YES	Activates Transform Plane.
10	TRANSFORM PLANE REFERENCE POINTS		Positions part zero for the transformed plane for third side of part.
	X	0.000	
	Y	0.000	
	Z	0.000	
11	MILL CONTOUR		Non-rotary mill frame block with part zero at location defined in data block #10.
12	TRANSFORM PLANE END		Ends the Transform Plane.

<b>DB</b>	<b>Data Block/Field Name</b>	<b>Value</b>	<b>Notes</b>
13	ROTARY POSITION		Moves the machine axes.
	X	0.000	X-axis position of rotary table for final side of part.
	Y	0.000	Y-axis position of rotary table for final side of part.
	A	90.000	Rotary-axis position at 90° from machine zero for final side of part.
	TRANSFORM PART ZERO	YES	Activates Transform Plane.
14	TRANSFORM PLANE REFERENCE POINTS		Positions part zero for the transformed plane for final side of part.
	X	0.000	
	Y	38.100	
	Z	0.000	
15	PATTERN LOOP ROTATE		
16	MILL CONTOUR		Non-rotary mill frame block with part zero at location defined in data block #14.
17	PATTERN END		Ends the Pattern Loop Rotate operation.
18	TRANSFORM PLANE END		Ends the Transform Plane.

**Table 6-5. 4-Axis Transform Plane Program Summary**

## Tilt-Axis Programming Examples

The figure below shows a bolt hole drilled into a cylindrical part tilted 90°.

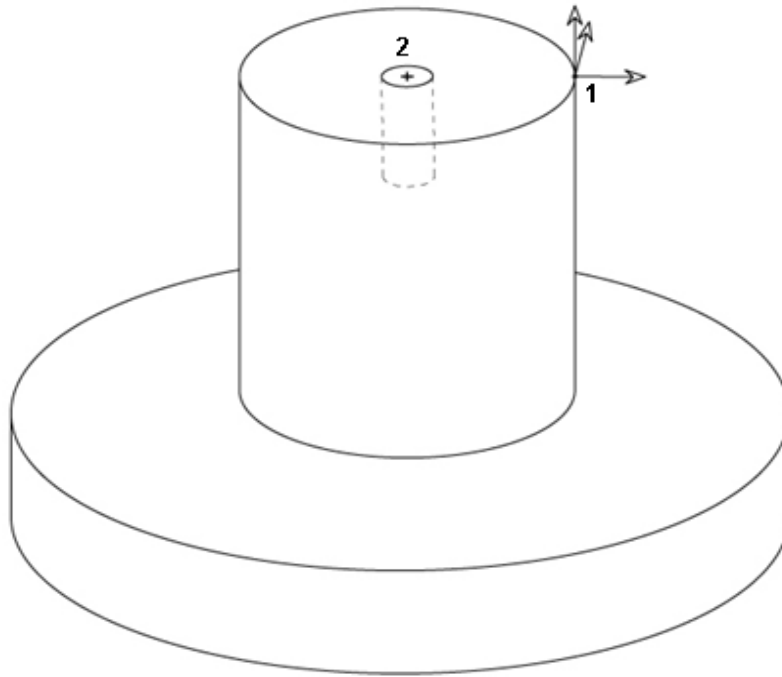

No.	Description
1	PART ZERO, center of cylinder, and center of rotary table
2	Bolt hole


**Figure 6–12. Bolt Holes on Tilted Cylindrical Part**

This is a summary of the program used to create the part shown in the figure above:

DB	Data Block/Field Name	Value	Notes
1	ROTARY PARAMETERS		Defines the cylinder.
	CYLINDER RADIUS	2.0000	
2	ROTARY POSITION		Moves the machine axes.
	X	0.000	X-axis position during pattern execution.
	Y	0.000	Y-axis position during pattern execution.
	A	0.000	Rotary-axis position (angle) during program execution.
	B	90.000	Tilt-axis position (angle) during program execution.
3	HOLES		Specifies hole operation. This is same data block used for 3-axis drilling, tap, etc.

**Table 6–6. Bolt Holes on Tilted Cylindrical Part Program Summary**

The figure below shows two holes drilled 45° apart on a cylindrical part.

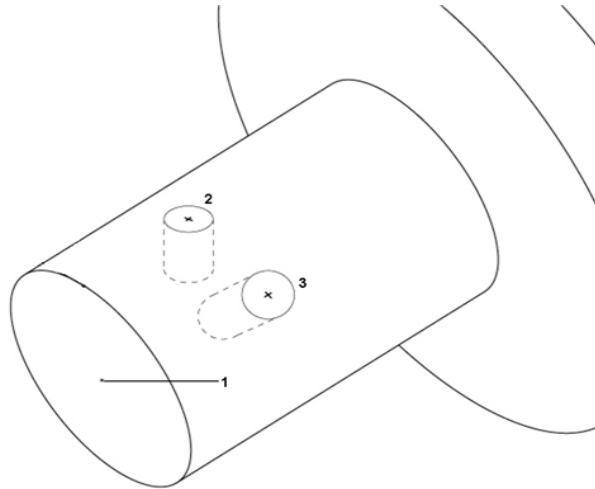

No.	Description
1	PART ZERO, center of cylindrical part and center of rotary table
2	Initial bolt hole
3	Bolt hole drilled after part is tilted 45°

**Figure 6–13. Cylindrical Part Tilted 45° Between Holes**

This is a summary of the program used to create the part shown in the figure above:


<b>DB</b>	<b>Data Block/Field Name</b>	<b>Value</b>	<b>Notes</b>
1	ROTARY PARAMETERS		Defines the cylinder.
	CYLINDER RADIUS	2.0000	
2	ROTARY POSITION		Moves the machine axes.
	X	0.000	Initial X-axis position.
	Y	0.000	Initial Y-axis position.
	A	0.000	Initial rotary-axis position (angle).
	B	0.000	Initial tilt-axis position (angle).
3	HOLES		Specifies hole operation. This is same data block used for 3-axis drilling, tap, etc.
4	ROTARY POSITION		Moves the machine axes.
	X	0.000	X-axis position prior to second hole operation.
	Y	0.000	Y-axis position prior to second hole operation.
	A	-45.000	Rotary-axis moves to this angle prior to second hole operation.
5	HOLES		Specifies hole operation.

**Table 6-7. Cylindrical Part Tilted 45° Between Holes Part Program Summary**

## Transform Plane Example Programs

### Part Zero Does Not Change for Transformed Plane

The figure below shows a milling feature created using a non-rotary Conversational mill frame and mill contour that is repeated in a transformed plane. In this example, part zero for the non-rotary milling feature does not change in the transformed plane. The part was created on a VMX42SR machine.

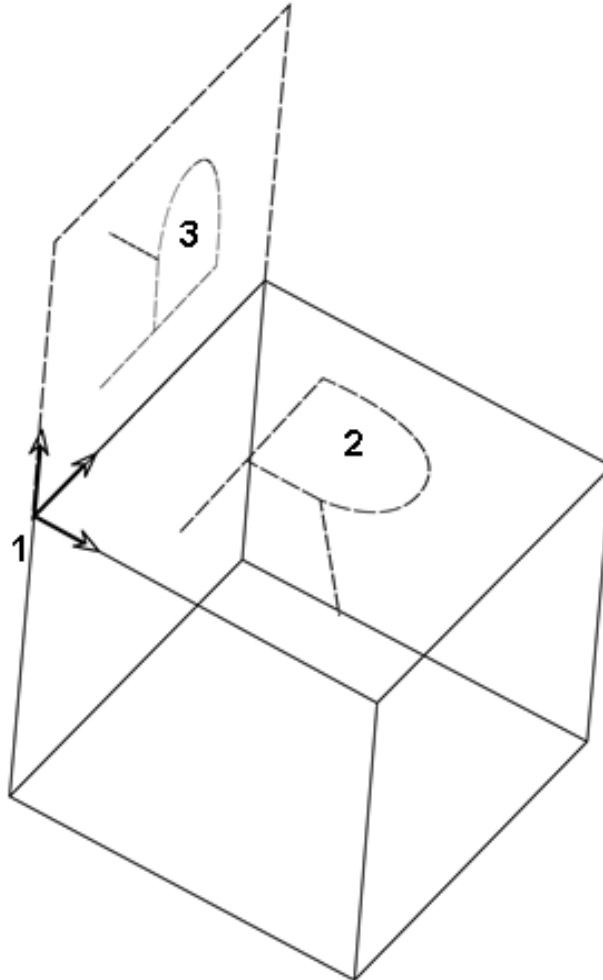

Number	Description
1	PART ZERO
2	Initial part created in X-Y plane
3	Part repeated in transformed plane with same Part Zero

**Figure 6–14. Same Part Zero for Transformed Plane, VMX42 SR Machine**




This is a summary of the program used to create the part in the figure above:

DB	Data Block/Field Name	Value	Notes
1	ROTARY POSITION		Defines the position of all machine axes.
	X	0.0000	X-axis positioning of rotary-axis table.
	Y	0.0000	Y-axis positioning of rotary-axis table.
	B	0.0000	B-axis positioning at 0° from machine zero.
	C	0.0000	C-axis positioning at 0° from machine zero.
	TRANSFORM PART ZERO	No	Transform Plane not activated.
2	MILL CONTOUR		Non-rotary mill contour subprogram to create an R on the X-Y plane of part.
3	ROTARY POSITION		Defines the position of all machine axes.
	X	0.0000	X-axis move prior to positioning rotary-axis table for Transform Plane operation.
	Y	0.0000	Y-axis move prior to positioning rotary-axis table for Transform Plane operation.
	B	-90.00	B-axis will move -90° from machine zero for transformed plane.
	C	0.0000	C-axis will move 0° from machine zero for transformed plane.
	TRANSFORM PART ZERO	YES	Activates Transform Plane.
4	TRANSFORM PLANE REFERENCE POINTS		Positions part zero for the transformed plane. For this program, part zero for the transformed plane is the same as initial part zero.
	X	0.000	
	Y	0.000	
	Z	0.000	
5	MILL CONTOUR		Non-rotary mill contour with part zero at location defined in data block#4.
6	TRANSFORM PLANE END		Ends the Transform Plane in data block #5.

**Table 6-8. Same Part Zero for Transformed Plane Part Program Summary, VMX42SR Machine**

## Part Zero and Orientation Different for Transformed Planes

The figure below shows a non-rotary mill contour created on five sides of a part with different part zeroes and axis orientation for each of the transformed planes. The part was developed on a VMX42SR machine.

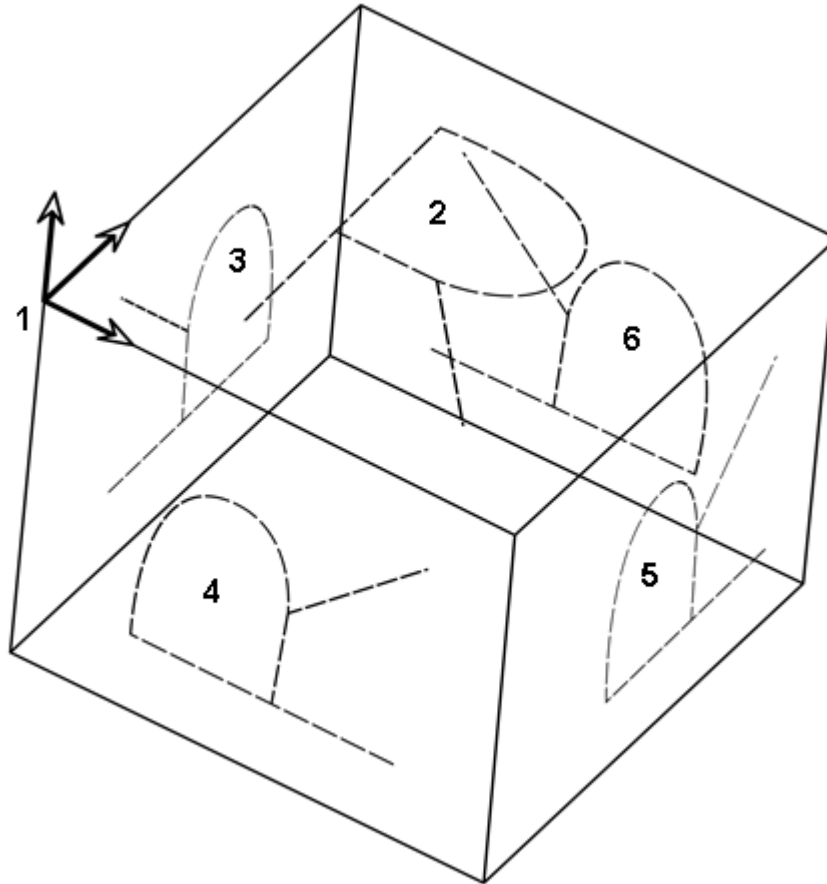

Number	Description
1	Initial PART ZERO
2	Initial non-rotary contour in X-Y plane to create first side of part
3	Non-rotary contour repeated in first transformed plane to create second side of part
4	Non-rotary contour repeated in second transformed plane to create third side of part
5	Non-rotary contour repeated in third transformed plane to create fourth side of part
6	Non-rotary contour repeated in fourth transformed plane to create fifth side of part

**Figure 6–15. Part Created on VMX42SR Machine, Using Transform Plane**

This is a summary of the program used to create the part shown in the figure above:

DB	Data Block/Field Name	Value	Notes
1	ROTARY POSITION		Defines position of machine axes.
	X	0.0000	
	Y	0.0000	
	B	0.0000	Tilt-axis will move 0° from machine zero.
	C	0.0000	Rotary-axis will move 0° from machine zero.
	TRANSFORM PART ZERO	NO	Transform Plane not activated.
2	MILL CONTOUR		Non-rotary mill contour to create the letter R on the X-Y plane of the part.
3	ROTARY POSITION		Redefines position of machine axes.
	X	0.0000	X-axis move prior to positioning rotary table for Transform Plane operation.
	Y	0.0000	Y-axis move prior to positioning rotary table for Transform Plane operation.
	B	-90.000	Tilt-axis will move -90° from machine zero for Transform Plane operation.
	C	0.0000	Rotary-axis will move 0° from machine zero for Transform Plane operation.
	TRANSFORM PART ZERO	YES	Activates Transform Plane.
4	TRANSFORM PLANE		Repositions part zero on transformed plane (i.e., second side of cube).
	X	0.000	
	Y	0.000	
	Z	-100.000	
5	MILL CONTOUR		Non-rotary mill contour with part zero repositioned at location in data block #4.
6	TRANSFORM PLANE END		Ends Transform Plane.


DB	Data Block/Field Name	Value	Notes
7	ROTARY POSITION		Redefines position of machine axes.
	X	0.000	X-axis move prior to positioning rotary table for Transform Plane operation.
	Y	0.000	Y-axis move prior to positioning rotary table for Transform Plane operation.
	B	-90.000	Tilt-axis remains at -90° from machine zero for Transform Plane operation.
	C	90.000	Rotary-axis moves 90° from machine zero for Transform Plane operation.
	TRANSFORM PART ZERO	YES	Activates Transform Plane.
8	TRANSFORM PLANE		Repositions part zero for transformed plane (i.e., third side of cube).
	X	100.000	
	Y	0.000	
	Z	-100.000	
9	MILL CONTOUR		Non-rotary mill contour with part zero repositioned at location in data block #8.
10	TRANSFORM PLANE END		Ends Transform Plane.
11	ROTARY POSITION		Redefines position of machine axes.
	X	0.0000	X-axis move prior to positioning rotary table for Transform Plane operation.
	Y	0.0000	Y-axis move prior to positioning rotary table for Transform Plane operation.
	B	-90.000	Tilt-axis will move -90° from machine zero for Transform Plane operation.
	C	180.000	Rotary-axis will move 180° from machine zero for Transform Plane operation.
	TRANSFORM PART ZERO	YES	Activates Transform Plane.
12	TRANSFORM PLANE		Repositions part zero on transformed plane (i.e., fourth side of cube).
	X	100.000	
	Y	100.000	
	Z	-100.000	
13	MILL CONTOUR		Non-rotary mill contour with part zero repositioned at location in data block #12.
14	TRANSFORM PLANE END		Ends Transform Plane.





## MILL POLYGON

The Mill Polygon data block mills a multi-sided contour with equal-length sides. The bottom of the polygon is parallel to the X axis at 0° orientation (three o'clock position):

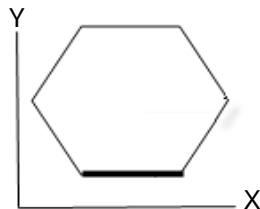

Milling begins on the side of the polygon that is parallel to X at 0° prior to rotation. Rotation is achieved with the Orientation Angle field.

To access the Mill Polygon block:

1. From a New Block screen, select the Milling softkey.
2. Select the More softkey.
3. Select the Polygon softkey. The Mill Polygon block opens:


BLOCK		MILL POLYGON		PREVIOUS BLOCK	
NUMBER OF SIDES	6	Z START	0.1000	F1	
X CENTER	5.0000	Z BOTTOM	-0.5000	NEXT BLOCK	
Y CENTER	5.0000	CORNER RADIUS	0.1000	F2	
SIZING METHOD	SIDE LENGTH			DELETE BLOCK	
SIDE LENGTH	1.0000			F3	
ORIENTATION ANGLE	45.000			PROGRAM PARAMETERS	
ROUGHING		FINISHING		SFQ	
TOOL		1 END MILL, dia. 0.5000		PART SETUP	
MILLING TYPE		POCKET BOUNDARY		F5	
POCKET TYPE		OUTWARD		POCKET OVERLAP (%) 50	
MILL FEED		55.0		PECK DEPTH 0.2500	
SPEED (RPM)		6000		PLUNGE FEED 2.0	
To jump to a block, enter its number.					
NONAME1.HWM		INCH		10:25 AM	

Figure 7-1. Mill Polygon screen


The fields are:

- **Number Of Sides**—specifies the number of sides the polygon will have, from three to 100.
- **X Center**—identifies the X-axis coordinate for the center of the polygon.
- **Y Center**—identifies the Y-axis coordinate for the center of the polygon.


- **Sizing Method**—specifies how the polygon size is established:
  - **Outer Diameter**—the diameter of a circle that encompasses the outside of the polygon, touching it at the corners:

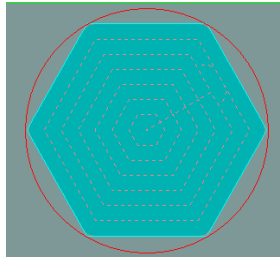



- **Inner Diameter**—the diameter of a circle contained within the polygon, touching at the center of each edge:

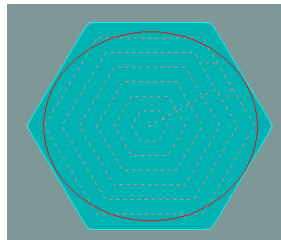

- **Side Length**—the length of one side of the polygon:

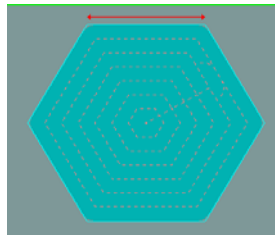

- **Side Length**—specifies the length of the side. This field is available when the Side Length Sizing Method is selected.
- **Sizing Diameter**—specifies the diameter of the circle. This field is available when the Outer or Inner Diameter Sizing Method is selected.
- **Orientation Angle**—rotates the part. This field specifies an angle relative to the X axis that determines where the starting side occurs. An orientation of  $0^\circ$  indicates that the starting side is at the bottom of the polygon, parallel to the X axis. For example:

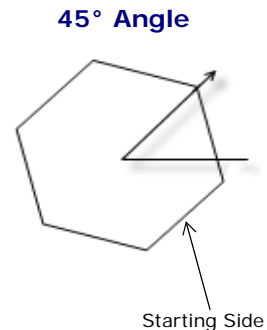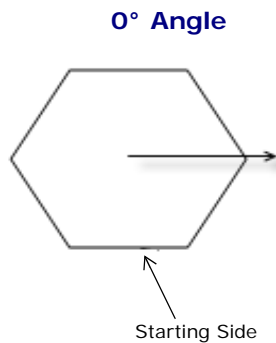



- **Z Start**—identifies the point at which the Plunge Feedrate begins.
- **Z Bottom**—identifies the point at which the Mill Feedrate begins.
- **Corner Radius**—identifies the radius of each corner of the polygon.
  - ⇒ A Mill Polygon data block will convert to a Mill Contour data block if saved as an HD3 program.



# PROBING OPTION

The Probing Option is used for machines equipped with tool and part probes. A tool probe is used to verify tool dimensions and detect tool wear and breakage. A part probe is used to locate and compensate for misalignment of the part. It may also be used for inspection of part features.

Tool and part probing may be used independently or together. Each probing type requires optional hardware and software.

These topics are discussed in this section:

Part Probe Deflection . . . . .	8 - 2
Part Probe Working Envelope . . . . .	8 - 2
Tool Probe Setup Parameters . . . . .	8 - 2
Part Probing Parameters . . . . .	8 - 5
Tool Setup Probing Softkeys . . . . .	8 - 15
Tool Setup Probing Fields . . . . .	8 - 16
Probe Part Setup . . . . .	8 - 17
Conversational Part Probing Cycles . . . . .	8 - 19
Part Zero Storage Cycle . . . . .	8 - 20
Probe Part Setup Data Block . . . . .	8 - 23
Probe Part Setup Data Block Execution . . . . .	8 - 26
Tool Wear Detection Data Block . . . . .	8 - 32
Probing Cycles . . . . .	8 - 33


## Part Probe Deflection

Part probe positions and moves at Approach Feed until it reaches the geometry. It then backs up and moves again at Measurement Feed until it deflects the geometry a second time. The Measurement Feed touches are repeated a total of Repetitions times and the average is used.

## Part Probe Working Envelope

The part probe cycles allow the part probe to operate within the constraints set in the *Part Probing Parameters*. A working envelope containing safe part probe *travel limits* is stored in the Part Probing Parameters.

The working envelope represents the area on the machine table in which the probe can search for geometric features. The travel limits mentioned in each of the Manual Mode Part Setup Probing Cycles and the Manual Mode Part Skew Probing Cycles are set in the working envelope. This area is determined by these fields in the Part Probing Parameters screen: X Min, X Max, Y Min, Y Max, and Z Min. Z Min is a location above the table. The X and Y parameters are illustrated in the figure below:

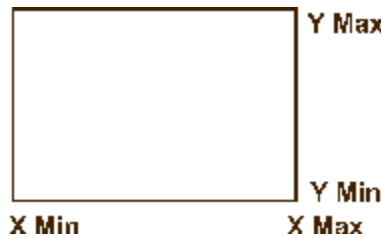

If the probe reaches any part probe *travel limit* before reaching the part feature, a fault occurs, motion stops, and an error message appears on the screen.

Each cycle's *feed rate* is determined by the value set in the *Part Probing Parameters*, on page 8 - 5 Approach Feed and Measurement Feed fields.

## Tool Probe Setup Parameters

Tool probe setup parameters provide critical information on how the machine will use the probes. The parameters include fields specific to programming a touch probe or a laser probe. Tool probe setup parameters must be adjusted when a tool probe is relocated, or when probing feedrates are changed.

The Tool Probe Deflection Offset softkey is used to access the Tool Probe Deflection Offsets screen.

The Store Machine Position softkey is used to record the axis's real-time position.

Select the Laser Probe softkey to access the laser tool probe fields.

When the cursor is on any of the Cal Tool fields, the *Determine Laser Beam Offset softkey* appears. This softkey initiates the cycle to set the beam offset value. WinMax uses the Cal Tool D, Cal Tool H, and Cal Tool L fields in calculating the offset.

Refer to Laser Tool Calibration Cycle for information about the laser tool calibration cycle and the Determine Laser Beam Offset softkey.

Tool Probe Setup Parameters are defined as follows:

- **Type**—indicates the type of tool probe. If a tool probe is not present, the remaining tool probe parameters are not used.
- **Contact Point X, Contact Point Y** (touch tool probe only)—indicates the X and Y location (in machine coordinates) of the tool probe. When the machine is at this location, a tool will touch the center of the tool probe stylus. To enter these values easily, insert a tool in the spindle and jog down to the tip of the probe. When the tool tip is centered over the stylus, press the Sto Pos/Store Position key on the jog controls.
- **Center Beam X, Center Beam Y** (laser tool probe only)—indicates the center location of the beam in X or Y, depending on the orientation of the laser probe. Do not change this value after the Laser Tool Calibration cycle has been run, unless you re-run the cycle. Enter in an approximate value and the laser calibration cycle will determine the precise location.
- **Setup Fast Feed**—indicates the feed rate to use for setup moves near the probe. For example, when dropping down next to the probe to measure diameter, the drop down move uses this feed rate. This value is also used for calibrating the probe and the initial touch when determining deflection offsets.
- **Retract Feed**—indicates the feed rate to use when retracting away from the probe immediately after a deflection. This value is also used for the slow moves when determining deflection offsets.
- **Repetitions**—specifies the number of Slow Feedrate touches when touching tools to the probe. You can program up to 99 repetitions (default value is 3 for touch probe and 4 for laser probe) to get the average length and diameter of the tool.
- **Probing Axis**—specifies the axis of deflection in the X/Y plane. Orientation of the probe will determine if it deflects along the X axis or the Y axis. It is assumed the probe will always deflect along the Z axis.
- **Stylus Width** (touch tool probe only)—specifies the width of the probe's stylus along the Probing Axis.
- **Max Spread**—the deviation (difference) between the minimum and maximum probe readings. If the deviation is greater than the Max Spread value, an error message appears.
- **INIT Retract**—scales the initial retract move after a deflection.
- **INCR Retract**—scales the incremental moves that may be required if the probe is still deflected after the initial move.
- **Monitor Motion**—enables or disables additional motion error checking for the probe. When enabled, the probe is constantly checked to make sure the amount of deflection stays below the value in the Max Deflection field.

- **Max Deflection**—the value representing the maximum amount of probe deflection allowed.



If the Max Deflection value is exceeded, then a probe motion fault occurs and motion is stopped.

The remaining Tool Setup Probe Parameters fields appear when Laser Probe is selected. WinMax uses the calibration values entered in the fields described below for calculating tool length and diameter each time the tool is measured.

Tool Setup Probe Parameters with Laser Probe Selected:

- **Beam Offset**—Displays the width of the beam based on + and - trigger points. This field is updated after running the Determine Laser Beam Offset cycle. You can adjust it to optimize performance.
- **Cal Tool D**—Contains the diameter (D) of the Laser Calibration Tool. This value can be obtained by measuring the diameter of a precision dowel or a laser calibration tool.
- **Cal Tool H**—Contains the height (H) of the Laser Calibration Tool. This value can be obtained by measuring the height of a precision dowel or a laser calibration tool. .
- **Cal Tool L**—Contains the length (L) of the Laser Calibration Tool. This value can be obtained by measuring the length of a precision dowel or a laser calibration tool.

## Part Probing Parameters

The part probing parameters are accessed through Part Setup. These parameters must be adjusted when a new stylus is installed in the part probe, when the probe work region is changed, or when probing feedrates are changed.

To *access* the Part Probe Parameters:

1. Select the Input console key to access the Input screen.
2. Press the Part Setup softkey.
3. Press the Part Probing softkey. The Part Setup screen is displayed with the Part Probing menu.
4. Select the Part Probe Parameters softkey. The Part Setup Probe Parameters screen appears.

The Part Setup Probe Parameters are defined as follows:

- **Present**—Indicates the presence of a part probe. Select the Yes or No softkey to indicate whether the probe is present. If not present, the remaining part probe parameters are not used.
- **Stylus Diameter**—The *stylus* tip diameter, available on the specification sheet for the probing equipment.
- **Approach Feed**—The feed rate used to locate the part feature to be probed.
- **Measurement Feed**—The feed rate used when measuring the part feature.
- **Repetitions**—The number of Slow Feed touches when measuring the part feature. Up to 99 repetitions can be programmed. The default value is 3.
- **X Min, X Max; Y Min, Y Max; Z Min**—The working envelope the probe tip uses to search for part features in X, Y, and Z machine coordinates. The envelope also helps protect against crashing the probe. These fields are similar to the safety work region in Part Setup.



When the cursor is in any of these fields, the RESET PROBE WORK REGION TO MAXIMUM and STORE MACHINE POSITION softkeys become active.

- The RESET PROBE WORK REGION TO MAXIMUM softkey allows you to expand the working envelope for a new part.
- You can jog the axes and use the STORE MACHINE POSITION softkey to record the positions.
- **Max Spread**—The difference between the minimum and maximum probe readings. If the difference is greater than the Max Spread value, an error message appears.
- **Circular Passes**—The number of times to probe a circular part. After each pass, the probe positions to the new center location and runs the cycle again. Multiple passes provide better data because each pass starts closer to the true center. The default value is 2.



Part Setup Probe Parameters are specific to each installation and is stored on the hard drive. If the hard drive is replaced or formatted, the above information must be restored. Refer to Import Functions for information about restoring parameters.



When the part probe is used, it must be activated by the control. For this to occur, the control needs to know when the probe is in the spindle. WinMax provides a Probe tool type in the Tool Setup screen. Before using the part probe, enter the part probe as a tool in Tool Setup:

1. Determine which tool number to assign to the probe.
2. Switch to the Tool Setup screen.
3. Enter the probe's tool number in the Tool field.
4. Select Probe for the tool type.

The control activates the probe hardware when the number in the Tool In Spindle field matches the probe's Tool number.

- **INIT Retract**—scales the initial retract move after a deflection. Increase the value if experiencing repeatability problems.
- **INCR Retract**—scales the incremental moves that may be required if the probe is still deflected after the initial move.
- **Monitor Motion**—enables or disables additional motion error checking for the probe. When enabled, the probe is constantly checked to make sure the amount of deflection stays below the value in the Max Deflection field.
- **Max Deflection**—the value representing the maximum amount of probe deflection allowed.



If the Max Deflection value is exceeded, then a probe motion fault occurs and motion is stopped.

## Tool Probe Calibration

Probe calibration is used on machines that have a tool probe to determine the *Z location* of the tool probe. This must be done only once after a control reset. Some systems use a tool probe and a part probe. Calibration methods vary between systems with tool probing only, and systems with both tool and part probing.

- When there is no part probe, a reference tool is used to touch the tool probe.
- When both probes are present, the calibration cycle touches the two probes together.



## Touch Tool Probe Calibration

For this configuration, using a reference tool in the spindle, the Tool Setup Probe Parameters screen will have Touch Probe in the Type field.

⇒ Prior to probe calibration, the machine must be calibrated.

To access Touch Tool Probe Calibration:

1. Select the Input console button to access the Input screen
2. Select the Tool Setup softkey.
3. Select the Probing softkey
4. Select the Calibrate Tool Probe softkey.

The following sequence occurs:

1. A prompt appears requesting the reference tool number. The reference tool is a tool that works well with the tool probe, such as a drill or a tool with a single point. This reference tool will be used later in Part Setup.
2. Enter the appropriate tool number.

⇒ If necessary, a tool change occurs, placing the reference tool in the spindle. If the tool is not in the magazine, you will be prompted for the tool.

3. The Z axis moves downward at the feed rate specified in the Setup Fast Feed field of the probe parameters screen.
  - The Z axis continues moving until a probe deflection occurs or Minimum Z is reached (value set in tool setup for the ref. tool).
  - If the reference tool reaches Minimum Z prior to deflection, an error message appears. The Minimum Z value should be adjusted as necessary.
4. The reference tool touches the tool probe, retracts slightly, and touches again at the feedrate specified in the Retract Feed field. The number of slow touches is specified by the Repetitions parameter. The average deflection position is recorded and saved for later use.

If for some reason the reference tool does not touch the probe, a fault will indicate that the probe deflection did not occur. You should then check the Tool Setup Probe Parameters screen and setup of the reference tool to correct the problem.

## Touch Tool and Part Probe Calibration

For a tool probe and part probe configuration, make sure these fields are programmed properly:

- Set the Tool Setup Probe Parameters Type field to Touch Tool.
- Set the Part Setup Probe Parameters Present field to Yes.



Prior to probe calibration, the machine must be calibrated, and the part probe must be entered as a tool in Tool Setup (with tool type set to Probe).

In a tool and part probe system the part probe is placed in the spindle, activated, and touched to the tool probe. To activate the part probe, define the probe as a tool so WinMax knows when the probe is in the spindle.



You must use a part probe instead of a reference tool for this configuration.

To access Touch Tool Probe Calibration:

1. Select the Input console button to access the Input screen.
2. Select the Tool Setup softkey.
3. Select the Probing softkey.
4. Select the Calibrate Tool Probe softkey.

The following sequence occurs:

1. If the part probe is not already in the spindle, a "Part Setup Probe Tool Number" prompt appears. Enter the number that was previously selected for the part probe in Tool Setup.
2. Press the flashing Start Cycle button to perform the tool change, which will place the part probe in the spindle.

**Or...**

If the part probe is already in the spindle, press the flashing Start Cycle button and proceed to the next step.

3. The control activates the part probe. The table moves to the X,Y location specified by the Contact X and Contact Y fields in the Tool Setup Probe Parameters screen. If these fields have been entered correctly, the part probe should be directly in line with the tool probe stylus.
4. The Z axis starts moving downward at the feed rate specified in the Tool Setup Probe Parameters Approach Feed field.
  - The Z axis continues moving until a probe deflection occurs or Minimum Z is reached.
  - If the probe reaches Minimum Z prior to deflection, an error message appears. Minimum Z is set in the Part Setup Probe Parameters.
5. If the appropriate fields are set correctly, then the two probes will touch. The part probe will then retract slightly and touch again at the feed rate specified

in the Measurement Feed field. The deflection position is recorded and saved for later use.

If for some reason the probes do not touch, the Z axis will stop when tool probe Minimum Z is reached. A fault will indicate that the probe deflection did not occur. Review the Part Setup Probe Parameters to correct the problem.

## Laser Beam Calibration

The Laser Beam Calibration cycle uses a tool to probe the beam and determine the exact trigger point position in the light beam for X/Y and Z axes so the light beam can effectively measure tools. The *Determine Laser Beam Offset* softkey on the Tool Setup Probe Parameters screen initiates the cycle to set the beam offset value. Refer to the "Tool Probing Parameters" section for field definitions for this screen.


You must calibrate the laser system before using the light beam for measuring tools. The laser calibration tool or precision dowel used for performing calibration is inserted into the spindle just like any tool.

### Laser Tool Calibration Calculations

The calibration tool's dimensions are determined by using a precision dowel or a laser calibration tool (see figure below). Use this formula to determine the location on the tool's diameter to interrupt the beam:

$$\text{Length} + (\text{Height} / 2) = \text{Point on Diameter to Interrupt Beam}$$

WinMax uses the Cal Tool D(iameter), H(eight), and L(ength) fields (shown below as D, H, and L) and the trigger points established in this cycle to determine the Center Beam X or Y values, depending on the Probing Axis.

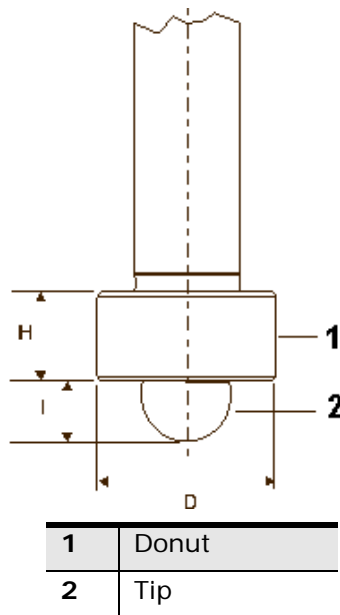


**Figure 8-1. Laser Tool Calibration Calculations**

## Laser Tool Calibration Cycle

Follow these steps to run the Laser Calibration Tool cycle:

1. Access the Tool Setup Probe Parameters screen using this softkey sequence:
  - a. Tool Setup softkey.
  - b. Probing softkey.
  - c. Tool Probe Parameters softkey.
2. In the Type field, select Laser Probe.
3. Enter values in the Cal Tool D, H, or L fields. The Determine Laser Beam Offset softkey appears when the cursor is in any of these fields.
4. Select the Determine Laser Beam Offset softkey.

The figure below illustrates the tool motion during this cycle:

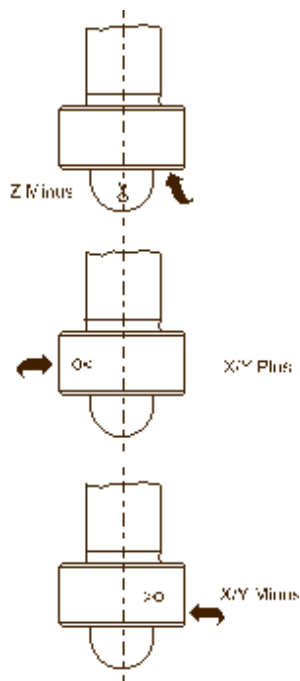

**Figure 8–2. Laser Tool Calibration Cycle**

---

## Tool Probe Deflection Offset Calibration

Tool and part probe deflection offsets are the difference between the contact point of the probe and the actual receipt of a probe deflection signal. The offsets may vary for each direction of deflection. The switch points are repeatable to one micron or less.

These offsets need to be adjusted during an initial probe installation, a new stylus installation, or for centering or re-centering a stylus. They do not need to be performed each time the control is reset.

### Tool Probe Deflection Offset

To access the Tool Probe Deflection Offset screen:

1. Select the Input console button to access the Input screen.
2. Select the Tool Setup softkey.
3. Select the Probing softkey
4. Select the Tool Probe Setup Parameters softkey.
5. Select the Tool Probe Deflection Offset softkey.

The Reference Tool Diameter field holds the diameter of the tool being probed.

The probe orientation determines the offsets used in the Probe Stylus Position fields. The -Z offset is always used along with +/-X or +/-Y, depending from which direction the probe can deflect.

The following sections describe the two methods for determining Tool Probe Deflection Offsets: Absolute Location or Reference Tool Touch.

### Absolute Location

Use an edge finder to determine the absolute location of each edge of the probe stylus. Follow these steps:

1. Enter the Reference Tool Diameter.
2. Position the cursor on the desired offset field.
3. Position the reference tool to the correct start position.
4. Press the Use Probe to Determine Offset softkey. The Start Button flashes.
5. Press the flashing Start Button.
  - a. The cursor position determines which axis is moved and in what direction.
  - b. The deflected position is used to calculate the offsets.
  - c. The offset value appears in the current field.
  - d. The offsets are saved by the system so they are retained after power to the machine is turned off.
  - e. Unused fields contain a 0 value.
  - f. The sign of the offset is + for plus axis deflections and - for negative axis deflections.

### Reference Tool Touch

Use a feeler gauge to determine the position where the reference tool touches the top and each side of the probe stylus. Follow the prompts on the screen to know which side of the stylus to use. Follow these steps:

1. Enter a 0 for the Reference Tool Diameter.
2. Position the reference tool in the correct start position. Begin with the top of the stylus.
3. Place the cursor in the -Z field of the Probe Stylus column.
4. Press the Use Probe to Determine Offset softkey. The Start Button flashes.
5. Press the flashing Start Button.
  - a. The cursor position determines which axis is moved and in what direction.
  - b. The deflected position is used to calculate the offsets.
  - c. The offset value appears in the -Z field.
  - d. The offsets are saved by the system so they are retained after power to the machine is turned off.
  - e. Unused fields contain a 0 value.
  - f. The sign of the offset is + for plus axis deflections and - for negative axis deflections.
6. Repeat these steps for the other two axis positions (+/- X and +/-Y). Position the reference tool appropriately and put the cursor in the appropriate Probe Stylus field.

You can manually adjust the deflection offsets to optimize performance. By running a probe cycle on a reference too, you can make slight adjustments to the deflection offsets until the cycle returns with the exact value(s) desired.

## Part Probe Calibration

This section describes the probe calibration and cycles available with the Probing Option. Once the probing equipment is calibrated, the tool and part can be calibrated using the probing equipment. This information can be stored in Tool or Part Setup, or in a data block, to be executed with the part program.

Probe calibration is only required on machines that also have a tool probe installed. Calibration methods vary between systems with tool probing only, and those with both tool and part probing. See the "Tool Probe Calibration and Cycles" section for more information.

---

## Part Probe Deflection Offset Calibration

Part probe deflection offset is the difference between the contact point of the probe and the actual receipt of a probe deflection signal. The offset may vary for each direction of deflection.

Part probe deflection offsets need to be adjusted during an initial probe installation, a new stylus installation, or for centering or re-centering a stylus.

### Part Probe Deflection Offset

To access Part Probe Deflection Offset:

1. Select the Input console key to access the Input screen.
2. Press the Part Setup softkey.
3. Press the Probing softkey. The Part Setup screen is displayed with the Part Probing menu.
4. Select the Part Probe Deflection Offsets softkey. The screen has softkeys for selecting the method to use for determining offsets.

The following sections describe the procedures to follow the Ring Gauge Method and Reference Block Method.

### *Ring Gauge*

The Ring Gauge method probes in a circular pattern. Select the Part Probe Deflection Offsets softkey, followed by the Ring Gauge softkey. The following screen appears:

Follow these steps to determine a Ring Gauge Deflection Offset:

1. Enter the Diameter of the part.
2. Use an indicator or some similar method to determine the center of the gauge. Enter the Center of the gauge in the Center X and Center Y fields.
3. Jog the spindle to a point where the probe just touches the part. Enter that location in the Datum Z field by typing it in or by pressing the Store Position key on the Jog control.
4. Position the probe tip inside the gauge at the desired depth and select the Use Gauge to Get X&Y Offsets softkey. The Start button begins to flash.
5. Press the Start button to begin the cycle.
6. The probe touches the part at 36 points ( $10^\circ$  increments) inside the gauge to automatically calculate the X and Y offsets. To determine the Z offset, position the probe tip above the chosen datum point and select the Use Datum Point to Get Z Offset softkey. The Start Button begins to flash.
7. Press the Start button to begin the cycle.
8. The probe touches off the datum point and calculates the offset.
9. The Offset values appear on the screen and are stored in memory. This offset will be used anytime the control uses a probe location.

Offset values may be entered manually. If you know the readings are off by a certain

amount, you can make adjustments without even using the probe. The sign of the offset should be + for plus axis deflections, and - for minus axis deflections.

## **Reference Block**

The Reference Block method probes in the + or - X or Y direction. Select the Part Probe Deflection Offsets softkey, followed by the Reference Block Method softkey. The following screen appears:

Follow these steps to determine the Reference Block Deflection Offsets for the X or Y axes:

1. Enter X or Y values manually in the Reference Block X or Y fields.
2. Position the cursor under the Deflection Offset column at the offset to be determined.
3. Jog the machine so the part probe is in the proper location to touch off the reference block for the desired axis and direction.
4. Press the Use Probe to Determine Offset softkey, and the Start button begins to flash.
5. Press the Start Button to start the cycle. The probe touches off the reference block. The offset values are calculated, appear on the screen, and are stored in memory.

Follow these steps to determine the offset for the Z axis:

1. Jog the probe to the top of the reference block.
2. Use a feeler gauge to determine where the tip of the stylus would touch the reference block. Enter this value in the -Z field in the Reference Block column.
3. Select the Use Probe to Determine Offset softkey. The probe touches off the part in the Z axis to determine the offset.

Offset values may be entered manually. If you know the readings are off by a certain amount, you can make adjustments without using the probe.

The sign of the offset should be + for plus axis deflections and - for minus axis deflections.



The Ring Gauge method is more accurate than the Reference Block method.

- The probe measures the part at 36 points in 10° increments on the ring gauge.
- The 4 points measured on the reference block correspond to the 0°, 90°, 180°, and 270° values on the ring gauge. The remaining 32 values are estimated using the 4 actual measurements to fill in the 10° incremental offsets.



## Tool Setup Probing Softkeys

Tool Setup Probing softkeys are as follows:

- **Tool Probe Setup Parameters**—Select the tool probe type and access tool probe parameters. Tool probe types are: Touch Probe, Laser Probe and No Probe. Refer to *Tool Probe Setup Parameters*, on page 8 - 2.
- **Calibrate the Tool Probe**—Determine the Z location of the tool probe. Calibrate the Tool Probe only once for each reset of the control. See *Tool Probe Calibration*, on page 8 - 6.
- **Probe A Single Tool**—Determines the length and/or diameter of a single tool.
- **Probe Multiple Tools**—Determines the length and/or diameter of multiple tools.
- **Position Tool Over the Probe**—Position the tool over the probe, before jogging Z to the desired position.
- **Select Tool Probe Cycle**—Determine what part of the tool will be probed:
  - None – no tool probing occurs
  - Length – determine tool length
  - Diameter – determine tool diameter
  - Length & Diameter - determine tool length and diameter.
- **Probe Current Tool Now**—Available when the tool on the Tool Setup screen is also the tool in spindle. If the tool is already in the proper position for probing, the Z axis will not retract. Use this feature when the tool is just above the probe and the Rapid Z position is set. After probing, the Tool Setup screen reappears, and a "P" indicates the probed fields.
- **Exit**—Return to the Tool Setup screen.

## Tool Setup Probing Fields

Tool Setup Probing fields are as follows:

- **Rapid Z Position**—The tool probe (in the Z axis) rapids down to this position and then continues downward at the speed specified in the Fast Feed field. Use the remote jog unit or type in a value for the Rapid Z Position field.

With the cursor in this field, the Position Tool Over Probe softkey can be used.

- **Spindle Usage**—Specifies in which direction the spindle should operate during the probe cycle. Choices are: manual (free rotating), oriented, clockwise (CW) or counter clockwise (CCW).

The default value for a touch tool probe is the reverse of the programmed tool. For example, if the tool is CW, Spindle Usage for a touch tool probe will default to CCW. For a laser tool probe, Spindle Usage value defaults to the programmed tool direction.

- **Spindle RPM**—Specifies spindle speed when the Spindle Usage field is set to either CW or CCW. When the operator updates the diameter setting for the tool probe, the Spindle RPM field will be updated with a suggested value – this value may be overwritten by the operator.
- **Fast Feed**—Specifies the feed rate used when making the initial touch of the probe (prior to measurement touches). When the operator updates the diameter setting for the tool probe, the Fast Feed field will be updated with a suggested value – this value may be overwritten by the operator.
- **Slow Feed**—Specifies the feed rate used when taking measurements after the initial deflection. The default value is 4 mm per minute for a touch probe, 25.4 mm per minute for a laser probe.
- **Minimum Z**—The lowest position that the Z axis will travel to during the probe cycle. Sets up a safety zone for each tool. The Minimum Z value should be low enough to allow proper deflection of the probe - especially important when checking diameter since the tool must drop down next to the probe stylus.
- **Length Offset X, Y**—Used to change the X or Y table position when probing tool length. This field will be ignored when probing tool diameter. Required for tools that have a cutter offset from the center.
- **Z Drop Down Depth**—Used only when measuring tool diameter. This parameter (a negative value) indicates the distance to drop down from where the tip of the tool touches the top of the probe. For example, if you want to measure the diameter of the tool ¼" from the tip, this parameter would be set to -0.25".
- **Side Clearance**—Specifies an additional distance to leave between the tool and tool probe when determining the tool diameter. This value can be adjusted to optimize probe cycle time.
- **Multi-Tool Probing**—Specifies which tools to probe and which to skip - used only in the multiple tool calibration cycle.
- **Sister Tool**—Identifies a spare tool to be used with Tool Monitoring.

## Probe Part Setup

Use the Probe Part Setup data block to perform a part setup function using a probe. The probe will locate a point on the part such as a corner. When the program executes this data block, it will automatically probe the part and update Part Zero X, Part Zero Y, Probe Z, and X/Y Skew. The data block may be placed anywhere in the part program except within a Pattern.

The Probe Part Setup fields are defined as follows:

- **Block** - identifies the block number for this operation. The system determines the number by the position of this data block in the program. This field appears on both the Probe Part Setup and Part Inspection screens.
- **Tool** - identifies the tool number for this data block and enters that tool's diameter and type on this screen. This field appears on both the Probe Part Setup and Part Inspection screens.
- **Part Zero Cycle** - use the drop-down list or softkeys that appear when the field is selected to determine the geometric feature for this Part Zero Cycle.
- **Preset X/Y** - determines the X or Y coordinate to be assigned to the probed location.
- **Probe Direction X/Y** - (available only for Corner or Intersect) defines the X or Y value that determines the direction (positive or negative) that the probe moves when searching for the part. This field appears on both the Probe Part Setup and Part Inspection screens.
- **Probing Radius** - (available only for Hole and Cylinder) enter the radius of the geometry. For a cylinder, this defines a clearance range to move the probe outside the cylinder. For a hole, this defines the maximum travel. This field appears on both the Probe Part Setup and Part Inspection screens.
- **Z Depth** - (available only for Cylinder and Rect. Solid) defines the distance, relative to the Start Position, that the Z axis moves downward before changing direction and searching horizontally for each contact point on the geometry's surface. This field appears on both the Probe Part Setup and Part Inspection screens.
- **Start Angle 1/2/3** - (available only for Hole and Cylinder) defines the three probe deflection points. Relative to the 3:00 position and increasing counterclockwise as viewed from above the part, the default angles are 0, 120, and 240, respectively. Change the angles if the part contains geometry that interferes with the defaults. This field appears on both the Probe Part Setup and Part Inspection screens.
- **Probing Length X/Y** - (available only for Rect. Pocket and Rect. Solid) identifies the X or Y length of the geometry. For Rect. Pocket, this defines maximum travel. For Rect. Solid, this defines a clearance area to move the probe outside of the solid. This field appears on both the Probe Part Setup and Part Inspection screens.
- **Offset X/Y** - (available only for Intersect) defines the X or Y offset positions from the Start Location. This field appears on both the Probe Part Setup and Part Inspection screens.

- **X Start X/Y/Z** - defines the X, Y, or Z coordinate that determines the starting point when probing along the X axis. This field appears on both the Probe Part Setup and Part Inspection screens.
- **Y Start X/Y/Z** - defines the X, Y, or Z coordinate that determines the starting point when probing along the Y axis. This field appears on both the Probe Part Setup and Part Inspection screens.
- **XY Start X/Y/Z** - ( available only for Hole, Cylinder, Rect. Pocket, and Rect. Solid) defines the X, Y, or Z coordinate that determines the starting point when probing along the XY axis. This field appears on both the Probe Part Setup and Part Inspection screens.
- **Z Start X/Y/Z** - defines the X, Y, or Z coordinate that determines the starting point when probing along the Z axis.
- **Skew Cycle** - select the geometric feature for this Skew Cycle from the drop down list or use the softkeys that appear when the Skew Cycle field is selected. If no Skew Cycle, select none.

The following fields appear based on the Geometric figure selected in the Skew Cycle field. They will not appear if None is selected in the Skew Cycle field.

- **Skew Axis** - defines the axis that is not square to the machine axis. This axis will be probed at two locations to determine its vector.
- **Preset X/Y** - defines an offset from Part Zero X or Part Zero Y of the feature to be probed.
- **Z Depth** - (available only when Cylinder or Rect. Solid is selected in the Skew Cycle field) defines the distance, relative to the Start Position, that the Z axis moves downward before changing directions and searching horizontally for each contact point on the geometry's surface.
- **Probing Length X/Y** - (available only when Rect. Pocket or Rect. Solid is selected in the Skew Cycle field) identifies the X or Y length of the geometry. For Rect. Pocket, this defines maximum travel. For Rect. Solid, this defines a clearance area to move the probe outside of the solid.
- **Probing Radius** - (available only when Hole or Cylinder is selected in the Skew Cycle field) enter the radius of the geometry. For a cylinder, this defines a clearance range to move the probe outside the cylinder. For a hole, this defines the maximum travel.
- **Probe Direction X/Y** - (available only when Edge is selected in the Skew Cycle field) defines the X or Y value that determines the direction (positive or negative) that the probe moves when searching for the part.
- **Skew Start X/Y/Z** - defines the X, Y, or Z coordinate that determines the starting point for the skewed axis.

---

## Conversational Part Probing Cycles

Conversational part probing is used for locating the part's position and alignment on the table. Inserting a Probe Part Setup data block to run from the part program allows you to probe multiple parts and locate them at run time. This section describes probing cycles which are used for creating Probe Part Setup data blocks.

There are two types of cycles available for probing different types of part features: *Probing Cycles*, on page 8 - 33 and *Part Skew Probing Cycles*, on page 8 - 34. The cycles provide a method to automatically enter the Part Zero X, Part Zero Y, Probe Z, and X/Y Skew (deg) fields.

### Part Setup Screen

In addition to the standard Part Setup fields defined in Part Setup, WinMax updates these Part Setup fields with data obtained during the probing cycles:

- **Part Zero X, Y**—the part zero values established during Part Setup. Refer to the "Part Zero Storage" section in this chapter for details about the Part Zero X and Y fields.
- **Probe Z**—the distance from Z zero to the top of the part (i.e., the height, or Z Plane), including the reference tool or part probe in the spindle.
  - Z zero is the Z calibration point of the Z axis ( $Z = 0.0000$ ).
  - WinMax adjusts tool length values automatically and Tool Zero Calibration is recalculated anytime Probe Z is changed.
- **X/Y Skew (deg.)**—represents, in degrees, how far the part is from perfect alignment with the table. Refer to the "Part Skew Probing Cycles" section of this chapter for more information about X/Y skew.

Part probing can be run either from Manual Mode or from Auto Mode, inside the part program.

## Part Zero Storage Cycle

At the end of each Probing Cycle, the results of the cycle are displayed in machine coordinates and do not include the Preset values.

Cycle	Results
Edge	Contact Position (X, Y, or Z)
Hole or Circle Pocket	Diameter, Center (X and Y)
Cylinder	Diameter, Center (X and Y)
Rectangular Pocket	Lengths (X and Y), Center (X and Y)
Rectangular solid	Lengths (X and Y), Center (X and Y)
Plane Intersection	Corner (X and Y)

**Table 8-1. Part Zero Storage Cycle**

Selecting the Accept Position as Part Zero softkey accepts the probed values and subtracts the presets to determine part zero. The new Part Zero values appear in the Part Zero X and Part Zero Y fields.

With an Edge probing cycle, the probe moves only one axis. Therefore, only one of Part Zero X, Part Zero Y, or Probe Z is set. With all other cycles, both Part Zero X and Part Zero Y are determined at the same time.

⇒ If the Preset values have not been entered at the beginning of the cycle, it is still possible to enter them or to change them before pressing the Accept Position as Part Zero softkey.

After pressing the Accept Position as Part Zero softkey, the initial Part Setup Screen appears with new Part Zero entries. The Part Zero X and Y fields now contain values carried over from the Corner X and Corner Y fields in the Plane Intersection Probe Cycle.

## Manual Mode Part Setup Probing Cycles

During a Part Setup Probing cycle, the probe moves to specified points on the part, deflects, and stops in the center or at the Start Position (depending on the part feature). From the Part Setup screen, use the Probing softkey to access the Probing cycles. See *Probing Cycles*, on page 8 - 33 for more information.

Each cycle is described in detail in the following sections. When the cycle is finished, values representing the desired features are displayed. The fields for each cycle vary and are defined with each cycle description.

You can accept these values by pressing the Accept Position as Part Zero softkey when it appears. If you have entered Preset X or Preset Y offsets, these offsets are subtracted from the probed Part Zero values, and the new Part Zero values appear after pressing the Accept Position as Part Zero softkey.

Follow these steps to access the Part Probe Cycles:

1. From the Part Setup screen, select the Probing softkey. These softkeys appear for selecting Probing functions:
2. Select the Part Zero Probe Cycles softkey. These softkeys appear for selecting the Part Probe Cycle types:

Depending on the Probing Cycle selected, different probing fields appear on the Part Setup screen.

## Manual Mode Part Skew Probing Cycles

From the Part Setup screen, use the Probing softkey to access the Probing cycles. (See *Probing Cycles*, on page 8 - 33.) During a Part Skew Probing cycle the probe moves to specified points on the part, deflects, and stops in the center of the part feature. These cycles detect and compensate for *X/Y skew* in the work piece. *X/Y skew* represents, in degrees, how far the part is from perfect alignment with the table.

- A positive skew angle means the part is rotated in a counterclockwise direction from the machine axes (as viewed from above the part).
- A negative skew angle indicates a clockwise rotation from the machine axes.

Although this angle, if known, can be typed in, it is easier and more accurate to let the probe find the skew angle and automatically enter it.


⇒ For best results, it is recommended that you use the probe for determining Part Zero X, Part Zero Y, and X/Y Skew. Entering values for any of these fields with the keypad reduces the amount of information available for skew calculations. Also, the software must make assumptions that may reduce accuracy.

After probing the Part Zero position as a reference, the skew cycles allow you to probe a second feature on the part and adjust all machining operations by the skew angle to exactly match the part.

When the cycle is finished, the software displays values representing the desired features. The fields for each cycle vary and are defined with each cycle description.

You can accept these values by pressing the Accept X/Y Skew Angle softkey when it appears. Preset X or Preset Y offsets are used in the skew calculation. The presets are subtracted from the probed Part Zero values, and the new Part Zero values appear after pressing the Accept Position as Part Zero softkey.

The figure below illustrates a skewed work piece with a Preset Y offset.

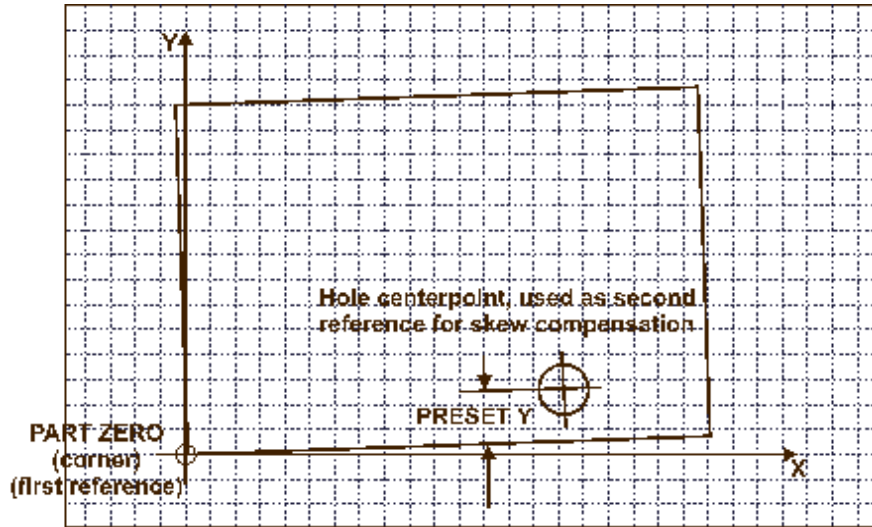

**Figure 8-3. Skewed work piece with Preset Y offset**



Enter offsets for Preset X and Preset Y for a precise Skew Angle. If only one Preset value is entered, the skew angle will be approximate and should not exceed 3 degrees.

Skew Compensation is intended to be used for correcting a slight misalignment. If the skew angle contains only one Preset value and is greater than approximately 3 degrees, then Part Skew probing may not be exact, especially for Edge and Rectangular cycles.

Follow these steps to perform a Skew Probe Cycle for work piece skew compensation:

1. Perform the Part Zero Probe Cycle. Refer to the appropriate Part Probe Cycle in this chapter (i.e., Edge, Cylinder, etc.) or more information.
2. From the Part Setup screen, select the Probing softkey followed by the Part Skew Probe Cycles softkey to access the Part Skew Probe Cycles:
3. The following screen will appear for selecting the Skew Probe Cycle type. Press the appropriate softkey to select the desired cycle.

Depending on the Skew Probing Cycle selected, different probing fields appear on the Part Setup screen.



The following sections describe how to program each of the Part Skew Probing Cycles.



## Automatic Mode

To locate part zero and to determine skew in the X-Y plane as part of the program instead of manually during Part Setup, the Probe Part Setup conversational data block can be used to automatically perform this function.

Access the Probe Part Setup data block from the Part Programming screen as a Miscellaneous Data Block. Select the Miscellaneous softkey from the New Block screen.

## Probe Part Setup Data Block

From the New Block screen, press the Probe Part Setup softkey. The Probe Part Setup data block screen appears with fields for programming cycles to determine part zero alone or in addition to determining the skew in the XY plane.

The fields on the left-hand side of the screen and the X, Y, and Z Start fields apply to the Part Zero Cycle; the fields on the right-hand side of the screen and the Skew Start fields apply to the Skew Cycle.

## Probe Part Setup Fields

The Probe Part Setup screen contains fields for the Part Zero Cycle and the Skew Cycle. The fields change depending on the selected cycle.

## Automatic Part Zero Cycles

The fields listed below apply to Part Zero Cycles indicated and are defined as follows:

Part Zero Cycle	Field	Definition
All cycles	Tool	the tool number of the part probe.
All cycles	Part Zero Cycle	the geometric feature for this Part Zero cycle. Softkey choices appear for selecting the appropriate feature when the cursor is in this field.
All cycles	Preset X Preset Y	an offset for Part Zero X and/or Part Zero Y from the probed feature.
Plane Intersection (Non-Rectangular Corner) Cycle, on page 8 - 46	Probe Direction X Probe Direction Y	based on the Probe Axis field, defines which direction, positive or negative, the probe moves when looking for the part.
Rectangular Pocket Skew Cycle, on page 8 - 51 and Rectangular Solid Skew Cycle, on page 8 - 52	Probing Length X Probing Length Y	the X or Y length of the geometry.  For Pocket this defines maximum travel.  For Solid this defines a clearance area to move the probe outside the Solid.
Cylinder Cycle, on page 8 - 40 and Hole or Circle Pocket Cycle, on page 8 - 38	Probing Radius	the radius of the geometry.  For Cylinder this defines a clearance range to move the probe outside the Cylinder.  For Hole or Circle this defines maximum travel.
Cylinder Cycle, on page 8 - 40 and Rectangular Solid Outside Cycle, on page 8 - 44	Z Depth	distance the Z axis moves downward before changing direction and searching horizontally for each contact point on the geometry's surface. Z Depth can be set to move the probe anywhere within the Z Axis travel limits.
Plane Intersection (Non-Rectangular Corner) Cycle, on page 8 - 46	Offset X Offset Y	X or Y offset positions from the Start location.
Cylinder Cycle, on page 8 - 40 and Hole or Circle Pocket Cycle, on page 8 - 38	Start Angle1 Start Angle2 Start Angle3	the three probe deflection points. Relative to the 3:00 position and increasing counter-clockwise as viewed from above the part, the default angles are 0, 120, and 240, respectively. Change the angles if the part contains geometry that interferes with the defaults.
All cycles	X, Y, Z Start Positions	where to begin the probing process. The easiest method for entering the start positions is to jog the probe down to the desired start location and press the Store Position key. A single push of this key automatically enters all three coordinates (X, Y, and Z) for one Start position.

**Table 8-2. Automatic Part Zero Cycles**

## Automatic Skew Cycles

These fields apply to the Skew Cycle indicated and are defined as follows:

Skew Cycle	Field	Definition
All cycles	Tool	the tool number of the part probe.
All Skew cycles	Skew Cycle	the geometric feature for this Part Skew cycle. Softkey choices appear for selecting the appropriate feature when the cursor is in this field.
All Skew cycles	Skew Axis	define either the X or Y axis as the skew axis. There is no skewing in Z.
All Skew cycles	Preset X or Preset Y	an offset from Part Zero X or Part Zero Y of the feature to be probed. NOTE: Preset X and Preset Y are available in all cases. For better and more accurate skew compensation, the user should enter values for both fields
Cylinder Skew Cycle, on page 8 - 50 and Rectangular Solid Skew Cycle, on page 8 - 52	Z Depth	distance the Z axis moves downward before changing direction and searching horizontally for each contact point on the geometry's surface. Z Depth can be set to move the probe anywhere within the Z Axis travel limits.
Rectangular Pocket Skew Cycle, on page 8 - 51 and Rectangular Solid Skew Cycle, on page 8 - 52	Probing Length X Probing Length Y	the X or Y length of the geometry.  For Pocket this defines maximum travel.  For Solid this defines a clearance area to move the probe outside the Solid.
Cylinder Skew Cycle, on page 8 - 50 and Hole or Circle Pocket Skew Cycle, on page 8 - 49	Probing Radius	the radius of the geometry.  For Cylinder this defines a clearance range to move the probe outside the Cylinder.  For Hole or Circle this defines maximum travel.
Edge Skew Cycle, on page 8 - 48	Probe Direction X or Y (depending on Skew Axis selection)	direction, positive or negative, the probe moves when looking for the part.
All Skew cycles	Skew Start Positions	where to begin the probing process. The easiest method for entering the start positions is to jog the probe down to the desired start location and press the Store Position key. A single push of this key automatically enters all three coordinates (X, Y, and Z) for one Start position.

**Table 8-3. Automatic Skew Cycles**

## Probe Part Setup Data Block Execution

When the program executes this data block, it will automatically probe the part and update Part Zero X, Part Zero Y, Probe Z and *X/Y Skew*. The data block may be placed anywhere in the part program except within a Pattern.

### Part Inspection Cycles

To access the Part Inspection cycles, follow this softkey sequence from the Input screen:

1. Select Part Programming.
2. Select Miscellaneous.
3. Select More.
4. Select the Part Inspection softkey.

### Part Inspection Fields

The fields on the Part Inspection screen change depending on the selected cycle and are defined as follows:

<b>Inspection Cycle</b>	<b>Field</b>	<b>Definition</b>
All cycles	Tool	the part probe tool number.
All cycles	Cycle	the type of cycle to be inspected.
Single Point	Probe Axis	the axis to be probed.
Single Point and Plane Intersection	Probe Direction X Probe Direction Y	based on the Probe Axis field, defines which direction, positive or negative, the probe moves when looking for the part.
Rectangular Pocket and Rectangular Solid	Probing Length X Probing Length Y	the X or Y length of the geometry.  For Pocket this defines maximum travel.  For Solid this defines a clearance area to move the probe outside the Solid.
Cylinder and Hole or Circle	Probing Radius	the radius of the geometry.  For Cylinder this defines a clearance range to move the probe outside the Cylinder.  For Hole or Circle this defines maximum travel.
Cylinder and Rectangular Solid	Z Depth	distance the Z axis moves downward before changing direction and searching horizontally for each contact point on the geometry's surface.
Plane Intersection	Offset X Offset Y	the X or Y offset positions from the Start location.
Cylinder and Hole or Circle	Start Angle1 Start Angle2 Start Angle3	the three probe deflection points. Relative to the 3:00 position and increasing counter-clockwise as viewed from above the part, the default angles are 0, 120, and 240, respectively. Change the angles if the part contains geometry that interferes with the defaults.
All cycles	X, Y, Z Start Positions	where to begin the probing process. The easiest method for entering the start positions is to jog the probe down to the desired start location and press the Store Position key. A single push of this key automatically enters all three coordinates (X, Y, and Z) for one Start position.

**Table 8-4. Part Inspection Fields**

## Part Inspection Programming

Follow these steps to program a Part Inspection data block:

1. Enter the part probe tool number in the tool field.
2. When the cursor is on the Inspection Cycle field, the softkeys change. Select a cycle type for the Inspection Cycle field.
3. Program the remaining fields as described in the "Part Inspection Fields" section. The data block is stored with the program and executed automatically.

### Part Inspection Files

When the Part Inspection data block is executed, the part inspection files are automatically created. The position data is presented in part relative coordinates.

⇒ For single point inspection, the reported Z part position includes the Offset Z value from Part Setup.

Part Inspection files are saved to the same location as the part program, and have the same name as the part program, with a .TXT filename extension. These files can be printed with the Probing Data Printing softkey in Utilities/Printing Setup.

## Probe Tool Monitoring

Probe Tool Monitoring is available to automatically monitor calibrated tools and detect breakage or wear.

The software compares the current tool dimensions to the calibrated dimensions stored in Tool Setup for the programmed tool. If the current dimensions deviate from the defined tolerance programmed in the tool monitoring menus, the tool is defective.

It is possible to program a spare tool to automatically replace a defective monitored tool. If the spare tool is not programmed, or if there is no ATC, axis motion stops and the following message appears on the screen: "Tool # x is defective, no more tools to substitute."

You can invoke tool monitoring in two ways:

- Enable the Program Parameters Automatic Tool Monitoring field. This setup automatically invokes tool monitoring immediately after tool changes for every probed tool.
- Use a data block in a Conversational Part Program to define which tool should be monitored through a specific monitoring cycle.

The following fields appear on the Tool Monitoring screen:

- **Block** - identifies the block number for this operation. The system determines the number by the position of this data block in the program. To move to another block, enter the number of the block.
- **Probe Cycle Type** - displays the type of detection cycle selected for the Probe Tool Monitoring. You may select **Tool Breakage Detection**, **Tool Length Wear Detection**, **Tool Diameter Wear Detection**, or **Tool Length & Diameter Wear Detection**. The selection in this field determines the fields that appear on the Tool Monitoring screen.
- **Tool** - displays the number of the tool to be monitored. Enter the number of the tool that you wish to be monitored in this block.
- **Breakage Tolerance** - (available only for Tool Breakage Probe Cycle Types) enter the amount of deviation from the tool length programmed in the Zero Calibration field on the Tool Setup screen.
- **Zero Cal Tolerance** - (available only for Tool Length Wear Detection and Tool Length & Diameter Wear Detection Probe Cycle Types) enter the amount of deviation from the tool length programmed in the Zero Calibration field on the Tool Setup screen.
- **Diameter Tolerance** - (available only for Tool Diameter Wear Detection and Tool Length & Diameter Wear Detection Probe Cycle Types) enter the amount of deviation from the tool diameter programmed in the Diameter field on the Tool Setup screen.
- **Speed** - displays the spindle speed value defined for this tool on the Tool Setup Screen. This value can be manually changed on the Tool Monitoring screen. This field does not appear if the Spindle Usage field in Tool Setup Probing is set to Manual or Oriented.
- **Direction** - select the direction (CW or CCW) that the spindle will run. This field does not appear if the Spindle Usage field in Tool Setup Probing is set to Manual or Oriented.
- **Probing Method** - displays the method for referencing the tool that was specified in Tool Setup; field is read-only.
- **Spindle Usage** - displays the direction in which the spindle should operate during the probe cycle; specified in Tool Setup. Choices are manual (free rotating), oriented, clockwise (CW) or counter clockwise (CCW).
- **Sister Tool** - displays the tool that will be used to automatically replace the monitored tool if it deviates from the limits specified in the BREAKAGE TOLERANCE, ZERO CAL TOLERANCE, or DIAMETER TOLERANCE fields. The field is read-only. Sister tool is specified in Tool Setup.

You may use the above fields to program data blocks that will check for Tool Breakage and/or Tool Wear.

## Manual Tool Probing Cycles

Tool probing determines the Zero Calibration and/or Diameter values for a particular tool, and stores these values in the Tool Setup screen. The tool's length will be stored in the Zero Calibration field. The tool's diameter can also be probed and stored in the Diameter field.

Before using the tool probe, review the changes that appear on the Tool Setup screen. Any tool that has been calibrated with the probe will have a "P" *designator* next to the Diameter and Zero Calibration values.

The following two softkeys, Probe a Single Tool and Probe Multiple Tools allow for manual probing of tools within tool setup. See *Probe a Single Tool*, on page 8 - 30 and *Probe Multiple Tools*, on page 8 - 31 for more information.

### Probe a Single Tool

The Probe a Single Tool feature determines the Zero Calibration value and/or tool diameter, based on the selection made for the Probe Cycle field. The tool must be already entered in Tool Setup before probing.

⇒ If the tool diameter will be probed, an approximate value must be entered in the diameter field. This approximate value will be replaced by the Probe value after the tool is probed.

Follow these steps to Probe a Single Tool:

1. Select the Input console button to access the Input screen.
2. Select the Tool Setup softkey. The Tool Setup screen appears.
3. Select the More → softkey on the Tool Setup Screen.
4. Select the Tool Probing softkey.
5. Select the Probe a Single Tool softkey.
6. Enter the Tool Number to probe.
7. The Start Cycle button flashes. Press Start to begin the probe cycle.

⇒ A tool's Zero Calibration value is automatically recalculated anytime Probe Z is changed. If the Zero Calibration seems to be incorrect, check the Probe Z value in the Part Setup screen.



## Probe Multiple Tools

The Probe Multiple Tools feature determines the Zero Calibration value and/or tool diameter, based on the selection made for the Probe Cycle field. The tools must be already entered in Tool Setup before probing.

All tools that have been defined in Tool Setup and have Multi-Tool Probing field set to Yes will be included in the multiple tool probing cycle. Any tool that has Multi-Tool Probing set to No will be skipped, but may still be probed using the single tool cycle.

⇒ If the diameters will be probed, an approximate value must be entered in the diameter field for each tool. The approximate values will be replaced by Probe values after each tool is probed.

Follow these steps to perform a Probe Multiple Tools cycle:

1. Select the Input console button to access the Input screen.
2. Select the Tool Setup softkey. The Tool Setup screen appears.
3. Select the More → softkey on the Tool Setup Screen.
4. Select the Probe Multiple Tools softkey.
5. The Start Cycle button flashes and you are prompted to press it.
6. Press the Start Cycle button to continue. A tool will be probed only if the Probe Cycle is defined and the Multi-Tool Probing field is set to Yes. The first tool to meet these requirements is placed in the spindle and probed.
7. The next tool to meet the multi tool probing criteria is located in the tool list. A tool change occurs and the tool is probed.
8. The tool change and probing process repeats until the original tool in spindle is reached.

⇒ The entire Probe Multiple Tools process is automatic (as long as the tools are in the ATC), and does not require operator supervision.

## Tool Wear Detection Data Block

Follow these steps to program a Tool Wear Detection data block:

1. From the Probe Tool Monitoring screen, select the Length Wear Detection, Diameter Wear Detection, or Length and Diameter softkey.
2. Enter the tool number to be monitored. The tool must be programmed in Tool Setup, and it must be calibrated.
3. Enter the Zero Calibration Tolerance or the Diameter Tolerance, or both if monitoring both length and diameter.
4. If desired, adjust the Speed (RPM) value.

When the data block executes, the current tool length is measured and compared with the tool length or diameter tolerance (or both, if monitoring both length and diameter). If the tool is shorter than the Zero Calibration value minus the programmed tolerance, the tool is worn. If the tool's diameter is less than the Diameter minus the programmed tolerance, the tool is worn. The "P" on the Tool Setup screen is replaced with a "D" to indicate the tool is defective.

If a spare tool was programmed, axis motion stops and a tool change automatically occurs. If there is no spare tool programmed in the ATC, axis motion stops and a message appears asking you to change tools.

## Probing Cycles

WinMax uses information programmed in the Part Setup screen to perform the Probing Cycles in Manual or Automatic mode.

### Part Setup Probing Cycles

The table below describes the process for each Part Setup Probing Cycle:

Cycle Type	Cycle Parameter Input	Automatic Execution	Results Displayed	Optional Storage
Edge Cycle, on page 8 - 35	Axis Probe Direction Positive or Negative Preset X or Y	Approach edge. Retract. Return to Start Position.	Deflection Position X, Y, or Z	Deflection Position X, Y, or Z is Part Zero X, Part Zero Y, or Probe Z.
Hole or Circle Pocket Cycle, on page 8 - 38	Start Angle 1, 2, 3 Preset X Preset Y	Approach 3 Circle Points from inside. Position Probe into Center.	Center X Center Y Diameter	Center is Part Zero X and Part Zero Y.
Cylinder Cycle, on page 8 - 40	Probing Radius Start Angle 1, 2, 3 Z Depth Preset X Preset Y	Approach 3 Cylinder points from outside. Position Probe above cylinder Center.	Center X Center Y Diameter	Center is Part Zero X and Part Zero Y.
Rectangular Pocket Inside Cycle, on page 8 - 42	Preset X Preset Y	Approach the 4 pocket walls from inside. Position Probe into pocket Center.	Center (X) Center (Y) Length (X) Length (Y)	Center is Part Zero X and Part Zero Y.
Rectangular Solid Outside Cycle, on page 8 - 44	Probing Length (X) Probing Length (Y) Z Depth Preset X Preset Y	Approach the 4 Rectangle walls from outside. Position Probe above rectangle Center.	Center (X) Center (Y) Length (X) Length (Y)	Center is Part Zero X and Part Zero Y.
Plane Intersection (Non-Rectangular Corner) Cycle, on page 8 - 46	X Probe Direction Offset 1 Offset 2 Y Probe Direction Offset 1 Offset 2 Preset X Preset Y	Approach 2 points on each of the two planes. Return to Start Position.	Intersection point of the two planes in the X/Y coordinate system	Intersection point is Part Zero X and Part Zero Y.

**Table 8-5. Part Setup Probing Cycles**

## Part Skew Probing Cycles

The following table describes the process of the Skew Probing Cycles:


Skew Cycle Type	Cycle Parameter Input	Automatic Execution	Display of the results	Optional storage
Edge Skew Cycle, on page 8 - 48	Axis X, Y, or Z Probe Direction: Positive or Negative Preset X or Preset Y	Approach edge. Retract. Return to Start Position.	Deflection Position X, Y, or Z Skew Angle (deg)	Skew Angle
Hole or Circle Pocket Skew Cycle, on page 8 - 49	Start Angle 1, 2, 3 Preset X Preset Y	Approach 3 Circle Points from inside. Position Probe into Center.	Center X Center Y Diameter Skew Angle (deg)	Skew Angle
Cylinder Skew Cycle, on page 8 - 50	Probing Radius Z Depth Start Angle 1, 2, 3 Preset X Preset Y	Approach 3 Cylinder Points from outside. Position Probe above cylinder Center.	Center X Center Y Diameter Skew Angle (deg)	Skew Angle
Rectangular Pocket Skew Cycle, on page 8 - 51	Preset X Preset Y	Approach the 4 pocket walls from inside. Position Probe into pocket Center.	Center X Center Y Length X Length Y Skew Angle (deg)	Skew Angle
Rectangular Solid Skew Cycle, on page 8 - 52	Probing Length X Probing Length Y Z Depth Preset X Preset Y	Approach the 4 Rectangle walls from outside. Position Probe above rectangle Center.	Center X Center Y Length X Length Y Skew Angle (deg)	Skew Angle

**Table 8-6. Part Skew Probing Cycles**

## Edge Cycle


An Edge Cycle is used for determining the location of a specified edge of the part. During an Edge Cycle, the part probe moves to the X, Y, or Z edge of the part and records the deflection position.

The figures below show part probe movement during X, Y, and Z Edge Cycles:

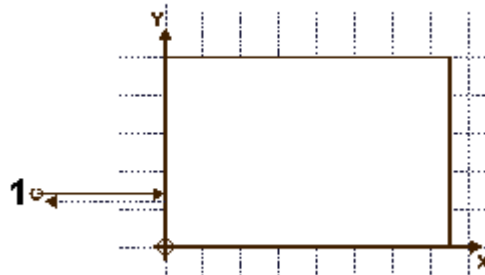


1	Start Position
---	----------------

Figure 8-4. Edge Cycle probing in +X direction—Top View

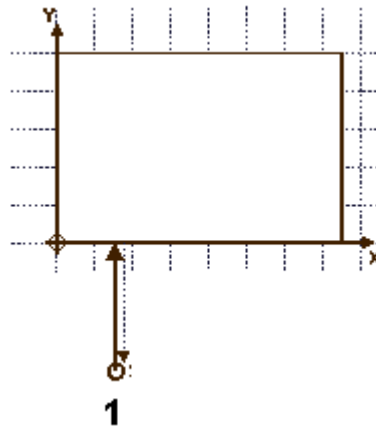

1	Start Position
---	----------------


Figure 8-5. Edge Cycle probing in +Y direction—Top View

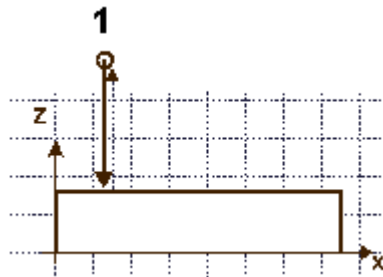

1	Start Position
---	----------------

**Figure 8-6. Edge Cycle probing in +Z direction—Side View**

The figure below shows a side view of an Edge cycle probing in the X direction:

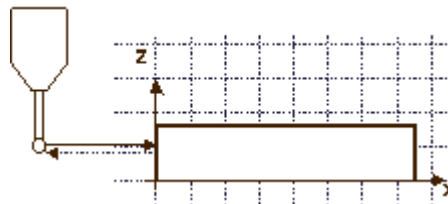

**Figure 8-7. Edge Cycle probing in X direction—Side View**

In addition to the standard Part Setup fields which are defined in Part Setup these Part Setup fields appear for the Edge Probing Cycle:

- **Edge (X, Y, or Z)**—The machine coordinate position of the Edge Cycle. This field appears upon completion of the Edge Cycle.
- **Part Probe Cycle**—The type of cycle chosen from the Part Zero Probe Cycles softkey menu.
- **Probing Axis**—The axis to move toward the edge of the part: X Axis, Y Axis, or Z Axis.
- **Probing Direction**—The direction to probe: Positive or Negative. This field appears when the Probing Axis is X or Y. It is not available for Probing Axis Z.
- **Preset X, or Preset Y**—An offset for Part Zero X and/or Part Zero Y. Entering offsets in either of these fields is optional.

The offset(s) will be subtracted from the center point of the circle and applied to Part Zero X and Y, if you select the Accept Position as Part Zero softkey which appears after the cycle has been run. This field appears when the Probing Axis is X or Y. It is not available for Probing Axis Z.

Follow these steps to program an Edge Probing Cycle:

1. From the Part Zero Probe Cycles softkey menu, select Edge.
2. In the Probing Axis field, select the axis to move toward the edge of the part: X Axis, Y Axis, or Z Axis.
3. In the Probing Direction field, select the direction to probe. This field only appears when the Probing Axis is X or Y.
4. If you want to program an offset from Part Zero X or Part Zero Y, enter the offset value in the Preset X or Preset Y field. The field only appears when Probing Axis is X or Y.



After the Part Setup fields are entered, start the Edge Probing Cycle:

1. Place the part probe in the spindle and jog the probe to the Start Position, near the edge to be probed.
2. Press the Start Probing softkey. The Start Cycle button flashes.
3. Press the flashing Start Cycle button.
4. The Accept Position as Part Zero and Do Not Accept softkeys appear.
  - The Accept Position as Part Zero softkey accepts the edge position and subtracts the Preset X or Y value to determine Part Zero.
  - The Do Not Accept softkey ignores the edge position value and the Preset X or Y value. Part Zero remains unchanged.
5. The initial Part Setup screen appears with Part Zero entries established during the cycle.

## Hole or Circle Pocket Cycle

The Hole or Pocket Cycle is used for determining the center location and diameter of a hole or pocket. During a Hole or Circle Pocket Cycle, the part probe moves from the inside of the circle out to three points on the edge, touches at each point, and returns to the Start Position within the circle after each touch. The software records each deflection position and calculates the center location. The probe positions in the center of the pocket.

The figure below shows part probe movement during a Hole or Circle Pocket Cycle:

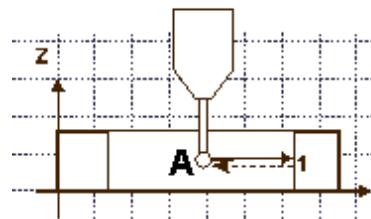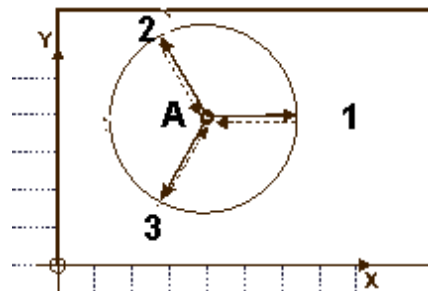

A	Start Position
1	Start Angle 1
2	Start Angle 2
3	Start Angle 3

**Figure 8–8. Part Probe movement during a Hole or CirclePocket cycle**

In addition to the standard Part Setup fields which are defined in Part Setup, these fields appear for the Hole or Circle Pocket Probing Cycle:

- **Center X**—The Center X machine coordinate location. This field appears upon completion of the cycle.
- **Center Y**—The Center Y machine coordinate location. This field appears upon completion of the cycle.
- **Diameter**—The diameter of the hole or circle pocket. This field appears upon completion of the cycle.
- **Part Probe Cycle**—The type of cycle chosen from the Part Zero Probe Cycles menu.



- **Start Angle 1, 2, 3**—The three probe deflection points. Relative to the 3:00 position, and increasing counterclockwise as viewed from above the part, the default angles are 0, 120, and 240, respectively. Change the angles if the part contains geometry that interferes with the defaults.
- **Preset X and Preset Y**—An offset for Part Zero X and/or Part Zero Y. Entering offsets in either of these fields is optional.

The offset(s) will be subtracted from the center point of the circle and applied to Part Zero X and Y if you select the Accept Position as Part Zero softkey, which appears after the cycle has been run.

Follow these steps to program a Hole or Circle Pocket Probing Cycle:

1. From the Part Zero Probe Cycles softkey menu, select Hole or Circle Pocket.
2. In the Start Angle fields, enter the desired approach angles.
3. If you want to program an offset from Part Zero X or Part Zero Y, enter the offset value in the Preset X or Preset Y field.


After Part Setup fields are entered, start the Hole or Circle Pocket Probing Cycle:

1. Place the part probe in the spindle and jog it to the Start Position - into the pocket and below the surface.
2. Press the Start Probing Cycle softkey. The Start Cycle button flashes.
3. Press the Start Cycle button.
4. The Accept Position as Part Zero and Do Not Accept softkeys appear.
  - Accept Position as Part Zero accepts the center position and subtracts presets to determine Part Zero.
  - Do Not Accept ignores the center value and the Preset X or Y value. Part Zero remains unchanged.
5. The initial Part Setup screen with Part Zero entries appears.

## Cylinder Cycle

The Cylinder Cycle is used for determining the center location and the diameter of a cylinder. During a Cylinder Cycle, the part probe moves from the Start Position above the cylinder, out and down to three points around the diameter. The probe touches at each point and returns up and over to the Start Position above the cylinder after each touch. The diameter and the center location of the cylinder is determined.

The figure below shows part probe movement during a Cylinder Cycle:

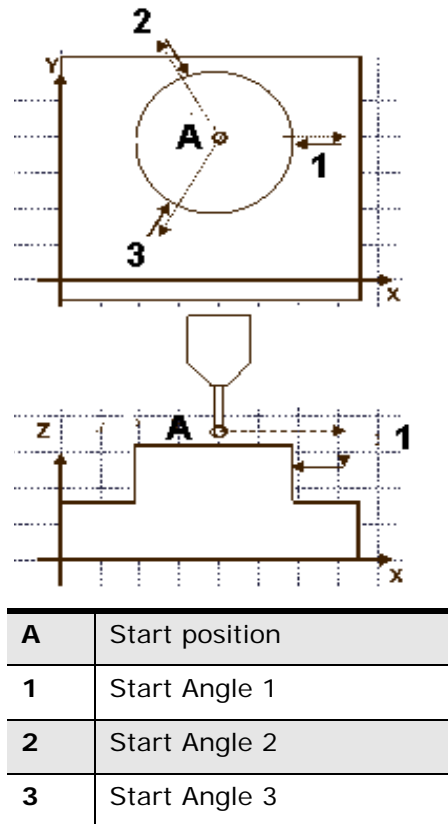

**Figure 8-9. Part Probe movement during Cylinder cycle**

In addition to the standard Part Setup fields which are defined in Part Setup, these fields appear for the Cylinder Cycle:

- **Center X**—The Center X machine coordinate location. This field appears upon completion of the cycle.
- **Center Y**—The Center Y machine coordinate location. This field appears upon completion of the cycle.
- **Diameter**—The diameter of the cylinder. This field appears upon completion of the cycle.
- **Part Probe Cycle**—The type of cycle chosen from the Part Zero Probe Cycles softkey menu.

- **Probing Radius**—Value for the probe search radius. This value is used for determining the point at which the probe stops horizontal travel and begins to move downward.
- **Start Angle 1, 2, 3**—The three probe deflection points. Relative to the 3:00 position and increasing counterclockwise as viewed from above the part, the default angles are 0, 120, and 240, respectively. Change the angles if the part contains geometry that interferes with the defaults.
- **Z Depth**—Distance the Z axis moves downward before changing direction and searching horizontally for each contact point on the cylinder's diameter. Z Depth can be set to move the probe anywhere within the Z Axis travel limits.

⇒ There should be no deflection during the Z move.

- **Preset X and Preset Y**—An offset for Part Zero X and/or Part Zero Y. Entering offsets in either of these fields is optional.

The offset(s) will be subtracted from the center point of the circle and applied to Part Zero X and Y if you select the Accept Position as Part Zero softkey, which appears after the cycle has been run.

Follow these steps to program a Cylinder Probing Cycle:

1. From the Part Zero Probe Cycles softkey menu, select Cylinder.
2. In the Probing Radius field, enter the probe search radius.
3. In the Start Angle fields, enter the desired approach angles.
4. In the Z Depth field, enter the distance the Z axis moves down before changing direction and searching horizontally for each contact point.
5. If you want to program an offset from Part Zero X and Part Zero Y, enter the offset value in the Preset X and Preset Y field.


When the Part Setup fields have been entered, start the Cylinder Probing Cycle:

1. Place the part probe in the spindle and jog the probe to the Start Position, above the cylinder.
2. Press the Start Probing Cycle softkey. The Start Cycle button flashes.
3. Press the flashing Start Cycle button.
4. The Accept Position as Part Zero and Do Not softkeys appear.
  - Accept Position as Part Zero - accept the center and subtracts the presets to determine part zero.
  - The Do Not Accept - ignore the center values and the Preset X or Y value. Part Zero remains unchanged.
5. The initial Part Setup screen appears with Part Zero entries established during the cycle.

## Rectangular Pocket Inside Cycle

The Rectangular Pocket Inside (or Rectangular Pocket) Cycle is used for determining the center location of the pocket and the X and Y length of the rectangle. During a Rectangular Pocket Cycle, the part probe moves from inside the pocket out to a point on each edge of the rectangle, touches at each point, and returns to the Start Position after each touch. The software records each deflection position and calculates the center location and lengths.

The figure below shows part probe movement during a Rectangular Pocket Cycle.

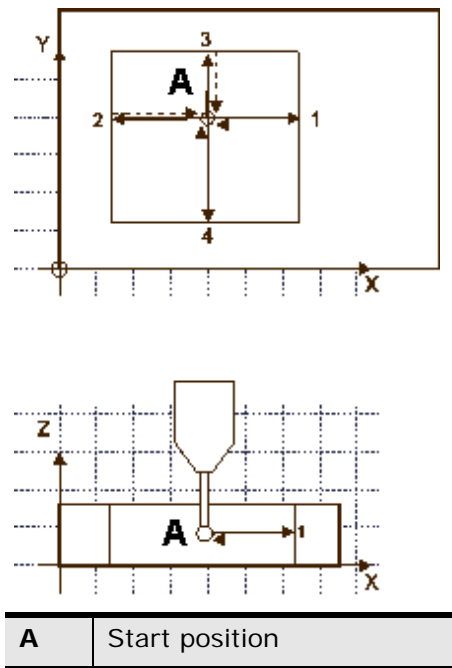

**Figure 8–10. Part Probe movement during Rectangular Pocket cycle**

In addition to the standard Part Setup fields which are defined in Part Setup, these fields appear for the Rectangular Pocket Cycle:

- **Center X**—The Center X machine coordinate location. This field appears upon completion of the cycle.
- **Center Y**—The Center Y machine coordinate location. This field appears upon completion of the cycle.
- **Length (X)**—The X length of the pocket. This field appears upon completion of the cycle.
- **Length (Y)**—The Y length of the pocket. This field appears upon completion of the cycle.

- **Part Probe Cycle**—The type of cycle chosen from the Part Zero Probe Cycles softkey menu.
- **Preset X or Preset Y**—Offset for Part Zero X and/or Part Zero Y. Entering offsets in either of these fields is optional. The offset(s) will be subtracted from the center point of the pocket and applied to Part Zero X and Y if you select the Accept Position as Part Zero softkey.

Follow these steps to program a Rectangular Pocket Cycle:

1. From the Part Zero Probe Cycles softkey menu, select Rectangular Pocket Inside.
2. If you want to program an offset for Part Zero X or Part Zero Y, enter the offset value in the Preset X or Preset Y field.

After the Part Setup fields are entered, start the Rectangular Pocket Cycle:

1. Place the part probe in the spindle and jog the probe to the Start Position, into the pocket and below the surface.
2. Press the Start Probing Cycle softkey. The Start Cycle button flashes.
3. Press the Start Cycle button.
4. The Accept Position as Part Zero and Do Not Accept softkeys appear. Press the appropriate softkey.
  - Accept Position as Part Zero - accept the center and subtracts the presets to determine part zero.
  - The Do Not Accept - ignore the center and length values and the Preset X or Y value. Part Zero remains unchanged.


Refer to the "Part Zero Storage" section of this chapter for more information.

5. The initial Part Setup screen appears with Part Zero entries established during the cycle.

## Rectangular Solid Outside Cycle

A Rectangular Solid Outside (or Rectangular Solid) Cycle is used for determining the center location of the pocket and the X and Y length of the rectangle. During a Rectangular Solid Cycle, the part probe moves from above the rectangle out and down to a point on each of the four walls, touches at each point, and returns to the Start Position after each touch. Each deflection position is recorded the center position and lengths are calculated.

The figure below shows part probe movement during a Rectangular Solid Cycle:

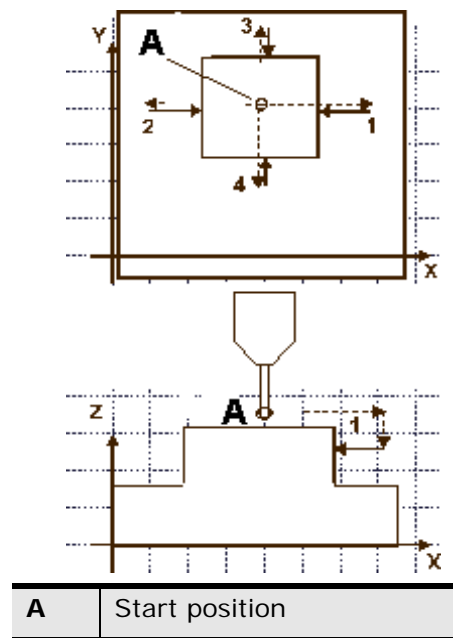

*Figure 8-11. Part Probe movement during Rectangular Solid cycle*

In addition to the standard Part Setup fields which are defined in Part Setup, these fields appear for the Rectangular Solid Cycle:

- **Center X**—The Center X machine coordinate location. This field appears upon completion of the cycle.
- **Center Y**—The Center Y machine coordinate location. This field appears upon completion of the cycle.
- **Length (X)**—The X length of the rectangle. This field appears upon completion of the cycle.
- **Length (Y)**—The Y length of the rectangle. This field appears upon completion of the cycle.
- **Part Probe Cycle**—The type of cycle chosen from the Part Zero Probe Cycles softkey menu.
- **Probing Length X**—A maximum value of the estimated X length. Half of this value is used to determine the point at which the Z axis begins to move downward (i.e., its horizontal travel limit for X).

- **Probing Length Y**—A maximum value of the estimated Y length. Half of this value is used to determine the point at which the Z axis begins to move downward (i.e., its horizontal travel limit for Y).
- **Z Depth**—The distance the Z axis moves downward before changing direction and searching horizontally for each contact point on the cylinder's diameter. Z Depth can be set to move the probe anywhere within the Z Axis travel limits.

⇒ There should be no deflection during the Z move.

- **Preset X and Preset Y**—An offset for Part Zero X and/or Part Zero Y. Entering offsets in either of these fields is optional. The offset(s) will be subtracted from the center point of the rectangle and applied to Part Zero X and Y if you select the Accept Position as Part Zero softkey, which appears after the cycle has been run.

Follow these steps to program a Rectangular Solid Cycle:

1. From the Part Setup Probe Cycles softkey menu, select Rectangular Solid Outside.
2. In the Probing Length X field, enter an estimate for the X length.
3. In the Probing Length Y field, enter an estimate for the Y length.
4. In the Z Depth field, enter the distance the Z axis should move down.
5. If you want to program an offset for Part Zero X and Part Zero Y, enter the offset value in the Preset X and Preset Y field.


When the Part Setup fields have been entered, start the Rectangular Solid Cycle:

1. Place the part probe in the spindle and jog the probe to the Start Position, above the middle of the rectangle.
2. Press the Start Probing Cycle softkey. The Start Cycle button flashes.
3. Press the Start Cycle button.
4. The Accept Position as Part Zero and Do Not Accept softkeys appear. Press the appropriate softkey.
  - Accept Position as Part Zero – accept the center and subtracts the presets to determine part zero.
  - The Do Not Accept - ignore the center and length values and the Preset X or Y value. Part Zero remains unchanged.
5. The initial Part Setup screen appears with Part Zero entries established during the cycle.

## Plane Intersection (Non-Rectangular Corner) Cycle

A Plane Intersection Cycle is used for determining an X and Y intersection for a non-rectangular corner. During a Plane Intersection Cycle, the part probe moves from an offset position to two points in the X direction and two points in the Y direction to determine an X and Y intersection point.

The Plane Intersection cycle can be used with solid or pocket geometry. The figure below shows part probe movement with the two types of geometry:

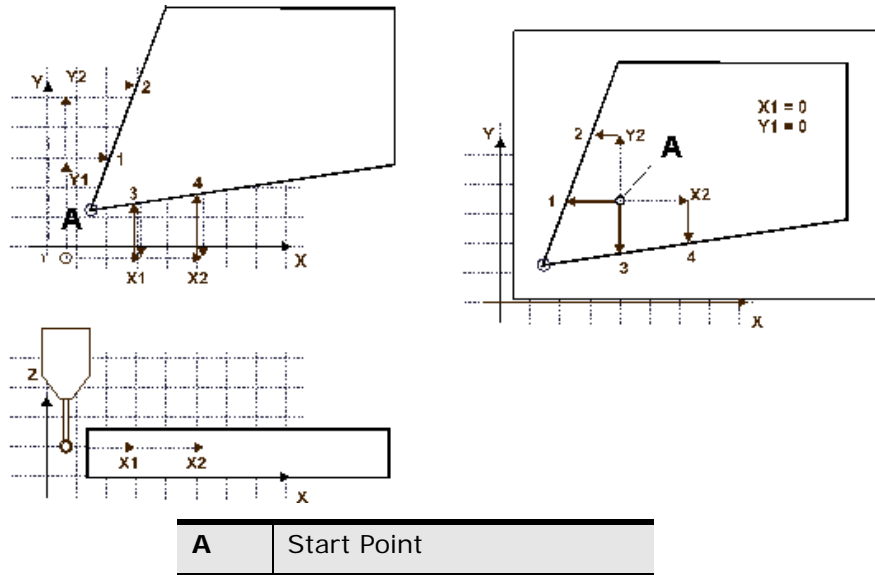

**Figure 8-12. Part Probe movement with Solid or Pocket geometry**

In addition to the standard Part Setup fields which are defined in Part Setup, these fields appear for the Plane Intersection Cycle:

- **Corner X**—The X position of the intersection. This field appears when the cycle is finished.
- **Corner Y**—The Y position of the intersection. This field appears when the cycle is finished.
- **Probing Direction X**—The X direction to probe: Positive or Negative.
- **Offset 1**—The first Y offset position.
- **Offset 2**—The second Y offset position.
- **Probing Direction Y**—The Y direction to probe: Positive or Negative.
- **Offset 1**—The first X offset position.
- **Offset 2**—The second X offset position.
- **Preset X and Preset Y**—An offset for Part Zero X and/or Part Zero Y. Entering offsets in either of these fields is optional. The offset(s) will be subtracted from the corner point and applied to Part Zero X and Y if you select the Accept Position as Part Zero softkey, which appears after the cycle has run.



Follow these steps to program a Plane Intersection Cycle:

1. From the Part Zero Probe Cycles softkey menu, select Plane Intersection.
2. In the Probing Direction X field, select Positive or Negative.
3. In the Offset 1 field, enter the position for the first Y Offset, relative to the Start Position.
4. In the Offset 2 field, enter the position for the second Y Offset, relative to the Start Position.
5. In the Probing Direction Y field, select Positive or Negative.
6. In the Offset 1 field, enter the position for the first X Offset, relative to the Start Position.
7. In the Offset 2 field, enter the position for the second X Offset, relative to the Start Position.
8. If you want to program an offset from Part Zero X or Part Zero Y, enter the offset value in the Preset X or Preset Y field.

When the Part Setup fields have been entered, start the Plane Intersection Cycle:

1. Place the part probe in the spindle and jog the probe into the Start Position, near the non-rectangular corner.
2. Press the Start Probing Cycle softkey. The Start Cycle button flashes.
3. Press the flashing Start Cycle button.
4. The Accept Position as Part Zero and Do Not Accept softkeys appear. Press the appropriate softkey.
  - Accept Position as Part Zero - accept the corner position and subtracts the Preset X or Y value to determine Part Zero.
  - The Do Not Accept - ignore the corner values and the Preset X or Y value. Part Zero remains unchanged.
5. The initial Part Setup screen appears with Part Zero entries established during the cycle.

## Edge Skew Cycle

Follow these steps to program an Edge Skew Probing Cycle:

1. From the Part Setup Skew Probe Cycle softkey menu, select Edge.
2. In the Probing Axis field, select the axis to move toward the edge of the part: X Axis, Y Axis, or Z Axis.
3. In the Probing Direction field, select the direction to probe: Positive or Negative. Z Axis always probes in the Negative direction.
4. Program an offset in the Preset X or Preset Y field, if desired.

When the Part Setup fields have been entered, start the Edge Skew Probing Cycle:

1. Place the part probe in the spindle and jog the probe to the Start Position, near the edge to be probed.
2. Press the Start Probing Cycle softkey. The Start Cycle button flashes.
3. Press the Start Cycle button.

The tool motion for an Edge Skew Cycle is the same as the motion described for an Edge Cycle. The results appear in the Edge (X,Y, or Z) and Skew Angle (Deg) fields. The probe returns to the Start Position.

4. After the cycle runs, the Accept X/Y Skew Angle and Do Not Accept softkeys appear.
  - The Accept X/Y Skew Angle softkey accepts the skew position and subtracts the Preset X or Y value to determine Part Zero.
  - The Do Not Accept softkey ignores the edge position value and the Preset X or Y value. Part Zero remains unchanged.
5. The initial Part Setup screen appears with the skew value established during the cycle stored in the X/Y Skew (deg) field, if accepted.

## Hole or Circle Pocket Skew Cycle

Follow these steps to program a Hole or Circle Pocket Skew Probing Cycle:

1. From the Part Setup Skew Probe Cycle softkey menu, select the Hole or Circle Pocket softkey.
2. In the Start Angle 1, Start Angle 2, and Start Angle 3 fields, enter the desired approach angles.
3. Program an offset in the Preset X and/or Preset Y field(s), if desired.

When the Part Setup fields have been entered, start the Hole or Circle Skew Probing Cycle:

1. Place the part probe in the spindle and jog the probe to the Start Position, inside the pocket near the center.
2. Press the Start Probing Cycle softkey. The Start Cycle button flashes.
3. Press the Start Cycle button.  
The tool motion for a Hole or Circle Pocket Skew Probing Cycle is the same as the motion described for a Hole or Circle Pocket Cycle. The results appear in the Center X, Center Y, Diameter, and Skew Angle (deg) fields. The probe stops in the center of the pocket.
4. After the cycle runs, the Accept X/Y Skew Angle and Do Not Accept softkeys appear.
  - The Accept X/Y Skew Angle softkey accepts the skew position and subtracts the Preset X or Y value to determine Part Zero.
  - The Do Not Accept softkey ignores the edge position value and the Preset X or Y value. Part Zero remains unchanged.

Refer to the "Part Zero Storage" section of this chapter for more information.

5. The initial Part Setup screen appears with the skew value established during the cycle stored in the X/Y Skew (deg) field, if accepted.

## Cylinder Skew Cycle

Follow these steps to program a Cylinder Skew Probing Cycle:

1. From the Part Setup Skew Probe Cycle softkey menu, select Cylinder.
2. In the Probing Radius field, enter the probe search radius.
3. In the Start Angle fields, enter the desired approach angles.
4. In the Z Depth field, enter the distance the Z axis moves down before changing direction and searching horizontally for each contact point.
5. Program an offset in the Preset X and/or Preset Y field(s), if desired.

When the Part Setup fields have been entered, start the Cylinder Skew Probing Cycle:

1. Place the part probe in the spindle and jog the probe to the Start Position, above the cylinder near the center.
2. Press the Start Probing Cycle softkey. The Start Cycle button flashes.
3. Press the Start Cycle button.  
The tool motion for a Cylinder Skew Probing Cycle is the same as the motion described for a Cylinder Cycle. The results appear in the Center X, Center Y, Diameter, and Skew Angle (deg) fields. The probe stops in the center above the cylinder.
4. After the cycle runs, the Accept X/Y Skew Angle and Do Not Accept softkeys appear.
  - The Accept X/Y Skew Angle softkey accepts the skew position and subtracts the Preset X or Y value to determine Part Zero.
  - The Do Not Accept softkey ignores the edge position value and the Preset X or Y value. Part Zero remains unchanged.

Refer to the "Part Zero Storage" section of this chapter for more information.

5. The initial Part Setup screen appears with the skew value established during the cycle stored in the X/Y Skew (deg) field, if accepted.

## Rectangular Pocket Skew Cycle

Follow these steps to program a Rectangular Pocket Skew Cycle:

1. From the Part Setup Skew Probe Cycle softkey menu, select Rectangular Pocket Inside.
2. Program an offset for the Preset X and/or Preset Y field, if desired.

When the Part Setup fields have been entered, start the Rectangular Pocket Skew Probing Cycle:

1. Place the part probe in the spindle and jog the probe to the Start Position, inside the rectangular pocket.
2. Press the Start Probing Cycle softkey. The Start Cycle button flashes.
3. Press the Start Cycle button.

The tool motion for a Rectangular Pocket Skew Probing Cycle is the same as the motion described for a Rectangular Pocket Cycle. The results are displayed on the screen in the Center X, Center Y, Length (X), Length (Y) and Skew Angle (deg) fields. The probe stops in the center of the pocket.

4. After the cycle runs, the Accept X/Y Skew Angle and Do Not Accept softkeys appear.
  - The Accept X/Y Skew Angle softkey accepts the skew position and subtracts the Preset X or Y value to determine Part Zero.
  - The Do Not Accept softkey ignores the edge position value and the Preset X or Y value. Part Zero remains unchanged.

Refer to *Part Zero Storage Cycle*, on page 8 - 20 for more information.

5. The initial Part Setup screen appears with the skew value established during the cycle stored in the X/Y Skew (deg) field, if accepted.

## Rectangular Solid Skew Cycle

Follow these steps to program a Rectangular Solid Skew Cycle:

1. From the Part Setup Skew Probe Cycle softkey menu, select Rectangular Solid Outside.
2. In the Probing Length X field, enter the pocket's estimated X Length.
3. In the Probing Length Y field, enter the pocket's estimated Y Length.
4. In the Z Depth field, enter the distance the Z axis moves downward before changing direction and moving to the edges for deflection.
5. Program an offset for the Preset X and/or Preset Y field, if desired.

When the Part Setup fields have been entered, start the Rectangular Solid Skew Probing Cycle:

1. Place the part probe in the spindle and jog the probe to the Start Position, above the rectangle near the center.
2. Press the Start Probing Cycle softkey. The Start Cycle button flashes.
3. Press the Start Cycle button.

The tool motion for a Rectangular Solid Skew Probing Cycle is the same as the motion described for a Rectangular Solid Cycle. The results appear in the Center X, Center Y, Length (X), Length (Y), and Skew Angle (deg) fields. The probe moves to the center above the rectangle.

4. After the cycle runs, the Accept X/Y Skew Angle and Do Not Accept softkeys appear.
  - The Accept X/Y Skew Angle softkey accepts the skew position and subtracts the Preset X or Y value to determine Part Zero.
  - The Do Not Accept softkey ignores the edge position value and the Preset X or Y value. Part Zero remains unchanged.


Refer to *Part Zero Storage Cycle*, on page 8 - 20 for more information.

5. The initial Part Setup screen appears with the skew value established during the cycle stored in the X/Y Skew (deg) field, if accepted.


# MILL SLOT

The Mill Slot block creates a line or arc shape of any width. The slot is defined by a line or an arc segment and a width. The ends of the slot can be round or square.


## Line Slot

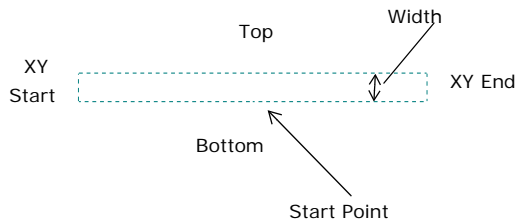

## Arc Slot

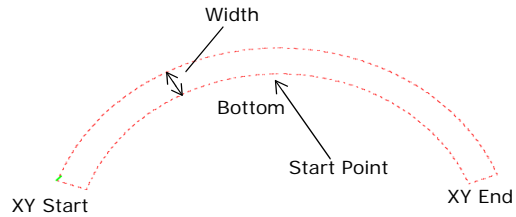

Milling begins at the center of the bottom wall of the slot, assuming the shape is parallel to the X axis (Angle field is set to zero). The same relative “bottom” wall is maintained when the shape is rotated, so when the Angle field is nonzero, milling begins on the side that would be parallel with the X-axis if the Angle was zero:

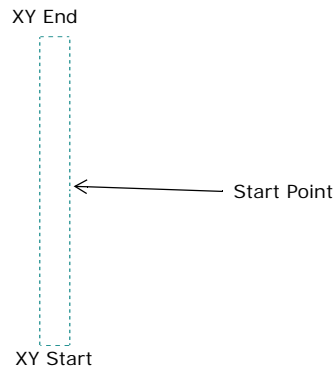

**Figure 9–1. Line Slot rotated 90°**

To access the Mill Slot block:

1. From a New Block screen, select the Milling softkey.
2. Select the More softkey.
3. Select the Slot softkey.




A Mill Slot data block will be converted to a Mill Contour data block if the program is saved as an HD3 program.

The Mill Slot screen uses three tabs: Start, Geometry, and Caps.

Start tab . . . . .	9	-	2
Geometry tab. . . . .	9	-	3
Caps tab . . . . .	9	-	4

## Start tab

The Mill Slot block Start tab fields define the slot shape, width, and common starting information.

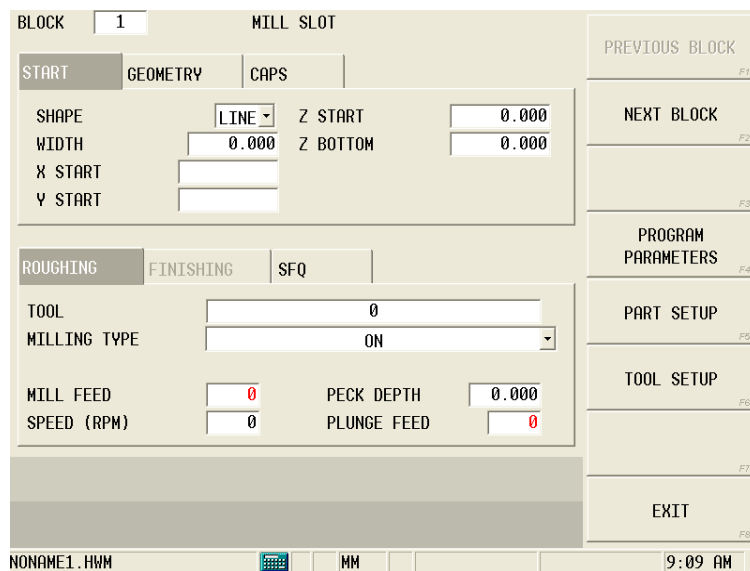

**Figure 9–2. Mill Slot Start tab**

Fields are:

- **Shape**—specifies the shape of the slot, either line or arc.
- **Width**—indicates the width of the slot. The slot width determines how far to expand the centerline or centerarc segment programmed in the Geometry tab. Half of the programmed width is applied to each side of the line or arc.
- **X Start**—indicates the starting point of the line or arc segment in X.
- **Y Start**—indicates the starting point of the line or arc segment in Y.
- **Z Start**—indicates the plunge feedrate start point.
- **Z Bottom**—indicates the plunge bottom point.



## Geometry tab

The Geometry tab allows the user to program a single line or arc segment. The fields that appear depend on the slot shape selected in the Start tab:

START	GEOMETRY	CAPS
X END	<input type="text" value="5.000"/>	LENGTH CAL <input type="text" value="4.243"/>
Y END	<input type="text" value="5.000"/>	ANGLE CAL <input type="text" value="45.000"/>

**Figure 9-3. Mill Slot Geometry tab for a Line slot**

Line geometry fields are:

- **X End**—indicates the end point of the line segment in X.
- **Y End**—indicates the end point of the line segment in Y.
- **Length**—indicates the distance from the start point to the end point.
- **Angle**—indicates the angle in degrees of the line segment measured from the three o'clock position.

⇒ Some fields may be automatically calculated when sufficient data has been entered. The CAL notation appears before the field.

START	GEOMETRY	CAPS
X END	<input type="text" value="5.000"/>	SWEEP ANGLE CAL <input type="text" value="180.000"/>
Y END	<input type="text" value="5.000"/>	RADIUS CAL <input type="text" value="2.121"/>
X CENTER	<input type="text" value="3.500"/>	DIRECTION <input type="text" value="CW"/>
Y CENTER CAL	<input type="text" value="3.500"/>	

**Figure 9-4. Mill Slot Geometry tab for an Arc slot**


Arc geometry fields are:

- **X End**—indicates the end point of the arc segment in X.
- **Y End**—indicates the end point of the arc segment in Y.
- **X Center**—indicates the center point of the arc, in X.
- **Y Center**—indicates the center point of the arc, in Y.
- **Sweep Angle**—indicates the angular distance from the start point to the end point around the center point. The range is  $-360^{\circ}$  to  $360^{\circ}$ .
- **Radius**—indicates the distance from the center point to start and end points.

- **Direction**—indicates the direction of rotation from the start point to the end point around the center point.

## Caps tab


The Caps tab contains fields that define the ends of the slot.

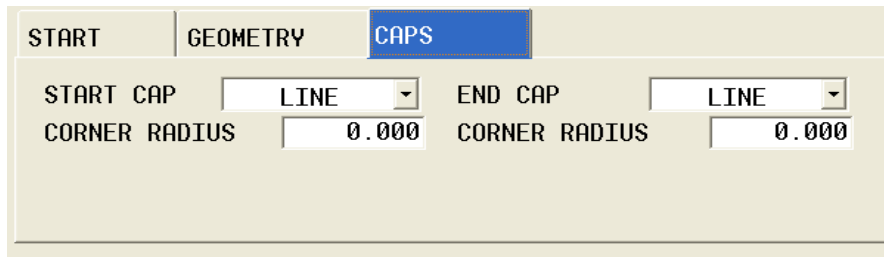


*Figure 9-5. Mill Slot Caps tab*

Fields are:

- **Start Cap**—specifies the shape that is used to close the slot at the specified start point:
  - **Line**—flat edge connects the top and bottom edges of the slot, passing through the programmed start point.
  - **Append Arc**—rounded edge; center of semi-circle is programmed start point.
  - **Include Arc**—rounded edge; outermost edge of semi-circle is programmed start point.
- **End Cap**—specifies the shape that is used to close the slot at the specified end point:
  - **Line**—flat edge connects the top and bottom edges of the slot, passing through the programmed endpoint.
  - **Append Arc**—rounded edge; center of semi-circle is programmed endpoint.
  - **Include Arc**—rounded edge; outermost edge of semi-circle is programmed endpoint.
- **Corner Radius**—indicates the blend radius for the corners of the Start Cap or End Cap if either or both are set to Line.

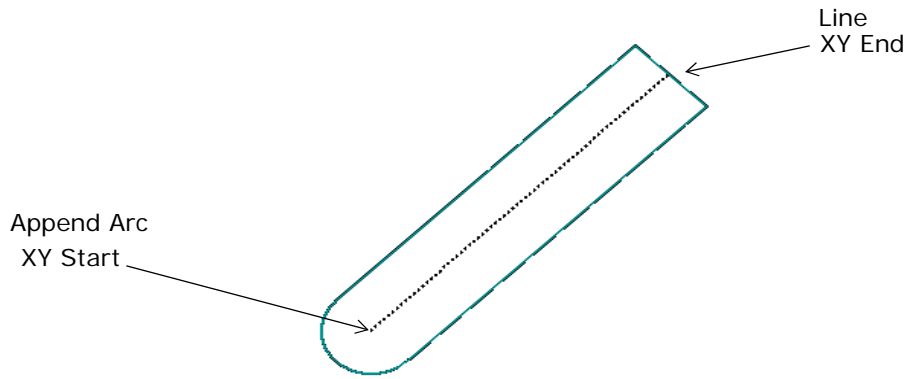

**Figure 9–6. Append Arc Start Cap and Line End Cap**

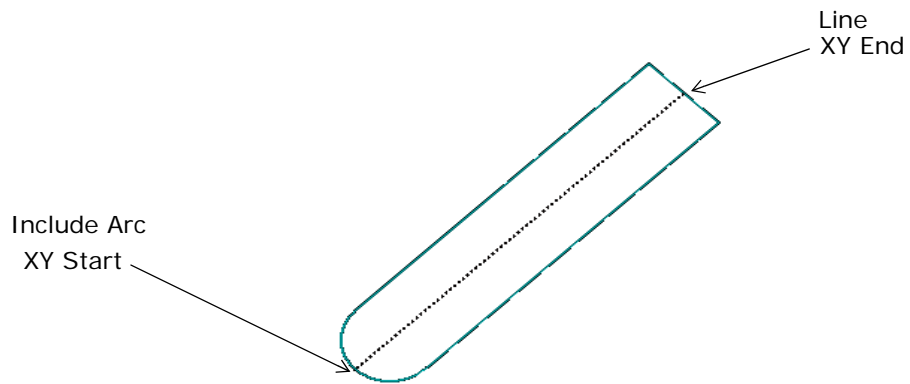

**Figure 9–7. Include Arc Start Cap and Line End Cap**




# THREAD MILL

The Thread Mill data block mills a part with internal or external threads. Milling can be clockwise or counterclockwise, and occur from top to bottom or bottom to top.

## Example 1 - Thread Direction Down


The following diagram shows the Z positions, and the arrows indicate tool movement when the Thread Direction is Down. In this case, the tool moves at rapid feedrate to the Z Plunge Start position, then feeds to the Z Thread Start position. The tool mills down to the Z Thread End position. It then moves at rapid feedrate out of the hole to Z Plunge Start + Z retract clearance height (set in Program Parameters).

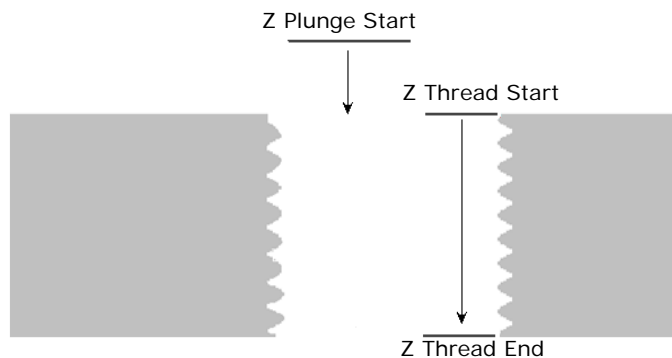

*Figure 10–1. Tool movement when Thread Direction is down*

## Example 2 - Thread Direction Up

The following diagram shows the Z positions, and the arrows indicate tool movement when Thread Direction is Up. In this case, the tool moves at rapid feedrate to the Z Plunge Start position, then feeds down to the Z Thread End position, and mills up to the Z Thread Start position. The tool then moves at rapid to Z Plunge Start and retracts to the Z retract clearance height (set in Program Parameters).

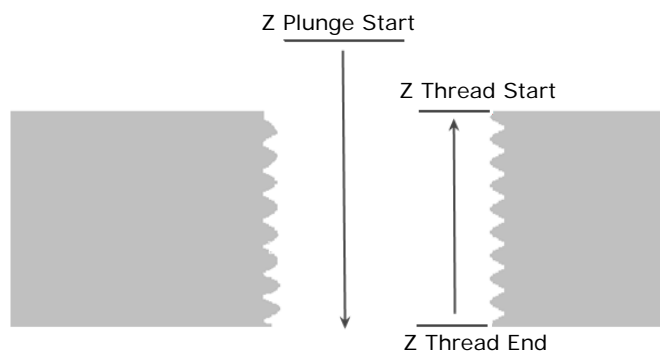

**Figure 10–2. Tool movement when Thread Direction is up**

To access the Thread Mill block:

1. From a New Block screen, select the Milling softkey.
2. Select the More softkey twice.
3. Select the Thread softkey. The Thread Mill block opens:

BLOCK 5		MILL THREAD		PREVIOUS BLOCK	
X CENTER	15.000	Z PLUNGE START	5.000	F1	
Y CENTER	15.000	Z THREAD START	-1.000	NEXT BLOCK	
RADIUS	50.000	Z THREAD END	-80.000	F2	
THREAD DIR	CW DOWN	START ANGLE	20.00	DELETE BLOCK	
PITCH	1.270	THREAD TAPER ANGLE	0.0	F3	
INTERNAL THREAD	YES	CUT COMP ENABLE	NO	PROGRAM PARAMETERS	
CUTTER TYPE	SINGLE	BLEND TYPE	ARCS	F4	
START AT CENTER	YES			PART SETUP	
ROUGHING	SFQ			F5	
TOOL	0			TOOL SETUP	
CUT LENGTH	0.000	RADIAL PECK COUNT	1	F6	
MILL FEED	0	RADIAL PECK DEPTH	0.000	INSERT BLOCK BEFORE	
SPEED (RPM)	0	PLUNGE FEED	0	F7	
To jump to a block, enter its number.					
EXIT					
F8					

NONAME1.HWM 10:48 AM

**Figure 10–3. Mill Thread screen**

The fields are:


- **X Center**—specifies the X-axis coordinate for the center of the thread.
- **Y Center**—specifies the Y-axis coordinate for the center of the thread.
- **Radius**—specifies the radius of the major threads. When tapered threads are enabled, this is the smallest radius of the threads.
- **Thread Dir**—specifies the direction of the threads (clockwise or counterclockwise) and the manner in which they are cut (up or down).
- **TPI**—specifies the threads per inch. This field is available only when units are imperial (inch). When this value changes, the pitch is recalculated.
- **Pitch**—specifies the distance between threads. If this value is changed by the operator, the TPI is recalculated.
- **Internal Thread**—specifies if threads are internal (Yes) or external (No). Default is Yes.
- **Cutter Type**—specifies whether a single or multi-point cutter is used. The control uses this information for internal calculations. Default is Single.

⇒ For tapered threads, a single-point cutter must be used.


- **Z Plunge Start**—specifies the Z position at which plunge feed begins.
- **Z Thread Start**—specifies the Z position for the top of the thread.

- **Z Thread End**—specifies the Z position for the bottom of the thread.
- **Start Angle**—specifies the starting angle for the threading operation in the XY plane. Zero Angle is at the 3 o'clock position.
- **Thread Taper Angle**—specifies the angle for tapered threads. External threads must be positive, and internal threads must be negative. Enter zero for non-tapered threads. This field is available only when the Cutter Type is Single.

### -10° Taper with Internal Threads

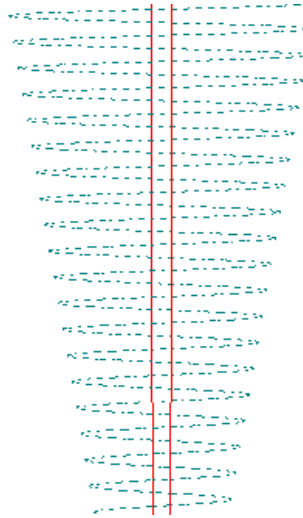


### 10° Taper with External Threads

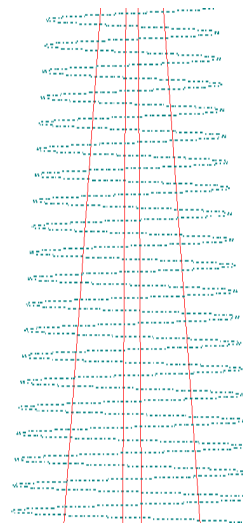


- **Cut Comp Enable**—specifies whether the tool path is offset by the tool radius. Default is No. When enabled (Yes), the value of the Thread Diameter (set in Tool Setup) is used to determine the radius.
- **Blend Type**—specifies the type of blend move to make at the beginning and end of the threading operation. Choices are line, ramp, arc, helix.


#### Line

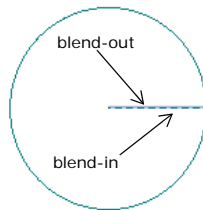


#### Ramp

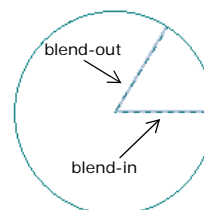

#### Arc

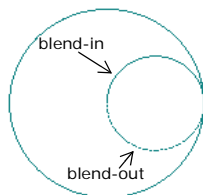

#### Helix

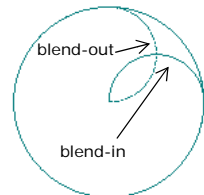

- **Start At Center**—specifies if the threading operation should start at the

center of the threads. Default is Yes. If set to No, the Blend Offset value from Program Parameters is used. This field is available only when the Internal Thread field is set to Yes.

- **Cut Length**—specifies the tool's length of cut, set in the Length of Cut field on the Tool Type Setup screen. Used when Cutter Type is set to Multi.
- **Radial Peck Count**—specifies the number of radial pecks.
- **Radial Peck Depth**—specifies the incremental step-out distance for each radial peck.



# TOOL CHANGE OPTIMIZATION

Tool Change Optimization reduces the number of tool changes in Conversational programs. In typical Conversational program execution, each data block is completed (roughing and finishing) before the program moves to the next data block. With Tool Change Optimization, operations are completed sequentially by tool; for example, the program completes all operations that use tool 1 before moving to the operations that use tool 2, and so on.

For example:

A Mill Frame with tool 1 for roughing and tool 2 for finishing, patterned three times, with tool 1 in the spindle:

Without Tool Change Optimization, each frame in the pattern is rough cut and finish cut before moving to the next frame in the pattern. Sequence of tool changes: 1, 2, 1, 2, 1, 2. Total number of tool changes = 5.

With Tool Change Optimization, all three frames are rough cut, then all are finish cut. Sequence of tool changes: 1, 2. Total number of tool changes = 1.

## Using Tool Change Optimization


To use Tool Change Optimization, the Tool Change Optimization parameter must be set to YES (default is No). This parameter is found on the General 2 tab in Program Parameters. In addition, the Tool Change Optimization On block must be inserted ahead of the program blocks to which it applies. Both the parameter and the data block are necessary to activate Tool Change Optimization. The Tool Change Optimization Off block is inserted after the last block in which tool optimization is to occur. This allows flexibility in using Tool Change optimization on select blocks while maintaining normal tool change sequence in other blocks of the program.



With Tool Change Optimization on, a data block should not be dependent on the finishing pass of the preceding block to clear out remaining stock (material). In most cases the finishing pass has not yet run (because the tool changes are optimized), and therefore the remaining material is not yet removed.

To access the Tool Change Optimization On and Off blocks:

1. From a New Block screen, select the Miscellaneous softkey.
2. Select the More softkey twice.
3. Select the Tool Optimize On (or Tool Optimize Off) softkey. The block opens:

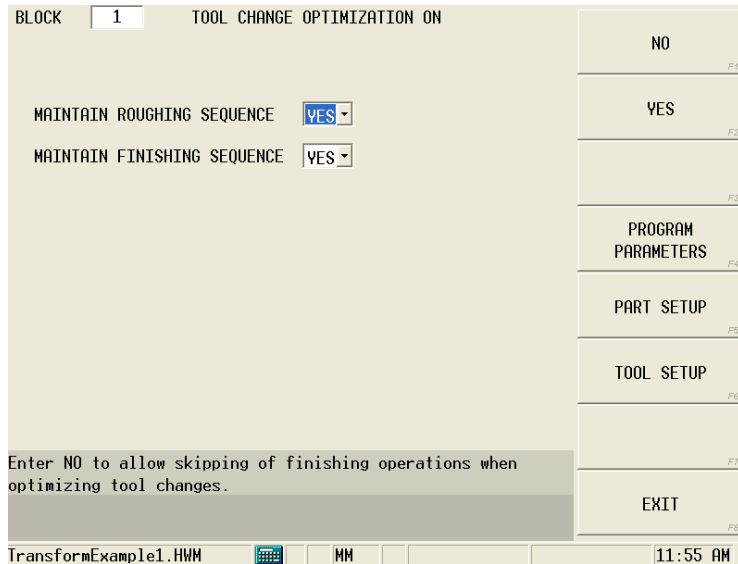

**Figure 11–1. Tool Change Optimization On block**

The Tool Change Optimization On block contains the following fields:

- Maintain Roughing Sequence**—when set to Yes, all roughing operations are performed in block sequence, including any specified tool changes. When set to No, all roughing operations are performed in tool change sequence. Default is Yes. For example:

Block	Rough Tool	Sequence if set to Yes	Sequence if set to No
1	1	Block 1 (Tool 1)	Block 1 (Tool 1)
2	1	Block 2 (Tool 1)	Block 2 (Tool 1)
3	2	Block 3 (Tool 2)	Block 4 (Tool 1)
4	1	Block 4 (Tool 1)	Block 5 (Tool 1)
5	1	Block 5 (Tool 1)	Block 3 (Tool 2)


⇒ The Maintain Roughing Sequence parameter must always be set to No for Tool Change Optimization in holes operations.

- Maintain Finishing Sequence**—when set to Yes, all finishing operations are performed in block sequence, including any specified tool changes. When set to No, all finishing operations are performed in tool change sequence. Default is Yes. For example:

Block	Finish Tool	Sequence if set to Yes	Sequence if set to No
1	3	Block 1 (Tool 3)	Block 1 (Tool 3)
2	3	Block 2 (Tool 3)	Block 2 (Tool 3)
3	4	Block 3 (Tool 4)	Block 4 (Tool 3)
4	3	Block 4 (Tool 3)	Block 5 (Tool 3)
5	3	Block 5 (Tool 3)	Block 3 (Tool 4)

⇒ The Maintain Finishing Sequence parameter does not apply to holes operations.

The Tool Change Optimization Off block is used to turn off the Tool Change Optimization feature for a block or group of blocks within a program, after the Tool Change Optimization On block has been used at an earlier point in the program. The Tool Change Optimization On block must be inserted to turn the feature on again:

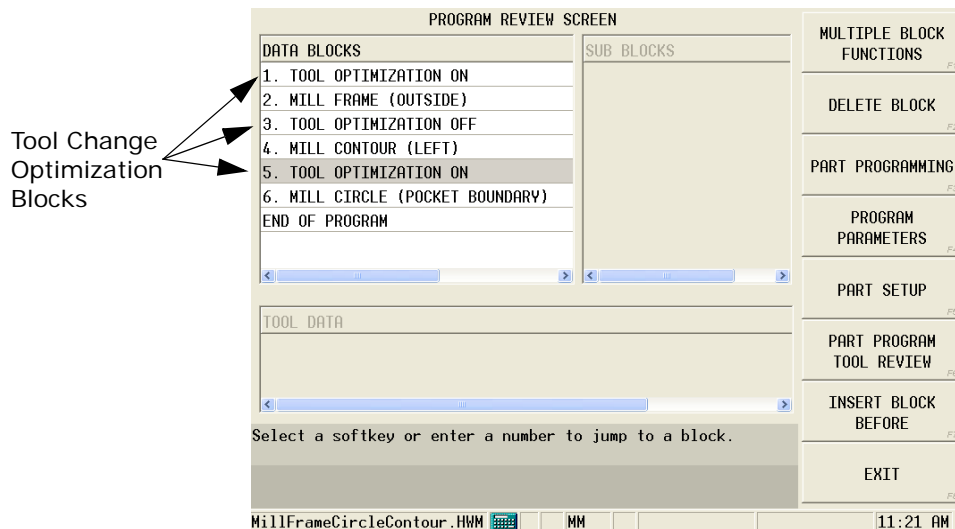


**Figure 11–2. Placement of Tool Change Optimization blocks**

In the sample screen above, tool change optimization will occur for block 2. Block 4 will run normally, and tool change optimization will occur for block 6.

## Tool Change Review

Tool changes can be reviewed in the Tool Change Review Screen, accessed with the Tool Change Review softkey in the Part Program Tool Review menu. Tools are displayed in the order they are used in the program. Tool Change Review is available only with the Tool Change Optimization option. All tool changes in a part program are displayed, even if none use the Tool Change Optimization feature.

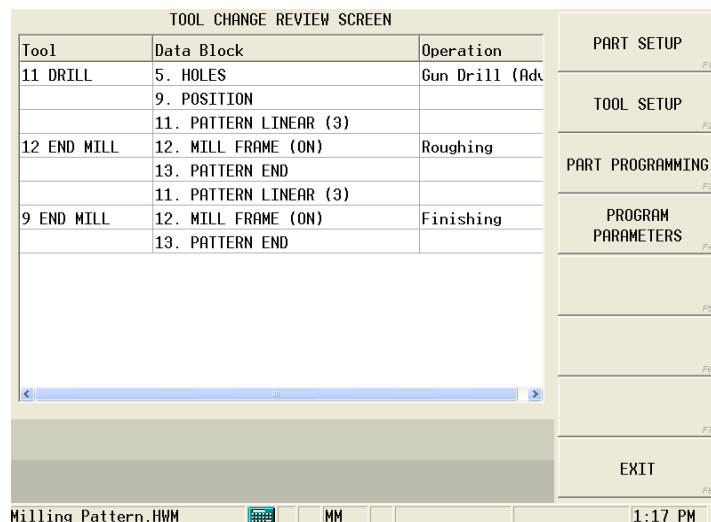

**Figure 11–3. Tool Change Review Screen**




# TOOL FIXTURE (TPS) OPTION

These topics are discussed in this section:

Tool Fixture Overview . . . . .	12	-	2
Automatic Tool Removal Using TPS. . . . .	12	-	3
Automatic Tool Change Using TPS . . . . .	12	-	4
Bypass TPS in an Automatic Tool Change . . . . .	12	-	5

## Tool Fixture Overview

The Tool Fixture (TPS) option provides an alternative way to manually move tools to and from the spindle during tool setup or program execution. TPS has two components, a tool fixture and an optikey that enables the option. The fixture is attached to the table, near the front enclosure doors. It is not removable, except for complete removal.

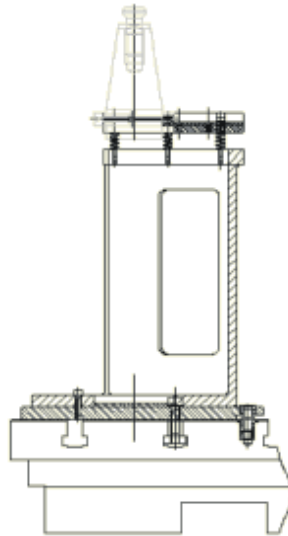

**Figure 12–1. Tool Fixture**

TPS is used as part of a tool change sequence from Tool Setup or Manual or Auto mode. Tools are laterally loaded into and unloaded from the tool fixture, and use the same spindle orient position as the ATC arm.

Tools used with TPS are limited by the tool fixture's height and diameter, as well as ATC weight restrictions. Tools inserted into the spindle with TPS must be removed with TPS. You can convert a tool loaded with TPS into an auto tool, as long as it fits the diameter and weight constraints of the magazine. Once the tool becomes an auto tool, it is no longer tracked as a TPS loaded tool.

- ⇒ You can insert a tool or remove a tool using TPS in Tool Setup, Manual Mode or Auto Mode. This section describes tool loading and unloading using TPS in Tool Setup.

## Automatic Tool Removal Using TPS

Follow the instructions below to use TPS to automatically remove a tool from the spindle:

1. Select the Input console key to access the Input screen.
2. Select the Tool Setup softkey.
3. With the cursor in the Tool field, enter the number of the tool you want to change into the spindle.
4. Select the Auto Tool Change console button. The Start Cycle button begins flashing.
5. Press the Start Cycle console button to initiate the tool removal process. The enclosure doors can now be opened. A "Confirm Empty Fixture. Close Doors and Press Start to Continue" message appears. The Start Cycle button flashes.
6. Make certain the Tool Fixture is empty. Press the Start Cycle button and its stops flashing.
7. A "Remove Tool X from Fixture, Close Doors & Press Start" message appears on the screen.
8. Remove the tool from the fixture, close the enclosure doors and Press the Start Cycle button.
9. The tool entered in step #3 is inserted from the magazine into the spindle.
10. The tool removal is complete.
  - ⇒ You must use Manual Mode if the tool you are removing was the last tool in the spindle.

## Automatic Tool Change Using TPS

Follow the instructions below to complete an Auto Tool change using TPS

1. Select the Input console button to access the Input screen.
2. Select the Tool Setup softkey to access the Tool Setup screen.
3. With the cursor in the Tool field, enter the number of the tool that will be inserted into the spindle using TPS.
4. Press the Tool Changer Auto console button. The Start Cycle button begins flashing.
5. Press the Start Cycle button to initiate the tool change.
  - a. The Z axis rapids to the home position.
  - b. The X and Y axes rapid to the Access position. An "Insert Tool X in Fixture. Press Start" message appears. The Start Cycle button flashes again.
    - ⇒ If the Tool in Spindle is 0, a message will appear confirming that the spindle is empty. If the Tool in Spindle is a number other than 0, the tool will be removed from the spindle (automatically put into the magazine or you will be prompted to be removed manually)
6. Insert the tool into the fixture.
7. Close the enclosure doors. Press the Start Cycle button.
  - a. The Start Cycle button stops flashing.
  - b. The X and Y axes rapid to the Fixture position.
  - c. The spindle orients (if it is not already oriented).
  - d. The spindle unclamps.
  - e. The Z axis rapids to the Clear position (its position before the tool change began) - then moves at a fixed, reduced feedrate to the Fixture position. The spindle clamps the tool.
  - f. The Z-axis moves to the Fixture position at a reduced feedrate.
  - g. The spindle clamps the tool.
  - h. The X and Y axes move to the Clear position (their positions before the tool change began) at a reduced feedrate.
  - i. The Z axis rapids to the Tool Change position.
8. The tool change is complete.
  - ⇒ A message requesting the tool be removed from the spindle using TPS will be displayed for any tool that was inserted into the spindle with TPS. You may use TPS to remove the tool or manually unclamp the tool to remove it from the spindle.



## Bypass TPS in an Automatic Tool Change

Follow the instructions below to complete an Auto Tool change and bypass TPS:

1. Select the Input console button to access the Input screen.
2. Select the Tool Setup softkey to access the Tool Setup screen.
3. With the cursor in the Tool field, enter the number of the tool that will be inserted into the spindle.
4. Press the Tool Changer Auto console button; the Start Cycle button begins flashing. Press the Start Cycle button. If there is a tool in the spindle, remove it before proceeding. If the spindle is empty, the machine moves to the Access position.
5. When prompted to insert the tool into the fixture, manually insert the tool into the spindle. To install a tool using TPS, see *Automatic Tool Removal Using TPS*, on page 12 - 3.
  - a. Press the spindle unclamp button and insert the tool. The prompt changes to "Insert Tool XX in Spindle & Press Start Cycle."
  - b. Release the unclamp button. The tool is clamped in the spindle.
6. Close the enclosure doors and press the Start Cycle button.
7. The tool change is complete.
  - ⇒ Any tool that is inserted into the spindle manually (bypassing TPS) *must* be removed manually.



# ULTIMOTION

Hurco's UltiMotion system provides the following benefits:

## **Improved Surface Quality**

With Hurco's proprietary smoothing, lookahead and motion control technology, the UltiMotion system provides significantly improved part surface quality. You'll see smoother and shinier surfaces, less vibration, less chatter marks, and higher accuracy.

## **Higher Throughput**

Compared with a standard motion system, the UltiMotion system's advanced motion planning and rapid corner feature can provide decreased cycle time with the same or even better surface finish quality. This is especially true for parts with complex geometries or large amounts of repeated tasks, such as drilling or tapping.

## **Rapid Corner**

For programs with a lot of consecutive rapid moves, the UltiMotion system doesn't stop between two rapids. Instead, it travels through blended corners at very high speed with only negligible deviation. This saves significant amount of time for repeated tasks, such as drilling and tapping.

## **Broader Performance Range for Surface Finish Quality**

The Surface Finish Quality (SFQ) mechanism is Hurco's proprietary technology to allow users to choose better surface finish or higher throughput for their applications via a simple one-parameter control mechanism. Winmax control automatically adjusts internal parameters to achieve either better surface quality (smaller SFQ) or higher throughput (higher SFQ). The UltiMotion system extends the performance range for SFQ to have even better surface quality for your finish pass and even more time savings in the roughing or semi-roughing passes.

## **Higher Quality Rigid and Regular Tapping**

The UltiMotion system deploys a coordinated motion control mechanism for regular and rigid tapping. You no longer need to worry if your tap will pass go/no-go tests; the UltiMotion system monitors the spindle angle at all times and controls the Z-axis to track the spindle position.

## **Smoother Motion Results in Longer Machine Life**

Rough motion, vibration, and bumping increase mechanical system fatigue and shorten machine life. The UltiMotion system's unique acceleration and jerk control, along with its advanced motion planning, have made it possible to achieve faster, yet smoother motion. You will get a faster machine with extended machine life.

## **Robust and Consistent Performance Over a Wide Range of Working Conditions**

Have you ever had trouble maintaining the equivalent performance with work pieces weighing from several ounces to several thousands of pounds? The UltiMotion system's

advance and accurate model compensation will help you to maintain the same level of performance over a wide range of working conditions.

## **Dynamic Variable Lookahead Algorithm**

Hurco's proprietary Lookahead doesn't require a fixed number of blocks lookahead like conventional controls; instead the lookahead varies dynamically depending on the geometry and motion profile, but always guarantees there is enough to make optimized maneuvers.

## **Smooth and Responsive Handwheel Jogging**

Compared with standard system, the UltiMotion system's hand wheel jogging is optimized to reduce bumping and vibration while providing more responsiveness.

# ULTINET

The UltiNet option provides connection to your Local Area Network (LAN) for communication with other CNCs, PCs, or file servers using standard TCP/IP and FTP protocols.

UltiNet FTP Client . . . . .	14	-	2
UltiNet FTP Server . . . . .	14	-	2

## UltiNet FTP Client

Any file operation performed by an operator at the machine uses the UltiNet FTP client:

1. From the Input screen, select the **PROGRAM MANAGER F8** softkey.
2. From the Program Manager screen, select the **FTP MANAGER F8** softkey.
3. Select host from the list and select the **CONNECT F1** softkey, or select the **ADD HOST F4** softkey to add a connection.

The FTP Manager displays the current connection.

The following tasks can be performed from the FTP Manager screen:

- read a program from the server
- write a program to the server
- copy a program from the server
- copy a program to the server
- rename a program
- delete a program
- create a directory
- delete a directory

## UltiNet FTP Server

The UltiNet FTP server runs as a background task, invisible to the operator, providing access to the Hurco machine from a remote computer. To enable the FTP server:

1. In Auxiliary mode, select the **UTILITIES** softkey.
2. Select the **USER PREFERENCES F2** softkey.
3. Use the **MORE** softkey to find and select the **FTP SERVER SETTINGS F2** softkey.

Once a connection is made, a user may perform the following tasks:

- Transfer files to or from the Hurco machine
- Create a directory
- Delete a directory
- Delete files
- Rename files anywhere in the directory structure

## FTP Server Settings

The WinMax console can serve as an FTP Server. These fields appear on the FTP Server Settings screen:

- **Enable FTP Server**—Enable the WinMax Control to act as an FTP Server.
- **FTP Server Port**—The port number for FTP access.
- **Maximum Idle Time (Mins)**—Maximum amount of time before connection is dropped.
- **User Name**—The log in name that will allow users access to the FTP Server.
- **Password**—The password that corresponds to the user name and allows access to the FTP Server.
- **Path**—The file path that the users will be allowed access to.






# ULTIPOCKETS OPTION

The UltiPocket™ programming option adds special milling routines for machining pocket boundaries with islands. This option provides complete clean out of odd-shaped pockets without cutting the islands programmed inside the boundary. The software automatically calculates the tool path around islands eliminating the long task of plotting these shapes. Islands may also be rotated, scaled, and repeated.

The following drawing shows an inward spiral boundary with three differently shaped islands.

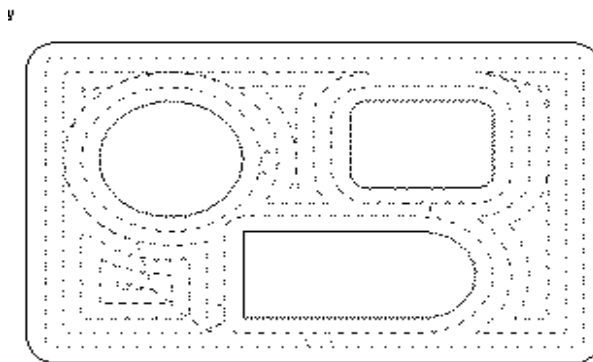

The pocket feature is available for any of these standard WinMax program data blocks, Mill Contour, Mill Frame, Mill Circle, or Patterns.

- ⇒ To use the UltiPocket feature, first establish the cutter compensation parameter and then program any UltiPocket data blocks.
- Refer to Milling Parameters.
  - Select either Insert Arc or Insert Line for the Cutter Comp Parameter field. If this field does not appear on the Milling Parameters screen, the UltiPocket option has not been installed on the control.

These topics are discussed in this section:

Pocket Boundary . . . . .	15	-	2
Helical Plunge with UltiPocket Option . . . . .	15	-	4
Helical Plunge Using Operator Specify Pocket Start . . . . .	15	-	5

## Pocket Boundary

The Pocket Boundary is the outside frame of the part. The basic philosophy of the UltiPocket option is to program the boundary and then tell the system which pockets or islands to avoid within that boundary. This approach eliminates complex calculations and shortens the part programming process.

There are two types of Pocket Boundaries: Spiral Outward (no islands) and Spiral Inward.

### Spiral Outward - No Islands

This selection is only for Circle and Frame data blocks without islands. When this routine is selected, the tool begins from the center region of the part outward to pocket the entire programmed boundary. This operation is, therefore, the same as the standard WinMax Pocket selection. With this selection the cutter overlap is controlled by the Pocket Overlap value on the Milling Parameters screen, not the Pocket Overlap field on the Mill Circle and Mill Frame screens.

### Spiral Inward

This selection cuts in from the outside of the defined boundary avoiding the defined islands. When this routine is selected, the tool enters the part and begins following a path formed by offsetting the boundary one-half the tool radius, plus the pocket overlap.

To control the percentage of overlap during cutting, enter a value in the Pocket Overlap field on the Mill Circle or Mill Frame screen. After the first pass, the tool follows a path produced by offsetting the boundary by the tool radius, plus the pocket overlap for each pass while avoiding islands inside the boundary.

After pocketing the boundary, the tool then cuts around the inside of the boundary and the outside of each island, using the selected blend offset and the programmed tool radius.

## Programming Islands

After programming the mill data block for a boundary, an island can be defined by creating a Pocket Island data block. As many islands as desired may be defined (subject to computer memory on the control), but all must fit within the defined boundary and should allow the tool to completely define the island.

The island data block can be a Mill Frame, Circle, or Contour (provided it is a closed contour). The Pocket Island data blocks use the standard milling values from the boundary data block and do not display these parameters on the island programming screen. The pocket overlap percentage was also defined in the boundary data block.

## Mill Contours

To create a Mill Contour data block using the UltiPocket option, set up the operation in the start segment (segment zero). As in standard WinMax milling, an UltiPocket Mill Contour block consists of segments beginning with segment zero. With the cursor in the MILLING TYPE field, select one of the Pocket options in the Start segment to indicate whether this block is the boundary of the part or one of the islands within the boundary. The boundary must occur first in the program.

The segments after the Start segment are programmed in the same manner as standard milling lines and arcs. Automatic calculation of unknown points is available for these data blocks.

## Mill Frame

The Mill Frame data block is often used to create the part boundary.

This block is programmed in the same manner as the standard WinMax Mill Frame, with the addition of the Pocket Overlap percentage.

## Mill Circle

The Mill Circle data block is used for both boundaries and islands. It is similar to the standard Mill Circle data block except that if this block is used to create an island, it uses the tool from the boundary data block.

## Pattern

Pattern data blocks can be inserted to rotate, scale, or repeat islands. Only Pattern data blocks can be programmed between a boundary data block and an island. As many islands as desired may be defined (subject to available memory), but all must fit within the defined boundary.

## Helical Plunge with UltiPocket Option

The Helical Plunge option is used with the UltiPocket option to define the plunging location when inward pocketing. Islands created using inward pocketing can influence plunge locations. A plunge location is determined that will not interfere with pocket islands.

The plunging location in outward pocketing is the same as a straight plunge. Outward pocketing is used only for mill frame, mill circle, and ellipse pocket boundaries that do not have pocket islands. Since islands are not present with outward pocketing, the plunging location is in the middle of the mill frame, mill circle and ellipse.

When the Helical Plunge option is installed, two additional pocketing-related fields appear on the Milling Parameters screen. These fields are Operator Specify Pocket Start and Inward Pocket Plunge Near Center.

The Operator Specify Pocket Start field takes precedence over the Inward Pocket Plunge Near Center field. If the Operator Specify Pocket Start field is set to Yes, the value of the Inward Pocket Plunge Near Center field is ignored.

When the Operator Specify Pocket Start field is set to No, the value of the Inward Pocket Plunge Near Center field is checked. If the Inward Pocket Plunge Near Center field is set to Yes, a starting location will be determined near the center of the pocket. If both fields are set to No, the default starting position will be used for the pocket.

# Helical Plunge Using Operator Specify Pocket Start

To use the Operator Specify Pocket Start function:

1. Set the Type field to Pocket Boundary on the Mill Contour, Mill Frame or Mill Circle screen.
2. Set the Pocket Type field to Inward on the Mill Contour, Mill Frame or Mill Circle screen.
3. Set the Operator Specify Pocket Start field to Yes on the Milling Parameters screen.
4. The Pocket X Start and Pocket Y Start fields appear on the Mill Contour, Mill Frame, or Mill Circle screen. The operator identifies the pocket plunge location with the Pocket X Start and Pocket Y Start fields. The Pocket X Start and Pocket Y Start fields define the centerline of the plunge path. This is the location where the helix will be centered. If a straight plunge is selected, the straight plunge will occur at the location.

The following figure shows the Pocket X Start and Pocket Y Start fields on the Mill Frame screen. See the "Helical Plunge Option" chapter for an example using Pocket Start X and Pocket Start Y fields.

⇒ For non-rotary blocks, Pocket X Start and Pocket Y Start define the XY starting location. For rotary blocks, these fields define the XA starting location.

An error message will display if the values for Pocket X Start or Pocket Y Start interfere with the pocket island or pocket boundary.



---

# RECORD OF CHANGES

704-0116-410 rB, February 2010

Revised by: H.Arle

Approved by: D.Skrzypczak, February 2010

---

## Changes

- Added UltiMotion.
- Updated to reflect software changes from v7.3.

704-0116-410 rA, December 2009

Revised by: H.Arle

Approved by: D.Skrzypczak, Dec 2009

---

## Changes

- Added Custom Drill.
- Added Mill Polygon.
- Added HD3 Serial Numbering Lettering.
- Added Contour Arc content.
- Added Lettering Reference Locations content.
- Added Mill Slot.
- Added Thread Mill.
- Updated to reflect software changes from v7.3.





# INDEX

## Numerics

- 3D Mold *1 - 1*
- Blend Arc *1 - 12*
- Contour *1 - 9*
- Line *1 - 10*
- Parameters *1 - 2*

## A

- A Angle field
  - Rotary Lines and Arcs Start Segment *6 - 14*
  - Rotary Position block *6 - 11*
- A Center field
  - Rotary Circle block *6 - 16*
  - Rotary Lines and Arcs Arc Segment *6 - 15*
  - Rotary Lines and Arcs Blend Arc Segment *6 - 15*
- A Corner field
  - Rotary Frame block *6 - 16*
- A Distance field
  - Rotary Loop block *6 - 17, 6 - 22*
- A End field
  - Rotary Lines and Arc Blend Arc Segment *6 - 15*
  - Rotary Lines and Arcs Arc Segment *6 - 15*
  - Rotary Lines and Arcs Line Segment *6 - 14*
- A Length field
  - Rotary Frame block *6 - 16*
- A Start field
  - Rotary Lines and Arcs Arc Segment *6 - 15*
  - Rotary Lines and Arcs Blend Arc Segment *6 - 15*
  - Rotary Lines and Arcs Line Segment *6 - 14*
- A-axis rotation *6 - 2*
- Absolute Location *8 - 11*
- Accept softkey, DXF *3 - 3, 3 - 7*
- All Off, DXF *3 - 9*
- All On, DXF *3 - 9*
- Angle Center field *6 - 34*
  - Arc Segment
    - Universal Rotary *6 - 33*
- Angle Distance field *6 - 37*
- Angle End field *6 - 33*

- Angle field
  - Mill Slot Geometry tab *9 - 3*
- Angle Length field *6 - 35*
- Angle Start field *6 - 33, 6 - 35*
- Approach Feed, Part Probing Parameters *8 - 5*
- Arc Radius field *6 - 28*
- Assure *4 - 4*
- Assure Minimum Length
  - HD3 Serial Number Lettering Format tab *4 - 4*
- Autochain
  - Contours, DXF *3 - 5*
  - DXF *3 - 3*
- Automatic Mode *8 - 23*
- Automatic Part Zero Cycles, Probing *8 - 24*
- Automatic Skew Cycles, Probing *8 - 25*
- Automatic Tool Change Using TPS *12 - 4*
- Automatic Tool Removal Using TPS *12 - 3*
- Axis Center field *6 - 34*
- Axis Configuration *6 - 4*
- Axis Distance field *6 - 37*
- Axis End field *6 - 33*
- Axis Length field *6 - 35*
- Axis of Rotation *6 - 40*
- Axis Start field *6 - 33, 6 - 35*

## B

- B Distance field *6 - 17, 6 - 24*
- Ball-Nosed End Mill *1 - 16*
  - on a Contour *1 - 14*
- B-axis rotation *6 - 2*
- Beam Offset parameter, Tool Probe Setup Parameters *8 - 4*
- Bidirectional field
  - 3D Mold Parameters *1 - 6*
- Blend Type field
  - Thread Mill block *10 - 3*
- Block field
  - 3D Mold Arc *1 - 11*
  - 3D Mold Blend Arc *1 - 12*
  - 3D Mold Contour *1 - 9*
  - 3D Mold Line *1 - 10*
  - 3D Mold Parameters *1 - 2*
  - Probe Part Setup *8 - 17*
  - Tool Monitoring screen *8 - 29*
- Bottom Tab, Custom Drill *2 - 5*
- Break Out Tab, Custom Drill *2 - 4*
- Breakage Tolerance field, Tool Monitoring screen *8 - 29*
- Build DB softkey *3 - 3*
- Bypass TPS in an Automatic Tool Change *12 - 5*

## C

- C Angle field [6 - 19](#), [6 - 27](#)
- C Center field [6 - 20](#)
  - Arc segment
    - AC Configuration [6 - 20](#)
    - BC configuration [6 - 28](#)
  - Blend Arc segment
    - BC Configuration [6 - 28](#)
  - Circle block
    - AC Configuration [6 - 21](#)
    - BC Configuration [6 - 29](#)
- C Corner field [6 - 21](#), [6 - 29](#)
- C Distance field [6 - 22](#), [6 - 30](#)
- C End field [6 - 19](#), [6 - 20](#), [6 - 27](#), [6 - 28](#)
- C End field, Arc Segement, AC configuration [6 - 20](#)
- C End field, Arc segment, BC configuration [6 - 27](#)
- C Length field [6 - 21](#)
- C Length field, Rotary Frame, BC configuration [6 - 29](#)
- C Start field [6 - 19](#), [6 - 20](#), [6 - 27](#), [6 - 28](#)
  - Rotary Lines and Arcs Arc Segment [6 - 20](#), [6 - 28](#)
- Cal Tool D parameter, Tool Probe Setup Parameters [8 - 4](#)
- Cal Tool H parameter, Tool Probe Setup Parameters [8 - 4](#)
- Cal Tool L parameter, Tool Probe Setup Parameters [8 - 4](#)
- calculate X and Z-axis positions after a tilt-axis move, tilt-axis program, WinMax Mill [6 - 41](#)
- calculator, on-screen [- xii](#)
- Calibrate the Tool Probe softkey [8 - 15](#)
- C-axis rotation [6 - 2](#)
- Center Beam X parameter, Tool Probe Setup Parameters [8 - 3](#)
- Center Beam Y parameter, Tool Probe Setup Parameters [8 - 3](#)
- Center X field
  - Cylinder Cycle [8 - 40](#)
  - Hole or Circle Pocket Probing Cycle [8 - 38](#)
  - Rectangular Pocket Cycle [8 - 42](#)
  - Rectangular Solid Outside Cycle [8 - 44](#)
- Center X, DXF [3 - 8](#)
- Center Y field
  - Cylinder Cycle [8 - 40](#)
  - Hole or Circle Pocket Probing Cycle [8 - 38](#)
  - Rectangular Pocket Cycle [8 - 42](#)
  - Rectangular Solid Outside Cycle [8 - 44](#)
- Center Y, DXF [3 - 8](#)
- Centerline Y field, 3D Mold Paratmeters [1 - 3](#)
- Centerline Z field, 3D Mold Paratmeters [1 - 3](#)
- Character Height
  - HD3 Serial Number Lettering Text tab [4 - 2](#)
- Character Width
  - HD3 Serial Number Lettering Text tab [4 - 2](#)
- Circular Passes, Part Probing Parameters [8 - 5](#)
- configuration of Hurco machining centers [6 - 3](#)
- Contact Point X parameter, Tool Probe Setup Parameters [8 - 3](#)
- Contact Point Y parameter, Tool Probe Setup Parameters [8 - 3](#)
- control
  - power on [- xii](#)
- Conversational Part Probing Cycles [8 - 19](#)
- Corner Radius field [6 - 16](#), [6 - 21](#), [6 - 29](#), [6 - 35](#)
  - Mill Polygon block [7 - 3](#)
  - Mill Slot Caps tab [9 - 5](#)
- Corner X field, Plane Intersection (Non-Rectangular Corner) Cycle [8 - 46](#)
- Corner Y field, Plane Intersection (Non-Rectangular Corner) Cycle [8 - 46](#)
- create a rotary-axis or tilt-axis program from an existing Conversational program [6 - 4](#)
- Custom Drill [2 - 1](#)
- Cut Comp Enable field
  - Thread Mill block [10 - 3](#)
- Cut Direction field
  - 3D Mold Paratmeters [1 - 5](#)
- Cutter Type field
  - Thread Mill block [10 - 2](#)
- Cylinder and Hole or Circle Inspection cycle, Probing [8 - 27](#)
- Cylinder and Rectangular Solid Inspection cycle, Probing [8 - 27](#)
- Cylinder Cycle [8 - 24](#), [8 - 33](#), [8 - 40](#)
- Cylinder cycle
  - Probing [8 - 20](#)
- Cylinder Radius field [6 - 13](#)
- Cylinder Skew Cycle [8 - 25](#), [8 - 34](#), [8 - 50](#)

## D

- Data Origin
  - HD3 Serial Number Lettering Text tab

4 - 2  
Default Order  
  softkey 3 - 3, 3 - 4  
Default Radius  
  DXF 3 - 3  
Delete softkey  
  DXF 3 - 8  
Determine Laser Beam Offset softkey,  
  Probing 8 - 3, 8 - 10  
Diameter field  
  Cylinder Cycle 8 - 40  
  Hole or Circle Pocket Probing Cycle 8 -  
  38  
Diameter Tolerance field  
  Tool Monitoring screen 8 - 29  
Direction field 6 - 14, 6 - 15, 6 - 19, 6 - 20,  
  6 - 27, 6 - 28, 6 - 33, 6 - 34  
  3D Mold Arc 1 - 11  
  3D Mold Blend Arc 1 - 12  
  DXF 3 - 8  
  Mill Slot Geometry tab 9 - 4  
  Tool Monitoring screen 8 - 29  
Disable Start Location field 6 - 6, 6 - 11  
Display Geometry, DXF 3 - 5  
Draw 2D Contour 1 - 2  
Draw console key 3 - 2  
DXF  
  Editor 3 - 2  
  Layers 3 - 9  
DXF Edit Modify  
  Arc 3 - 8  
  Line 3 - 8  
  Point 3 - 8  
DXF Option 3 - 1

## E

Edge (X, Y, or Z) field, Edge Probing Cycle  
  8 - 36  
Edge Cycle 8 - 33, 8 - 35  
  Probing 8 - 20  
Edge Skew Cycle 8 - 25, 8 - 34, 8 - 48  
Edit 3D Mold Parameters softkey 1 - 9  
Edit Drawing  
  DXF 3 - 3, 3 - 5  
Emergency Stop - *xii*  
Enable field  
  Custom Drill Break Out tab 2 - 4  
  Custom Drill Out tab 2 - 7  
  Custom Drill Re-entry tab 2 - 6  
  Custom Drill Retract tab 2 - 8  
Enable FTP Server field 14 - 3  
End Angle field, 3D Mold Paratmeters 1 - 4  
End Cap field

  Mill Slot Caps tab 9 - 4  
Endpoint Tolerance, DXF 3 - 5  
Endpoint1 X, DXF 3 - 8  
Endpoint1 Y, DXF 3 - 8  
Endpoint2 X, DXF 3 - 8  
Endpoint2 Y, DXF 3 - 8  
Entry Tab, Custom Drill 2 - 3  
error messages - *xii*  
Exit/Cancel  
  DXF 3 - 3  
Explode PCurve softkey, DXF 3 - 8  
Extend softkey, DXF 3 - 6

## F

Fast Feed field, Tool Setup Probing 8 - 16  
Feed field  
  Custom Drill Break Out tab 2 - 4  
  Custom Drill Entry Tab 2 - 3  
  Custom Drill Out tab 2 - 7  
  Custom Drill Re-entry tab 2 - 6  
  Custom Drill Retract tab 2 - 8  
  Custom Tool Bottom tab 2 - 5  
feeler gauge 8 - 12  
fields  
  Part Setup, rotary-axis program,  
  WinMax Mill 6 - 8  
File  
  HD3 Serial Number Lettering Text tab  
  4 - 3  
Finish Diameter field  
  3D Mold Paratmeters 1 - 8  
Finish Plunge Helix Radius field, Helical  
  Plunge Milling Parameters 5 - 2  
Finish Plunge Ramp Slope field, Helical  
  Plunge Milling Parameters 5 - 2  
Finish Plunge Type field, Helical Plunge Mill-  
  ing Parameters 5 - 2  
Finish Step Size field, 3D Mold Paratmeters  
  1 - 7  
Finish Tool field  
  3D Mold Paratmeters 1 - 2  
Finish Tool Type field, 3D Mold Paratmeters  
  1 - 8  
Fit to View softkey  
  DXF 3 - 5  
Flat End Mill 1 - 15  
  on a Contour 1 - 13  
Frame Radius 3 - 5  
FTP Client 14 - 2  
FTP Manager 14 - 2  
FTP Server 14 - 2  
  Port field 14 - 3  
FTP Server Settings 14 - 3

## H

HD3 Serial Number Lettering block [4 - 1](#)  
Helical Plunge (Inside/Outside) for Mill  
Frames, Mill Circles and Ellipses [5 - 3](#)  
Helical Plunge in the Center of a Pocket [5 - 3](#)  
Helical Plunge Milling Parameter Fields [5 - 2](#)  
Helical Plunge of Mill Frame Inside with No  
Pecking and Blend Offset [5 - 4](#)  
Helical Plunge Option [5 - 1](#)  
Helical Plunge Using Operator Specify Pock-  
et Start [15 - 5](#)  
Helical Plunge with 3-D Part Programming  
Option [5 - 7](#)  
Helical Plunge with Lines and Arcs [5 - 7](#)  
Helical Plunge with Operator Specified Lo-  
cation [5 - 3](#)  
Helical Plunge with Outward Pocketing [5 - 4](#)  
Helical Plunge with UltiPocket [5 - 3](#), [15 - 4](#)  
Helical Plunging of Mill Frame Inside with  
Pecking and Straight Plunge Finish  
Pass and Blend Offset [5 - 5](#)  
helix thread program example, WinMax Mill  
[6 - 44](#)  
Hole Diameter [3 - 5](#)  
Hole or Circle Pocket Cycle [8 - 24](#), [8 - 33](#),  
[8 - 38](#), [8 - 39](#)  
Probing [8 - 20](#)  
Hole or Circle Pocket Skew Cycle [8 - 25](#), [8 - 34](#),  
[8 - 49](#)  
Holes softkey  
DXF [3 - 3](#)

## I

icons - [xiii](#)  
INCR Retract, probe part setup [8 - 6](#)  
INCR Retract, touch probe tool setup [8 - 3](#)  
Increased Radius [1 - 3](#)  
Increment  
HD3 Serial Number Lettering Text tab  
[4 - 2](#)  
INIT Retract, probe part setup [8 - 6](#)  
INIT Retract, touch probe tool setup [8 - 3](#)  
Inner Diameter, Mill Polygon [7 - 2](#)  
Internal Thread field  
Thread Mill block [10 - 2](#)  
Intersect softkey [3 - 3](#), [3 - 4](#)  
Inward Pocket Plunge Near Center field,  
Helical Plunge Milling Parameters [5 - 2](#)  
Island, Pocket [15 - 2](#)

## J

Join softkey, DXF [3 - 7](#)  
Joined Lines and Arcs [3 - 7](#)

## L

Laser Beam Calibration [8 - 9](#)  
Laser Probe softkey, Probing [8 - 3](#)  
Laser Tool Calibration  
Calculations [8 - 9](#)  
Cycle [8 - 10](#)  
Leading Symbol  
HD3 Serial Number Lettering Format  
tab [4 - 4](#)  
Length (X) field  
Rectangular Pocket Cycle [8 - 42](#)  
Rectangular Solid Outside Cycle [8 - 44](#)  
Length (Y) field  
Rectangular Pocket Cycle [8 - 42](#)  
Rectangular Solid Outside Cycle [8 - 44](#)  
Length field  
Mill Slot Geometry tab [9 - 3](#)  
Length, DXF [3 - 8](#)

## M

machining center configuration [6 - 3](#)  
Maintain Finishing Sequence field  
Tool Change Optimization [11 - 2](#)  
Maintain Roughing Sequence field  
Tool Change Optimization [11 - 2](#)  
Manual Mode Part Setup Probing Cycles [8 - 20](#)  
Manual Mode Part Skew Probing Cycles [8 - 21](#)  
Manual Tool Probing Cycles [8 - 30](#)  
Max Deflection  
probe part setup [8 - 6](#)  
probe tool setup [8 - 4](#)  
Max Spread field  
Part Probing Parameters [8 - 5](#)  
Tool Probe Setup Parameters [8 - 3](#)  
Maximum Idle Time (Mins) field [14 - 3](#)  
Measurement Feed, Part Probing Param-  
eters [8 - 5](#)  
messages  
error - [xii](#)  
Mill [7 - 1](#)  
Mill Circle [15 - 3](#)  
Mill Contours [15 - 3](#)  
Mill Feed field  
3D Mold Parameters [1 - 8](#)  
Mill Frame [15 - 3](#)

Mill Plunge Helix Radius field, Helical Plunge Milling Parameters [5 - 2](#)  
Mill Plunge Ramp Slope field, Helical Plunge Milling Parameters [5 - 2](#)  
Mill Plunge Type field, Helical Plunge Milling Parameters [5 - 2](#)  
Mill Polygon [7 - 1](#)  
Mill Slot [9 - 1](#)  
Mill Thread data block [10 - 1](#)  
Milling softkey  
DXF [3 - 3](#)  
Min Z field  
3D Mold Parameters [1 - 7](#)  
Minimum Length  
HD3 Serial Number Lettering Format tab [4 - 4](#)  
Minimum Z field, Tool Setup Probing [8 - 16](#) mode  
programming - [xii](#)  
Modify softkey, DXF [3 - 7](#)  
Monitor Motion  
probe part setup [8 - 6](#)  
touch probe tool setup [8 - 3](#)  
Multi-Tool Probing field [8 - 31](#)  
Tool Setup Probing [8 - 16](#)

## N

nested Pattern Loop data blocks, rotary-axis program [6 - 17](#)  
nested Pattern Loop data blocks, rotary-axis program, WinMax Mill [6 - 22](#), [6 - 25](#), [6 - 30](#), [6 - 38](#)  
Number field [6 - 17](#), [6 - 22](#), [6 - 24](#), [6 - 30](#), [6 - 37](#)  
Number Of Sides field  
Mill Polygon block [7 - 1](#)

## O

Offset 1 field, Plane Intersection (Non-Rectangular Corner) Cycle [8 - 46](#)  
Offset 2 field, Plane Intersection (Non-Rectangular Corner) Cycle [8 - 46](#)  
Offset X/Y field, Probe Part Setup [8 - 17](#)  
on-screen calculator - [xii](#)  
Operator Specify Pocket Start field, Helical Plunge Milling Parameters [5 - 2](#)  
Orientation Angle field  
Mill Polygon block [7 - 2](#)  
Out Tab, Custom Drill [2 - 7](#)  
Outer Diameter, Mill Polygon [7 - 2](#)

## P

Pan softkey  
DXF [3 - 5](#)  
Part Inspection Cycles [8 - 26](#), [8 - 28](#)  
Part Inspection Fields, Probing [8 - 26](#)  
Part Inspection Programming, Probing option [8 - 28](#)  
Part Probe Calibration [8 - 12](#)  
Part Probe Cycle field  
Cylinder Cycle [8 - 40](#)  
Edge Probing Cycle [8 - 36](#)  
Hole or Circle Pocket Probing Cycle [8 - 38](#)  
Rectangular Pocket Cycle [8 - 43](#)  
Rectangular Solid Outside Cycle [8 - 44](#)  
Part Probe Deflection [8 - 2](#)  
Offset [8 - 13](#)  
Offset Calibration [8 - 13](#)  
Part Probe Working Envelope [8 - 2](#)  
Part Probing Cycles [8 - 19](#)  
Part Probing Parameters [8 - 5](#)  
Part Setup  
fields [8 - 19](#)  
Part X Offset, DXF [3 - 5](#)  
Part Y Offset, DXF [3 - 5](#)  
Part Zero Cycle field, Probe Part Setup [8 - 17](#)  
part zero different for Transformed Planes program example [6 - 56](#)  
part zero does not change for Transformed Planes program example [6 - 54](#)  
Part Zero Storage Cycle [8 - 20](#)  
Part Zero X, Y fields [8 - 19](#)  
Password field [14 - 3](#)  
Path field [14 - 3](#)  
Pattern [15 - 3](#)  
Pattern End, Rotary A and Rotary A Tilt B configurations [6 - 13](#)  
Pattern Locations softkey [3 - 4](#)  
Pattern Loop data blocks, nesting, rotary-axis program, WinMax Mill [6 - 22](#), [6 - 25](#), [6 - 30](#), [6 - 38](#)  
Peck Depth field  
3D Mold Parameters [1 - 7](#)  
Custom Drill Tool Tab [2 - 2](#)  
Peck Type field  
Custom Drill Tool Tab [2 - 2](#)  
Pitch field  
Thread Mill block [10 - 2](#)  
Plane Intersection (Non-Rectangular Corner) Cycle [8 - 24](#), [8 - 33](#), [8 - 46](#)  
Plane Intersection cycle, Probing [8 - 20](#)  
Plane Intersection Inspection cycle, Probing

- [8 - 27](#)
  - Plunge Feed field
    - [3D Mold Parameters 1 - 8](#)
  - Pocket Boundary [15 - 2](#)
  - Pocket Island [15 - 2](#)
  - Polygon Milling Data Block [7 - 1](#)
  - Position softkey
    - [DXF 3 - 4](#)
  - Position Tool Over the Probe softkey [8 - 15](#)
  - power-on
    - control [- xii](#)
  - Present, Part Probing Parameters [8 - 5](#)
  - Preset X and Preset Y field
    - [Cylinder Cycle 8 - 41](#)
    - [Hole or Circle Pocket Probing Cycle 8 - 39](#)
    - [Plane Intersection \(Non-Rectangular Corner\) Cycle 8 - 46](#)
    - [Rectangular Solid Outside Cycle 8 - 45](#)
  - Preset X or Preset Y field
    - [Edge Probing Cycle 8 - 36](#)
    - [Rectangular Pocket Cycle 8 - 43](#)
  - Preset X/Y field
    - [Probe Part Setup 8 - 17, 8 - 18](#)
  - printing [- xiii](#)
  - Probe A Single Tool softkey [8 - 15, 8 - 30](#)
  - Probe Current Tool Now softkey [8 - 15](#)
  - Probe Cycle Type field, Tool Monitoring screen [8 - 29](#)
  - Probe Direction X/Y field, Probe Part Setup [8 - 17, 8 - 18](#)
  - Probe Multiple Tools softkey [8 - 15, 8 - 31](#)
  - Probe Part Setup [8 - 17](#)
    - [data block 8 - 19, 8 - 23](#)
    - [data block execution 8 - 26](#)
    - [fields 8 - 23](#)
  - Probe Tool Monitoring [8 - 28](#)
  - Probe Z [8 - 19](#)
  - Probing Axis field, Edge Probing Cycle [8 - 36](#)
  - Probing Axis parameter, Tool Probe Setup Parameters [8 - 3](#)
  - Probing Cycles [8 - 33, 8 - 34](#)
  - Probing Direction field, Edge Probing Cycle [8 - 36](#)
  - Probing Direction X field, Plane Intersection (Non-Rectangular Corner) Cycle [8 - 46](#)
  - Probing Direction Y field, Plane Intersection (Non-Rectangular Corner) Cycle [8 - 46](#)
  - Probing Equipment [8 - 2](#)
  - Probing Length X field, Rectangular Solid Outside Cycle [8 - 44](#)
  - Probing Length X/Y field, Probe Part Setup [8 - 17, 8 - 18](#)
  - Probing Length Y field, Rectangular Solid Outside Cycle [8 - 45](#)
  - Probing Method field, Tool Monitoring screen [8 - 29](#)
  - Probing Option [8 - 1](#)
  - Probing Radius field
    - [Cylinder Cycle 8 - 41](#)
    - [Probe Part Setup 8 - 17, 8 - 18](#)
  - program status [- xii](#)
- ## R
- [Radius 6 - 34](#)
  - Radius Bottom field [6 - 27, 6 - 29, 6 - 33, 6 - 34, 6 - 35](#)
  - Radius End field [6 - 27, 6 - 33](#)
  - Radius End field, Arc segment, BC configuration [6 - 28](#)
  - Radius field [6 - 15, 6 - 16, 6 - 20, 6 - 21, 6 - 28, 6 - 29, 6 - 34](#)
    - [3D Mold Arc 1 - 11](#)
    - [3D Mold Blend Arc 1 - 12](#)
    - [Mill Slot Geometry tab 9 - 3](#)
    - [Thread Mill block 10 - 2](#)
  - Radius Start field [6 - 27, 6 - 29, 6 - 33, 6 - 34, 6 - 35](#)
  - Radius Start field, Arc segment, BC configuration [6 - 28](#)
  - Radius, DXF [3 - 8](#)
  - Rapid Z Position field, Tool Setup Probing [8 - 16](#)
  - Rectangular Pocket and Rectangular Solid Inspection cycle, Probing [8 - 27](#)
  - Rectangular Pocket cycle, Probing [8 - 20](#)
  - Rectangular Pocket Inside Cycle [8 - 33, 8 - 42](#)
  - Rectangular Pocket Skew Cycle [8 - 24, 8 - 25, 8 - 34, 8 - 51](#)
  - Rectangular solid cycle, Probing [8 - 20](#)
  - Rectangular Solid Outside Cycle [8 - 24, 8 - 33, 8 - 44](#)
  - Rectangular Solid Skew Cycle [8 - 24, 8 - 25, 8 - 34, 8 - 52](#)
  - Re-entry Tab, Custom Drill [2 - 6](#)
  - Reference Block [8 - 14](#)
  - Reference Tool Touch [8 - 11](#)
  - Repetitions parameter, Tool Probe Setup Parameters [8 - 3](#)
  - Repetitions, Part Probing Parameters [8 - 5](#)
  - Reset Probe Work region to Maximum softkey, Part Setup screen [8 - 5](#)

- Retract Feed parameter, Tool Probe Setup Parameters [8 - 3](#)
  - Retract Tab, Custom Drill [2 - 8](#)
  - Reverse, DXF [3 - 3](#)
  - Ring Gauge [8 - 13](#)
  - Rotary Axis machining [6 - 3](#)
  - Rotary Centerline [6 - 8](#)
  - Rotary Circle softkey [6 - 12](#)
  - Rotary Circle, BC configuration [6 - 28](#)
  - Rotary Frame softkey [6 - 12](#)
  - Rotary Lines and Arcs softkey [6 - 12](#)
  - Rotary Locations, AC configuration [6 - 22](#)
  - Rotary Locations, Rotary A and Rotary A Tilt B configurations [6 - 12](#)
  - Rotary Loop field, Rotary A and Rotary A Tilt B configurations [6 - 12](#)
  - Rotary Loop, AC configuration [6 - 21](#)
  - Rotary Loop, BC configuration [6 - 24, 6 - 29](#)
  - Rotary Mill Frame program example, WinMax Mill [6 - 43](#)
  - Rotary Milling field [6 - 10](#)
  - Rotary Orientation field [6 - 40](#)
  - Rotary Parameters field [6 - 10](#)
  - Rotary Parameters, AC configuration [6 - 23](#)
  - Rotary Part Setup [6 - 8](#)
  - Rotary Pattern End, AC configuration [6 - 23](#)
  - Rotary Pattern Loop program example, WinMax Mill [6 - 46](#)
  - Rotary Patterns field [6 - 10](#)
  - Rotary Patterns, BC configuration [6 - 24, 6 - 29](#)
  - Rotary Position
    - Tool, rotary-axis program, WinMax Mill [6 - 12](#)
  - Rotary Position field [6 - 10](#)
  - Rotary Safety Move field [6 - 11](#)
  - Rotary Transform Plane, AC configuration [6 - 23](#)
  - Rotary True Type Font [6 - 12](#)
  - Rotary, overview [6 - 2](#)
  - rotary-axis hardware [6 - 2](#)
  - rotary-axis table [6 - 3](#)
  - Roughing and Finishing
    - Passes [1 - 17](#)
    - Tools [1 - 13](#)
- S**
- sample screens - *xi*
  - screens
    - Part Setup, rotary-axis program, WinMax Mill [6 - 8](#)
    - Transform Plane End, rotary-axis program, WinMax Mill [6 - 5](#)
  - Transform Plane, rotary-axis program, WinMax Mill [6 - 5](#)
  - Segment field
    - 3D Mold Arc [1 - 11](#)
    - 3D Mold Blend Arc [1 - 12](#)
    - 3D Mold Contour [1 - 9](#)
    - 3D Mold Line [1 - 10](#)
  - Select Holes by Diameter, DXF [3 - 5](#)
  - Select Layer [3 - 9](#)
  - Select Tool Probe Cycle softkey [8 - 15](#)
  - Serial Number block [4 - 1](#)
  - Serial Port Settings [14 - 3](#)
  - setting axis configuration [6 - 4](#)
  - Setup Fast Feed parameter, Tool Probe Setup Parameters [8 - 3](#)
  - Shape field
    - Mill Slot Start tab [9 - 2](#)
  - Side Clearance field, Tool Setup Probing [8 - 16](#)
  - Side Length field
    - Mill Polygon block [7 - 2](#)
  - Side Length, Mill Polygon [7 - 2](#)
  - single hole program example, WinMax Mill [6 - 45](#)
  - Single Point and Plane Intersection Inspection cycle, Probing [8 - 27](#)
  - Single Point Inspection, Probing [8 - 27](#)
  - Sister Tool field
    - Tool Monitoring screen [8 - 29](#)
    - Tool Setup Probing [8 - 16](#)
  - Sizing Diameter field
    - Mill Polygon block [7 - 2](#)
  - Sizing Method field
    - Mill Polygon block [7 - 2](#)
  - Skew Cycle field, Probe Part Setup [8 - 18](#)
  - Skew cycles [8 - 21](#)
  - Skew Start X/Y/Z field, Probe Part Setup [8 - 18](#)
  - Slot Milling Data Block [9 - 1](#)
  - Slow Feed field, Tool Setup Probing [8 - 16](#)
  - Speed (RPM) field
    - 3D Mold Parameters [1 - 8](#)
    - Tool Monitoring screen [8 - 29](#)
  - Speed field
    - Custom Drill Break Out tab [2 - 4](#)
    - Custom Drill Entry Tab [2 - 3](#)
    - Custom Drill Out tab [2 - 7](#)
    - Custom Drill Re-entry tab [2 - 6](#)
    - Custom Drill Retract tab [2 - 8](#)
    - Custom Tool Bottom tab [2 - 5](#)
  - Spindle RPM field, Tool Setup Probing [8 - 16](#)
  - Spindle Usage field

- Tool Monitoring screen [8 - 29](#)
- Tool Setup Probing [8 - 16](#)
- Split softkey, DXF [3 - 8](#)
- Start Angle 1, 2, 3 field
  - Cylinder Cycle [8 - 41](#)
  - Hole or Circle Pocket Probing Cycle [8 - 39](#)
  - Probe Part Setup [8 - 17](#)
- Start Angle field
  - 3D Mold Paratmeters [1 - 4](#)
  - Thread Mill block [10 - 3](#)
- Start Angle, DXF [3 - 8](#)
- Start At Center field
  - Thread Mill block [10 - 3](#)
- Start Cap field
  - Mill Slot Caps tab [9 - 4](#)
- Starting Sequence
  - HD3 Serial Number Lettering Text tab [4 - 2](#)
- status, program [- xii](#)
- Step Size field
  - 3D Mold Paratmeters [1 - 7](#)
- Stock Allowance field
  - 3D Mold Paratmeters [1 - 8](#)
- Stop field [6 - 11](#)
- Store Calculated Value softkey [1 - 10, 1 - 11](#)
- Store Machine Position softkey
  - Part Setup screen [8 - 5](#)
  - Probing [8 - 2](#)
- Stylus Diameter, Part Probing Parameters [8 - 5](#)
- Stylus Width parameter, Tool Probe Setup Parameters [8 - 3](#)
- Sweep Angle
  - 3D mold Arc block [1 - 11](#)
  - Rotary AC [6 - 20](#)
  - Rotary BC [6 - 28](#)
  - Universal Rotary [6 - 34](#)
- Sweep Angle field [6 - 15](#)
  - Mill Slot Geometry tab [9 - 3](#)
- Sweep Angle, DXF [3 - 8](#)
- T**
- Thread Dir field
  - Thread Mill block [10 - 2](#)
- Thread Mill [10 - 1](#)
- Thread Milling Data Block [10 - 1](#)
- Thread Taper Angle field
  - Thread Mill block [10 - 3](#)
- tilt axis at 45 degrees program example, WinMax Mill [6 - 52](#)
- Tilt Axis machining [6 - 3](#)
- tilt-axis at 90 degrees program example, WinMax Mill [6 - 51](#)
- tilt-axis hardware [6 - 2](#)
- tilt-axis table [6 - 3](#)
- Tool
  - Rotary Position, rotary-axis program, WinMax Mill [6 - 12](#)
- Tool Change Optimization [11 - 1](#)
- Tool Change Optimization Off block [11 - 1, 11 - 3](#)
- Tool Change Optimization On block [11 - 1](#)
- Tool Change Optimization parameter [11 - 1](#)
- Tool Diameter field
  - 3D Mold Paratmeters [1 - 8](#)
- Tool field
  - 3D Mold Paratmeters [1 - 2](#)
  - Custom Drill Tool Tab [2 - 1](#)
  - Probe Part Setup [8 - 17](#)
  - Tool Monitoring screen [8 - 29](#)
- Tool Fixture (TPS) Option [12 - 1](#)
- Tool Probe Calibration [8 - 6](#)
- Tool Probe Deflection Offset [8 - 11](#)
  - Calibration [8 - 11](#)
  - softkey, Probing [8 - 2](#)
- Tool Probe Setup Parameters [8 - 2](#)
  - softkey [8 - 15](#)
- Tool Removal [12 - 3](#)
- Tool Setup
  - Probing Fields [8 - 16](#)
  - Probing Softkeys [8 - 15](#)
- Tool Tab, Custom Drill [2 - 1](#)
- Tool Type field
  - 3D Mold Paratmeters [1 - 8](#)
- Tool Wear Detection Data Block [8 - 32](#)
- Touch Tool and Part Probe Calibration [8 - 8](#)
- Touch Tool Probe Calibration [8 - 7](#)
- TPI field
  - Thread Mill block [10 - 2](#)
- Transform Plane [6 - 5](#)
  - orientation, rotary-axis program, WinMax Mill [6 - 5](#)
  - part zero location, rotary-axis program, WinMax Mill [6 - 5](#)
- Transform Plane End, Rotary A and Rotary A Tilt B configurations [6 - 12](#)
- Transform Plane program example, WinMax Mill [6 - 47](#)
- Transform Plane Reference Points [6 - 6](#)
- Transform Plane, Rotary A and Rotary A Tilt B configurations [6 - 12](#)
- Transform Part Zero field [6 - 11](#)
- travel limits, Probing [8 - 2](#)
- Trim softkey, DXF [3 - 8](#)



True-Type Fonts [6 - 36](#)  
Type field  
    3D Mold Parameters [1 - 2](#)  
Type parameter, Tool Probe Setup [8 - 3](#)

## U

UltiMotion [13 - 1](#)  
UltiNet [14 - 1](#)  
UltiNet FTP Client [14 - 2](#)  
UltiNet FTP Server [14 - 2](#)  
UltiPockets Option [15 - 1](#)  
units of measure [- xii](#)  
Use Hole Location Method softkey [3 - 3](#)  
Use Hole Pattern Method softkey [3 - 3](#)  
Use Offset Z field [6 - 6](#), [6 - 11](#)  
User Name field [14 - 3](#)  
using this manual [- xi](#)

## W

Width field  
    Mill Slot Start tab [9 - 2](#)  
Window Select softkey [3 - 3](#), [3 - 4](#)

## X

X Center field [6 - 15](#), [6 - 16](#)  
    3D Mold Arc [1 - 11](#)  
    3D Mold Blend Arc [1 - 12](#)  
    Mill Polygon block [7 - 1](#)  
    Mill Slot Geometry tab [9 - 3](#)  
    Thread Mill block [10 - 2](#)  
X Corner field [6 - 16](#)  
X Distance field [6 - 17](#), [6 - 22](#)  
X End field [6 - 14](#), [6 - 15](#)  
    3D Mold Arc [1 - 11](#)  
    3D Mold Blend Arc [1 - 12](#)  
    3D Mold Line [1 - 10](#)  
    Mill Slot Geometry tab [9 - 3](#)  
    Mill Slot Geometry tab [9 - 3](#)  
X Length field [6 - 16](#)  
X Min, X Max, Part Probing Parameters [8 - 5](#)  
X Position field [6 - 11](#)  
X Ref Location  
    HD3 Serial Number Lettering  
        Orientation tab [4 - 3](#)  
X Reference  
    HD3 Serial Number Lettering Text tab  
        [4 - 2](#)  
X Safety Position field [6 - 11](#)  
X Start [6 - 14](#)  
X Start field [6 - 14](#), [6 - 15](#)  
    3D Mold Arc [1 - 11](#)

    3D Mold Blend Arc [1 - 12](#)  
    3D Mold Contour [1 - 9](#)  
    3D Mold Line [1 - 10](#)  
    Mill Slot Start tab [9 - 2](#)  
X Start X/Y/Z field, Probe Part Setup [8 - 18](#)  
X Value, DXF [3 - 8](#)  
X/Y Skew (deg.) [8 - 19](#)  
XY Angle field  
    3D Mold Line [1 - 10](#)  
XY Angle, DXF [3 - 8](#)  
XY Length field  
    3D Mold Line [1 - 10](#)  
XY Start X/Y/Z field, Probe Part Setup [8 - 18](#)  
XZ Angle field, 3D Mold Line [1 - 10](#)  
XZ Length field, 3D Mold Line [1 - 10](#)  
XZ Revolved about Z [1 - 2](#)  
XZ Translated in Y [1 - 2](#)

## Y

Y Center field [6 - 20](#), [6 - 21](#)  
    3D Mold Arc [1 - 11](#)  
    3D Mold Blend Arc [1 - 12](#)  
    Mill Polygon block [7 - 1](#)  
    Mill Slot Geometry tab [9 - 3](#)  
    Thread Mill block [10 - 2](#)  
Y Corner field [6 - 21](#)  
Y End Field [6 - 19](#)  
Y End field [6 - 20](#)  
    3D Mold Arc [1 - 11](#)  
    3D Mold Blend Arc [1 - 12](#)  
    3D Mold Line [1 - 10](#)  
    3D Mold Parameters [1 - 5](#)  
    Mill Slot Geometry tab [9 - 3](#)  
Y End, Arc Segement, AC configuration [6 - 20](#)  
Y Length field [6 - 21](#)  
Y Min, Y Max, Part Probing Parameters [8 - 5](#)  
Y Off of Centerline field [6 - 13](#)  
Y Position field [6 - 11](#)  
Y Ref Location  
    HD3 Serial Number Lettering  
        Orientation tab [4 - 3](#)  
Y Reference  
    HD3 Serial Number Lettering Text tab  
        [4 - 2](#)  
Y Revolved about X [1 - 2](#)  
Y Safety Position field [6 - 11](#)  
Y Start field [6 - 19](#), [6 - 20](#)  
    3D Mold Arc [1 - 11](#)  
    3D Mold Blend Arc [1 - 12](#)  
    3D Mold Contour [1 - 9](#)  
    3D Mold Line [1 - 10](#)

- 3D Mold Parameters [1 - 5](#)
- Mill Slot Start tab [9 - 2](#)
- Y Start X/Y/Z field, Probe Part Setup [8 - 18](#)
- Y Value, DXF [3 - 8](#)
- Z**
- Z Bottom
  - HD3 Serial Number Lettering Text tab [4 - 2](#)
- Z Bottom field [6 - 14, 6 - 16, 6 - 19, 6 - 21](#)
  - Custom Tool Bottom tab [2 - 5](#)
  - Mill Polygon block [7 - 3](#)
  - Mill Slot Start tab [9 - 2](#)
- Z Break Out field
  - Custom Drill Break Out tab [2 - 4](#)
- Z Center field [6 - 28](#)
  - 3D Mold Arc [1 - 11](#)
  - 3D Mold Blend Arc [1 - 12](#)
- Z Center field, Arc segment, BC configuration [6 - 28](#)
- Z Corner field [6 - 29](#)
- Z Depth field
  - Cylinder Cycle [8 - 41](#)
  - Probe Part Setup [8 - 17, 8 - 18](#)
  - Rectangular Solid Outside Cycle [8 - 45](#)
- Z Distance field [6 - 24, 6 - 30](#)
- Z Drop Down Depth field, Tool Setup Probing [8 - 16](#)
- Z End field [6 - 14, 6 - 15, 6 - 19, 6 - 27, 6 - 28](#)
  - 3D Mold Arc [1 - 11](#)
  - 3D Mold Blend Arc [1 - 12](#)
  - 3D Mold Line [1 - 10](#)
- Z End field, Arc segment, BC configuration [6 - 27](#)
- Z End, Arc Segment, AC configuration [6 - 20](#)
- Z Home [6 - 12](#)
- Z Home field [6 - 32](#)
- Z Length field [6 - 29](#)
- Z location, Probing [8 - 6](#)
- Z Min, Part Probing Parameters [8 - 5](#)
- Z Move Type field [6 - 12](#)
- Z Out field
  - Custom Drill Out tab [2 - 7](#)
- Z Plunge Start field
  - Thread Mill block [10 - 2](#)
- Z Re-entry field
  - Custom Drill Re-entry tab [2 - 6](#)
- Z Retract field
  - Custom Drill Retract tab [2 - 8](#)
- Z Safety [6 - 12](#)
- Z Start
  - HD3 Serial Number Lettering Text tab [4 - 2](#)
  - Z Start field [6 - 14, 6 - 15, 6 - 16, 6 - 19, 6 - 20, 6 - 21, 6 - 27, 6 - 28](#)
  - 3D Mold Arc [1 - 11](#)
  - 3D Mold Blend Arc [1 - 12](#)
  - 3D Mold Contour [1 - 9](#)
  - 3D Mold Line [1 - 10](#)
  - 3D Mold Parameters [1 - 7](#)
  - Custom Drill Entry Tab [2 - 3](#)
  - Mill Polygon block [7 - 3](#)
  - Mill Slot Start tab [9 - 2](#)
  - Z Start X/Y/Z field, Probe Part Setup [8 - 18](#)
  - Z Thread End field
    - Thread Mill block [10 - 3](#)
  - Z Thread Start field
    - Thread Mill block [10 - 2](#)
  - Z Top field
    - Custom Drill Entry Tab [2 - 3](#)
  - Zero Angle Vector [6 - 40](#)
  - Zero Cal Tolerance field, Tool Monitoring screen [8 - 29](#)
  - Zero Radius [1 - 3](#)
  - Zoom Out softkey
    - DXF [3 - 5](#)
  - Zoom Window softkey, DXF [3 - 5](#)
  - Zoom Window, DXF [3 - 3](#)